

# REPAIR PARTS BOOK

## RIDING MOWER 14/40 (101cm)

### REPLACEMENT PART ORDERING INFORMATION

Use only manufacturer's authorized or approved replacement parts. The letter placed on the end of the part number denotes the type of finish for the part, C for chrome, Z for zinc, a PA for purchased assembly. It is important that you include this when ordering a part. Do not use attachments or accessories not specifically recommended for this unit. In order to obtain proper replacement parts, you must supply the model number of your mower (see nameplate).

Replacement parts, except for the engine, transmission, transaxle or differential, are available from the store where the unit was purchased or a service shop recommended by the store.

If you cannot obtain parts or service, then contact: Murray Export Sales B.V., Baarerstrasse 75, 6300 Zug, Switzerland. Collect telephone calls will not be accepted.

Replacement parts for the engine, transaxle, or transmission, are available from the manufacturer's authorized service center found in the telephone directory. Also, see the individual engine or transmission warranties to order replacement parts.


When ordering the following information is required:

- (1) The Model Number; (2) Date of Manufacture; (3) Part Number;
- (4) Description; (5) Quantity.

MODEL NO. 40627x20A  
40627x70A

REPAIR PARTS  
CHASSIS & HOOD

D-5745

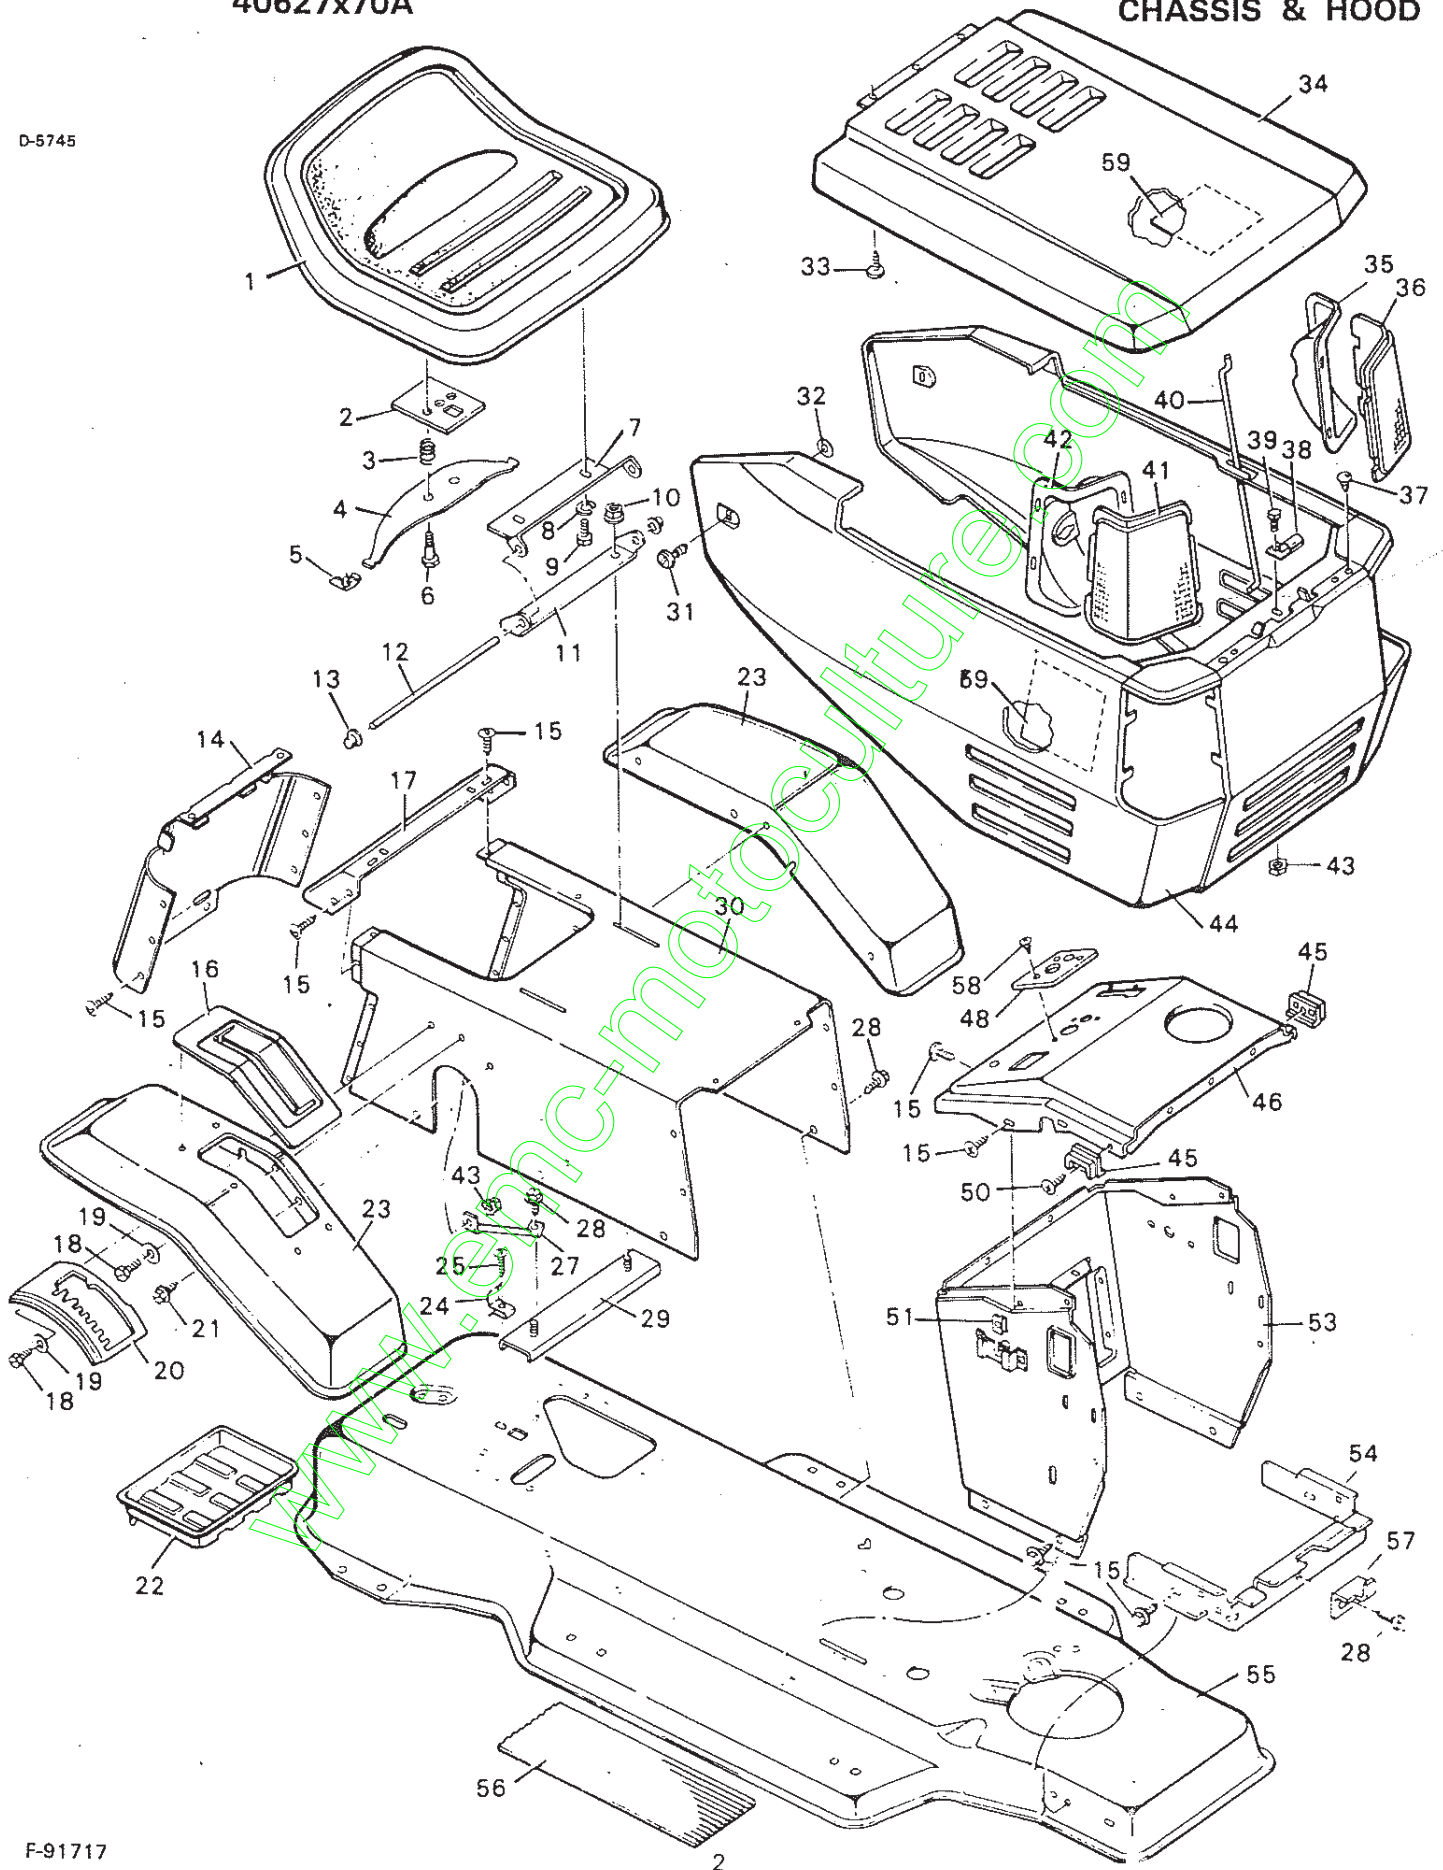

F-91717

**MODEL NO. 40627x20A  
40627x70A**


**REPAIR PARTS  
CHASSIS & HOOD**

| KEY<br>NO. | DESCRIPTION                     | PART<br>NO. | KEY<br>NO. | DESCRIPTION                       | PART<br>NO. |
|------------|---------------------------------|-------------|------------|-----------------------------------|-------------|
| 1          | Seat                            | 91965       | 29         | Channel Assembly                  | 91857E700   |
| 2          | Plate Assembly, Switch          | 91963Z      | 30         | Console (Model 40627x20A)         | 91880F200   |
| 3          | Spring, Compression             | 164x25      |            | Console (Model 40627x70A)         | 91880E245   |
| 4          | Spring, Seat                    | 91964       | 31         | Screw                             | 91330       |
| 5          | Glide, Spring                   | 91822       | 32         | Retainer                          | 90815       |
| 6          | Bolt, Shoulder                  | 9x38        | 33         | Screw                             | 26x215      |
| 7          | Support, Seat                   | 91728E700   | 34         | Hood Assembly (Model 40627x20A)   | 92123SF200  |
| 8          | Lockwasher                      | 18x16       |            | Hood Assembly (Model 40627x70A)   | 92123SE245  |
| 9          | Bolt, Hex                       | 1x45        | 35         | Reflector, Left Headlamp          | 92021Z      |
| 10         | Locknut, Flange                 | 15x88       | 36         | Lens, Left Headlight              | 91319       |
| 11         | Bracket, Pivot                  | 91729E700   | 37         | Bumper                            | 91323       |
| 12         | Rod, Pivot                      | 91730E700   | 38         | Spring, Hood Latch                | 91322       |
| 13         | Cap, Push On                    | 28x23       | 39         | Bolt                              | 6x91        |
| 14         | Cap, Console (Model 40627x20A)  | 91704F200   | 40         | Rod, Hood Stop                    | 91370Z      |
|            | Cap, Console (Model 40627x70A)  | 91704E245   | 41         | Lens, Right Headlight             | 91318       |
| 15         | Screw, Tap                      | 26x250      | 42         | Reflector, Right Headlamp         | 92149Z      |
| 16         | Cover, Shift                    | 91905       | 43         | Locknut                           | 15x66       |
| 17         | Fender, Apron (Model 40627x20A) | 91724F200   | 44         | Grille Assembly (Model 40627x20A) | 92125F200   |
|            | Fender, Apron (Model 40627x70A) | 91724E245   |            | Grille Assembly (Model 40627x70A) | 92125E245   |
| 18         | Bolt, Hex                       | 1x38        | 45         | Spacer                            | 91599       |
| 19         | Washer                          | 17x38Z      | 46         | Dash Panel Assembly               | 92235E700   |
| 20         | Gate, Shift                     | 91892Z      | 48         | Bearing, Steering                 | 91821       |
| 21         | Screw                           | 26x214      | 50         | Screw                             | 26x201      |
| 22         | Tray, Battery                   | 91895       | 51         | Receptacle                        | 28x52       |
| 23         | Fender, Left (Model 40627x20A)  | 91715F200   | 53         | Console, Front                    | 402066      |
|            | Fender, Left (Model 40627x70A)  | 91715E245   | 54         | Support, Grille (Model 40627x20A) | 91918F200   |
|            | Fender, Right (Model 40627x20A) | 91894F200   |            | Support, Grille (Model 40627x70A) | 91918E245   |
|            | Fender, Right (Model 40627x70A) | 91894E245   | 55         | Frame                             | 91700E700   |
| 24         | Clip, Battery                   | 91941       | 56         | Mat                               | 91901       |
| 25         | Screw                           | 26x184      | 57         | Clip, Locator                     | 92009       |
| 27         | Strut, Console                  | 91910E700   | 58         | Screw                             | 26x238      |
| 28         | Screw                           | 26x249      | 59         | Tape, Reflective                  | 92173       |

MODEL NO. 40627x20A  
40627x70A

REPAIR PARTS  
MOTION DRIVE

0-5701

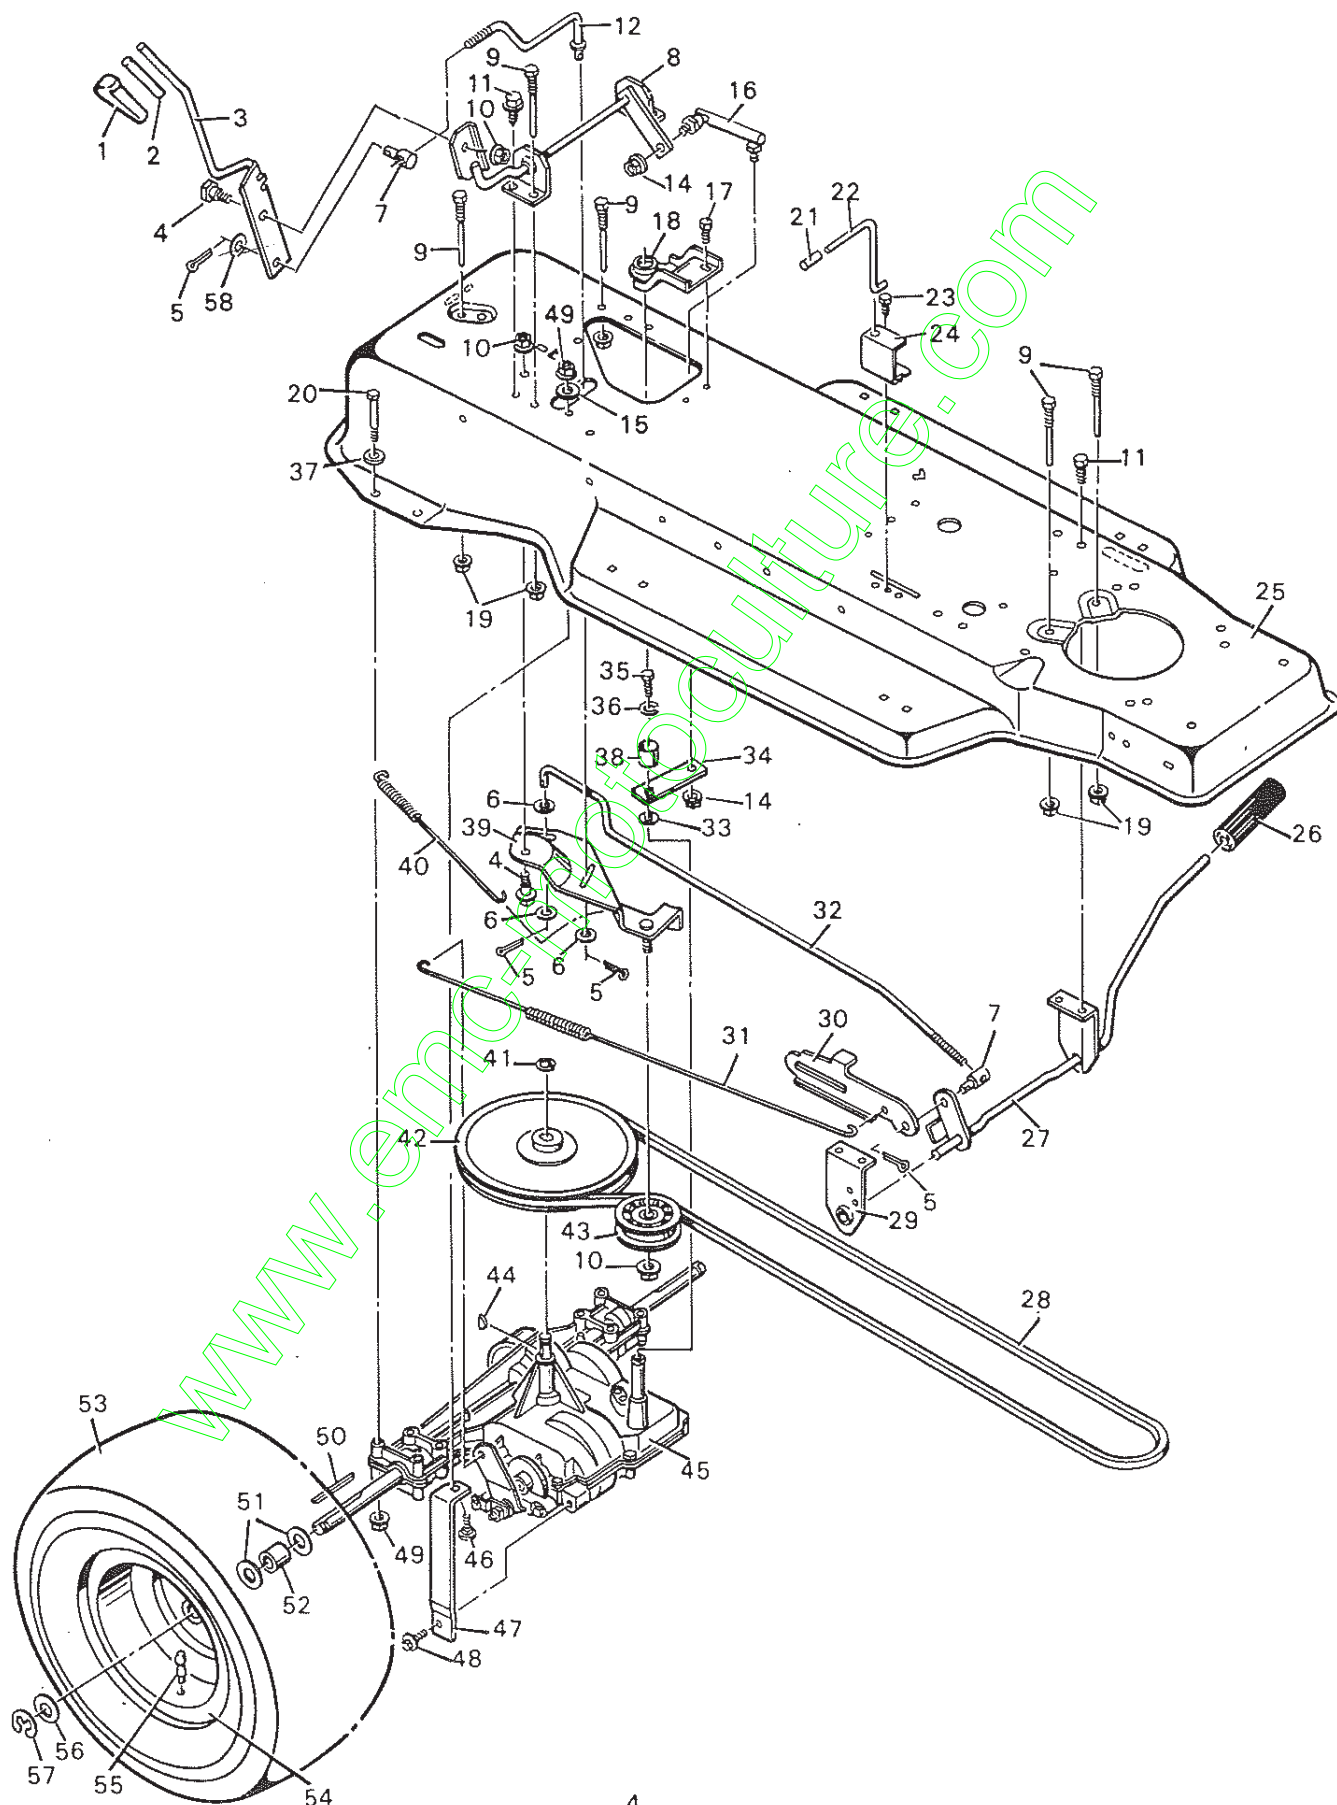

**MODEL NO. 40627x20A  
40627x70A**

**REPAIR PARTS  
MOTION DRIVE**

| KEY<br>NO. | DESCRIPTION            | PART<br>NO. | KEY<br>NO. | DESCRIPTION                    | PART<br>NO. |
|------------|------------------------|-------------|------------|--------------------------------|-------------|
| 1          | Grip                   | 55449       | 31         | Spring, Brake Extension        | 165x82      |
| 2          | Grip, Inner            | 20476       | 32         | Rod, Clutch                    | 91808Z      |
| 3          | Handle, Shift          | 92031Z      | 33         | Washer                         | 17x148      |
| 4          | Bolt, Shoulder         | 9x39        | 34         | Yoke, Shift                    | 92041Z      |
| 5          | Pin, Cotter            | 30x20       | 35         | Bolt, Hex                      | 1x82        |
| 6          | Washer                 | 17x47Z      | 36         | Lockwasher                     | 18x32       |
| 7          | Nut, Adjustable        | 21920       | 37         | Washer                         | 17x146Z     |
| 8          | Shifter Assembly       | 92044E700   | 38         | Pilot, Support                 | 91889       |
| 9          | Guide, Belt            | 91754Z      | 39         | Bracket Assembly, Idler        | 92029Z      |
| 10         | Locknut, Flange        | 15x84       | 40         | Spring, Motion Drive Extension | 165x76      |
| 11         | Screw                  | 26x249      | 41         | Ring, Retainer                 | 11x7        |
| 12         | Link, Clutch           | 91877       | 42         | Pulley, Motion Drive           | 91807       |
| 14         | Locknut, Flange        | 15x87       | 43         | Pulley, Backside Idler         | 91179       |
| 15         | Washer                 | 17x45       | 44         | Key, Woodruff #6               | 20697       |
| 16         | Shifter Link Assembly  | 92085       | 45         | Transaxle, Peerless **         | —           |
| 17         | Screw                  | 26x249      | 46         | Bolt, Carriage                 | 2x64        |
| 18         | Bracket, Support       | 91899Z      | 47         | Support, Transaxle             | 91804E700   |
| 19         | Nut, Flange            | 15x79Z      | 48         | Screw                          | 26x216      |
| 20         | Bolt, Hex              | 1x124       | 49         | Locknut, Flange                | 15x88       |
| 21         | Grip                   | 91079       | 50         | Key, Square                    | 21553       |
| 22         | Rod, Control           | 91727E700   | 51         | Washer                         | 17x160      |
| 23         | Screw                  | 26x214      | 52         | Spacer, Transaxle              | 91757Z      |
| 24         | Guide, Bracket         | 91825E700   | 53         | Tire *                         | 91914       |
| 25         | Frame                  | 91700E700   | —          | Tube                           | 407049      |
| 26         | Clutch and Brake Pedal | 21544       | —          | Hub Cap (Not Shown)            | 21662       |
| 27         | Lever Assembly         | 91862E700   | 54         | Wheel & Tire Assembly          | 91915-601   |
| 28         | Belt, Motion Drive     | 37x61       | 55         | Stem, Valve                    | 24373       |
| 29         | Bracket, Support       | 91713E700   | 56         | Washer                         | 17x115      |
| 30         | Latch, Park Brake      | 91712Z      | 57         | E-Ring                         | 11x3        |
|            |                        |             | 58         | Washer                         | 17x53Z      |


\* When you order a tire, make sure to give the brand name of the tire so that the tread pattern on the tire will match.

\*\* Replacement parts for the transaxle are available from a Tecumseh Authorized Service Center. See "Engines, Gasoline" or "Gasoline Engines" listed in the yellow pages of the telephone directory.

MODEL NO. 40627x20A  
40627x70A

REPAIR PARTS  
STEERING

D-5699-3

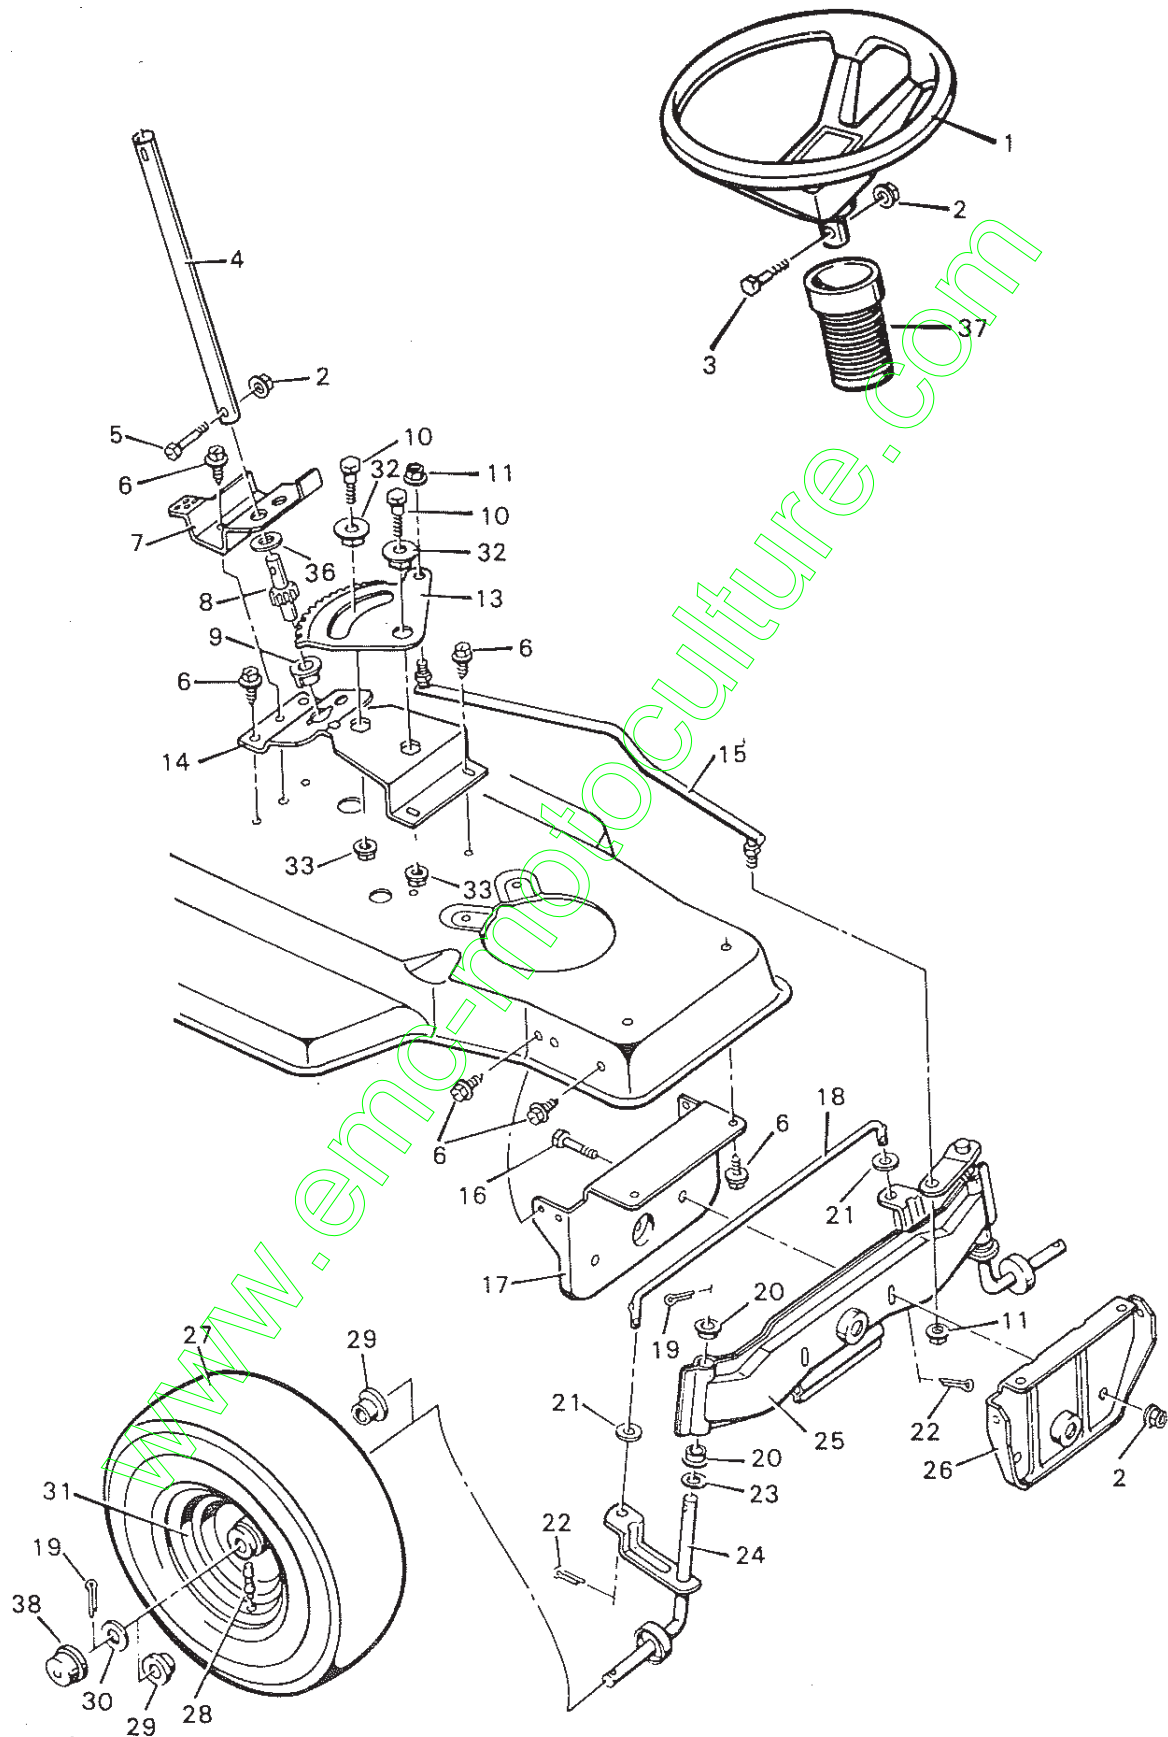

MODEL NO. 40627x20A  
40627x70A

REPAIR PARTS  
STEERING

| KEY<br>NO. | DESCRIPTION                         | PART<br>NO. |
|------------|-------------------------------------|-------------|
| 1          | Wheel, Steering                     | 92078       |
| 2          | Nut, Hex                            | 15x90Z      |
| 3          | Bolt, Hex                           | 1x66        |
| 4          | Post, Steering                      | 91860Z      |
| 5          | Bolt, Hex                           | 1x74        |
| 6          | Screw                               | 26x249      |
| 7          | Bracket, Sector **                  | 91716E700   |
| 8          | Gear, Pinion                        | 402075      |
| 9          | Bearing **                          | 91756       |
| 10         | Bolt, Hex **                        | 1x84        |
| 11         | Locknut, Flange                     | 15x87       |
| 13         | Gear, Sector                        | 402075      |
| 14         | Bracket, Sector **                  | 91708E700   |
| 15         | Link, Drag                          | 91749E700   |
| 16         | Bolt, Hex                           | 1x138       |
| 17         | Support -Rear, Axle                 | 91702E700   |
| 18         | Rod, Tie                            | 90038E700   |
| 19         | Pin, Cotter                         | 30x49       |
| 20         | Bearing                             | 90035       |
| 21         | Washer                              | 17x57       |
| 22         | Pin, Cotter                         | 30x20       |
| 23         | Washer                              | 17x113      |
| 24         | Spindle Assembly, Right             | 91828E700   |
| 25         | Spindle Assembly, Axle & Left       | 91827E700   |
| 26         | Support, Front Axle                 | 91701E700   |
| 27         | Tire (Incl'd with Key 31) *         | 91912       |
| —          | Tube (Incl'd with Key 31)           | 407047      |
| 28         | Stem, Valve (Incl'd with Key 31)    | 24373       |
| 29         | Bearing, Wheel (Incl'd with Key 31) | 91334       |
| 30         | Washer                              | 17x115      |
| 31         | Wheel & Tire Assembly               | 91913-601   |
| 32         | Bearing **                          | 92097       |
| 33         | Locknut, Flange **                  | 15x113      |
| 36         | Washer **                           | 17x83       |
| 37         | Bellows, Steering Post              | 92059       |
| 38         | Hub Cap                             | 21662       |


\*When you order a tire, make sure to give the brand name of the tire so that the tread pattern on the tire will match.

\*\* These parts are included when you order part number 402075 (key number 8 or 13).

MODEL NO. 40627x20A  
40627x70A

# REPAIR PARTS MOWER SUSPENSION

0-5698

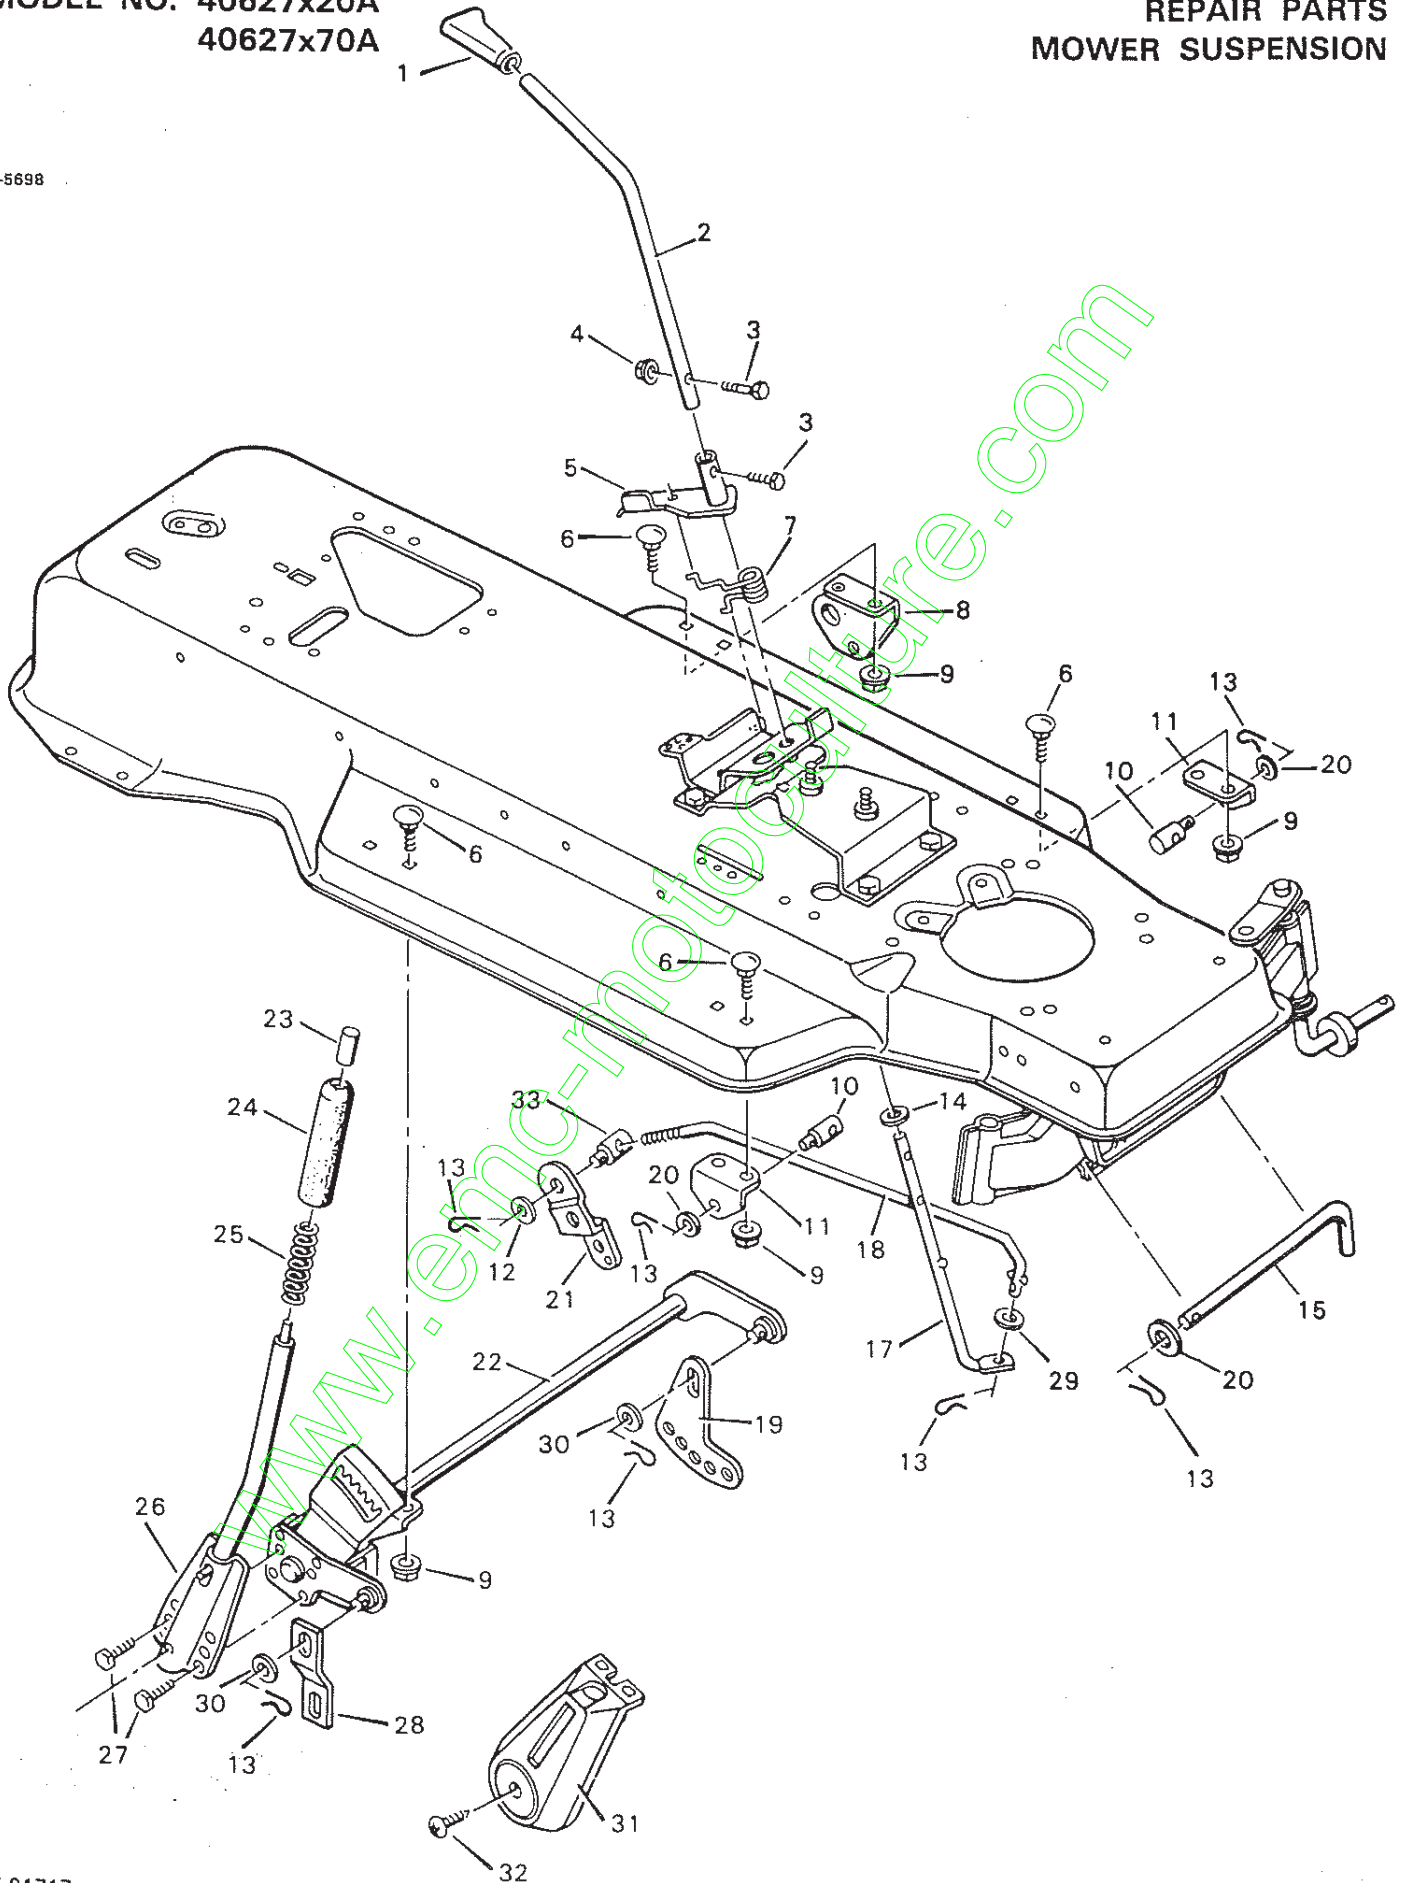

MODEL NO. 40627x20A  
40627x70A


REPAIR PARTS  
MOWER SUSPENSION

| KEY<br>NO. | DESCRIPTION                  | PART<br>NO. |
|------------|------------------------------|-------------|
| 1          | Grip                         | 55449       |
| 2          | Lever, Blade Control         | 91781Z      |
| 3          | Bolt, Hex                    | 25x3        |
| 4          | Locknut, Hex                 | 15x67       |
| 5          | Lever Assembly, Switch       | 91917E700   |
| 6          | Bolt, Carriage               | 2x53        |
| 7          | Spring, Torsion              | 166x32      |
| 8          | Bracket, Left Rear Hanger    | 92066E700   |
| 9          | Nut, Flange                  | 15x79       |
| 10         | Nut, Adjusting               | 92131       |
| 11         | Bracket, Adjuster Rod        | 92133E700   |
| 12         | Washer                       | 17x124      |
| 13         | Pin, Hair                    | 31x4        |
| 14         | Washer                       | 17x67       |
| 15         | Pin, Pull                    | 90827Z      |
| 17         | Lever, Lower Blade Control   | 91787E700   |
| 18         | Rod, Blade Control           | 91795Z      |
| 19         | Plate, Adjuster              | 91741E700   |
| 20         | Washer                       | 17x103      |
| 21         | Bracket, Pivot               | 92033E700   |
| 22         | Lifter Assembly              | 92065E700   |
| 23         | Knob, Steel                  | 91261       |
| 24         | Grip                         | 91398       |
| 25         | Spring, Compression          | 164x21      |
| 26         | Handle Assembly              | 91823E700   |
| 27         | Screw                        | 26x49       |
| 28         | Link, Suspension             | 92064E700   |
| 29         | Washer                       | 17x47Z      |
| 30         | Washer                       | 17x91Z      |
| 31         | Cover, Lift Lever (Optional) | 92157       |
| 32         | Screw                        | 26x238      |
| 33         | Nut, Adjusting               | 21920       |

MODEL NO. 40627x20A  
40627x70A

# REPAIR PARTS MOWER HOUSING

D-5697

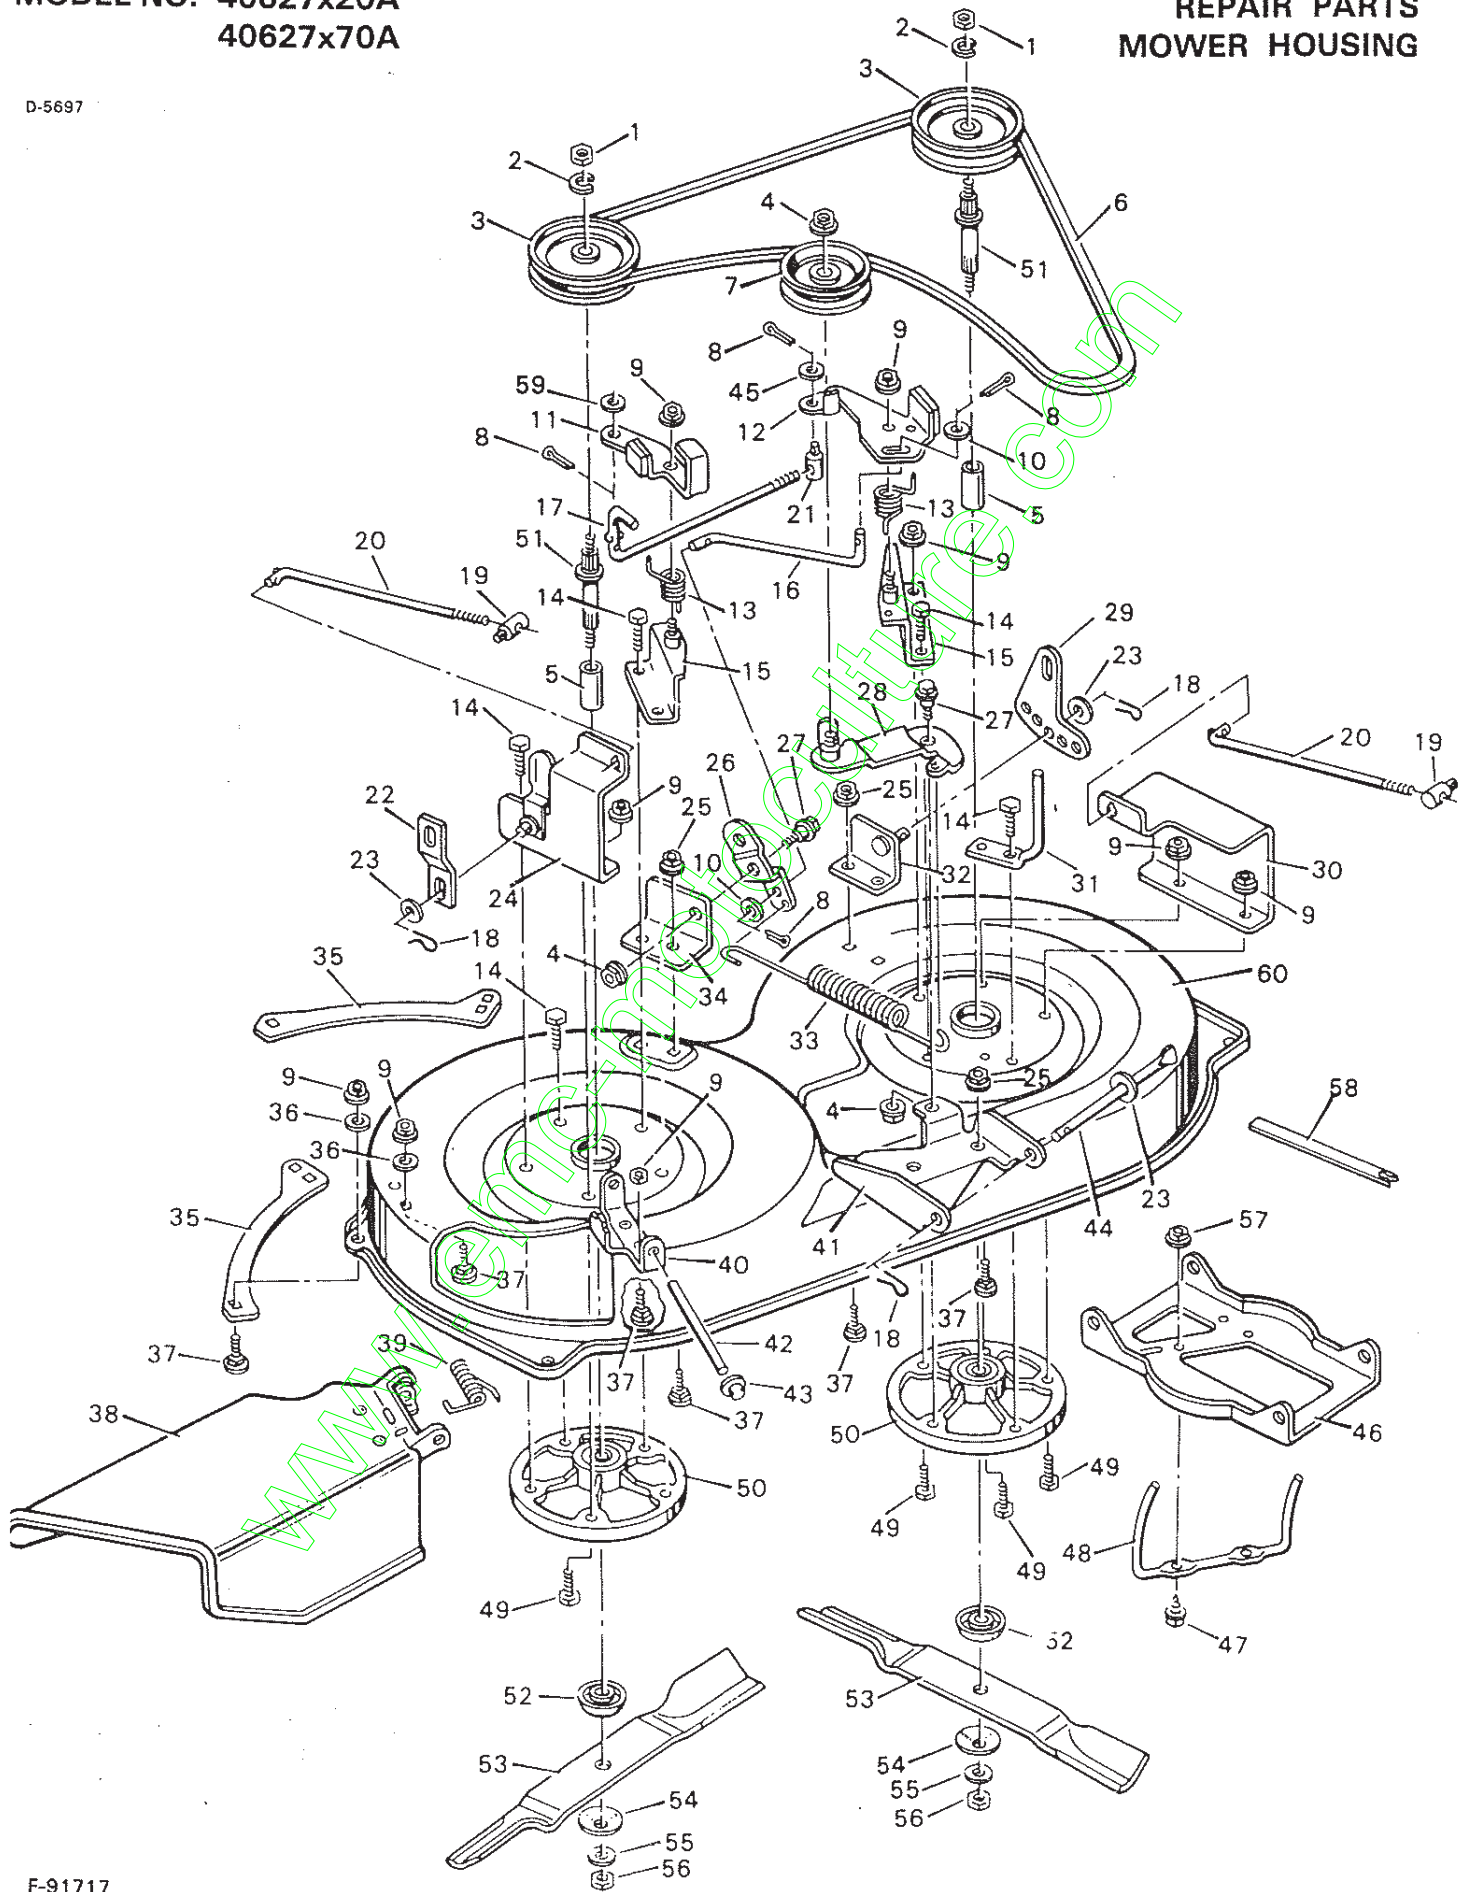

F-91717

**MODEL NO. 40627x20A  
40627x70A**

**REPAIR PARTS  
MOWER HOUSING**

| KEY NO. | DESCRIPTION                    | PART NO.  | KEY NO. | DESCRIPTION                     | PART NO.  |
|---------|--------------------------------|-----------|---------|---------------------------------|-----------|
| 1       | Nut, Hex                       | 15x101    | 31      | Guide, Belt                     | 91797E700 |
| 2       | Lockwasher                     | 18x33     | 32      | Bracket Assembly, Left Lifter   | 91813E700 |
| 3       | Pulley, Jackshaft              | 91943     | 33      | Spring, Extension               | 165x72    |
| 4       | Locknut, Flange                | 15x84     | 34      | Bracket, Pivot                  | 91743E700 |
| 5       | Spacer                         | 91903     | 35      | Plate                           | 91770E700 |
| 6       | Belt, Blade Drive              | 37x62     | 36      | Washer                          | 17x57     |
| 7       | Pulley, Idler                  | 91801     | 37      | Bolt, Carriage                  | 2x53      |
| 8       | Pin, Cotter                    | 30x20     | 38      | Deflector Assembly, Chute       | 91982SE   |
| 9       | Locknut, Flange                | 15x88     | 39      | Spring, Torsion                 | 166x4     |
| 10      | Washer                         | 17x46Z    | 40      | Bracket, Hinge                  | 91765E700 |
| 11      | Brake Assembly, Right          | 92186E700 | 41      | Bracket, Front Hanger           | 91875E700 |
| 12      | Brake Assembly, Left           | 92187E700 | 42      | Rod, Deflector                  | 91767Z    |
| 13      | Spring, Torsion                | 166x27    | 43      | Cap, Push On                    | 28x23     |
| 14      | Bolt, Hex                      | 25x6      | 44      | Rod, Hanger                     | 91739Z    |
| 15      | Bracket Assembly, Brake        | 92072E700 | 45      | Washer                          | 17x124    |
| 16      | Rod, Brake                     | 91745Z    | 46      | Hanger, Front                   | 92119E700 |
| 17      | Rod, Cross Link                | 92183Z    | 47      | Screw                           | 25x4      |
| 18      | Pin, Hair                      | 31x4      | 48      | Guide, Belt                     | 92095E700 |
| 19      | Nut, Adjustable                | 92131     | 49      | Bolt, Hex                       | 1x84      |
| 20      | Rod, Adjuster                  | 91872Z    | 50      | Housing, Jackshaft              | 90905     |
| 21      | Nut, Adjustable                | 21920     | 51      | Jackshaft                       | 91922     |
| 22      | Link, Suspension               | 92064E700 | 52      | Adapter, Blade                  | 91926     |
| 23      | Washer                         | 17x103    | 53      | Blade (2 required)              | 92002E701 |
| 24      | Bracket Assembly, Right Lifter | 92194E700 | 54      | Washer, Belleville              | 17x166    |
| 25      | Nut, Flange                    | 15x79     | 55      | Washer                          | 17x165    |
| 26      | Bracket, Pivot                 | 92033E700 | 56      | Nut, Hex                        | 15x100    |
| 27      | Bolt, Carriage                 | 9x39      | 57      | Nut, Hex                        | 15x82     |
| 28      | Arm Assembly, Idler            | 92032E700 | 58      | Indicator, Plastic              | 92163     |
| 29      | Plate, Adjuster                | 91741E700 | 59      | Washer                          | 17x48     |
| 30      | Cover, Pulley                  | 91792E700 | 1-60    | Complete Mower Housing Assembly | 403229    |


D-5752

| KEY<br>NO. | DESCRIPTION                 | PART<br>NO. |
|------------|-----------------------------|-------------|
| 1          | Switch, Seat Sensor         | 91031       |
| 2          | Locknut                     | 15x66       |
| 3          | Bolt, Hex                   | 1x38        |
| 4          | Battery Type U1-9L          | 21075       |
| —          | Acid, Battery (Electrolyte) | 90665       |
| 5          | Cable, Battery Ground       | 24x9        |
| 6          | Screw                       | 26x249      |
| 7          | Cable, Red Battery          | 24x12       |
| 9          | Solenoid                    | 24285       |
| 10         | Nut, Hex                    | 15x105      |
| 11         | Washer, Shakeproof          | 19x40       |
| 12         | Switch, Ignition            | 91846       |
| 13         | Key & Ring, Ignition        | 20729       |
| 14         | Harness, Chassis Wire       | 250x22      |
| —          | Fuse, Replacement           | 54212       |
| —          | Holder, Fuse Replacement    | 407078      |
| 15         | Switch, PTO                 | 91299       |
| 16         | Screw                       | 26x233      |
| 17         | Switch, Clutch              | 24273       |
| 18         | Socket, Light               | 91890       |
| 19         | Bulb, Light                 | 91954       |
| 20         | Harness, Light Wire         | 250x34      |
| 21         | Ammeter                     | 90729       |
| 22         | Wire, Jumper                | 250x35      |

**MODEL NO. 40627x20A  
40627x70A**

**REPAIR PARTS  
ENGINE MOUNT**

D-5740

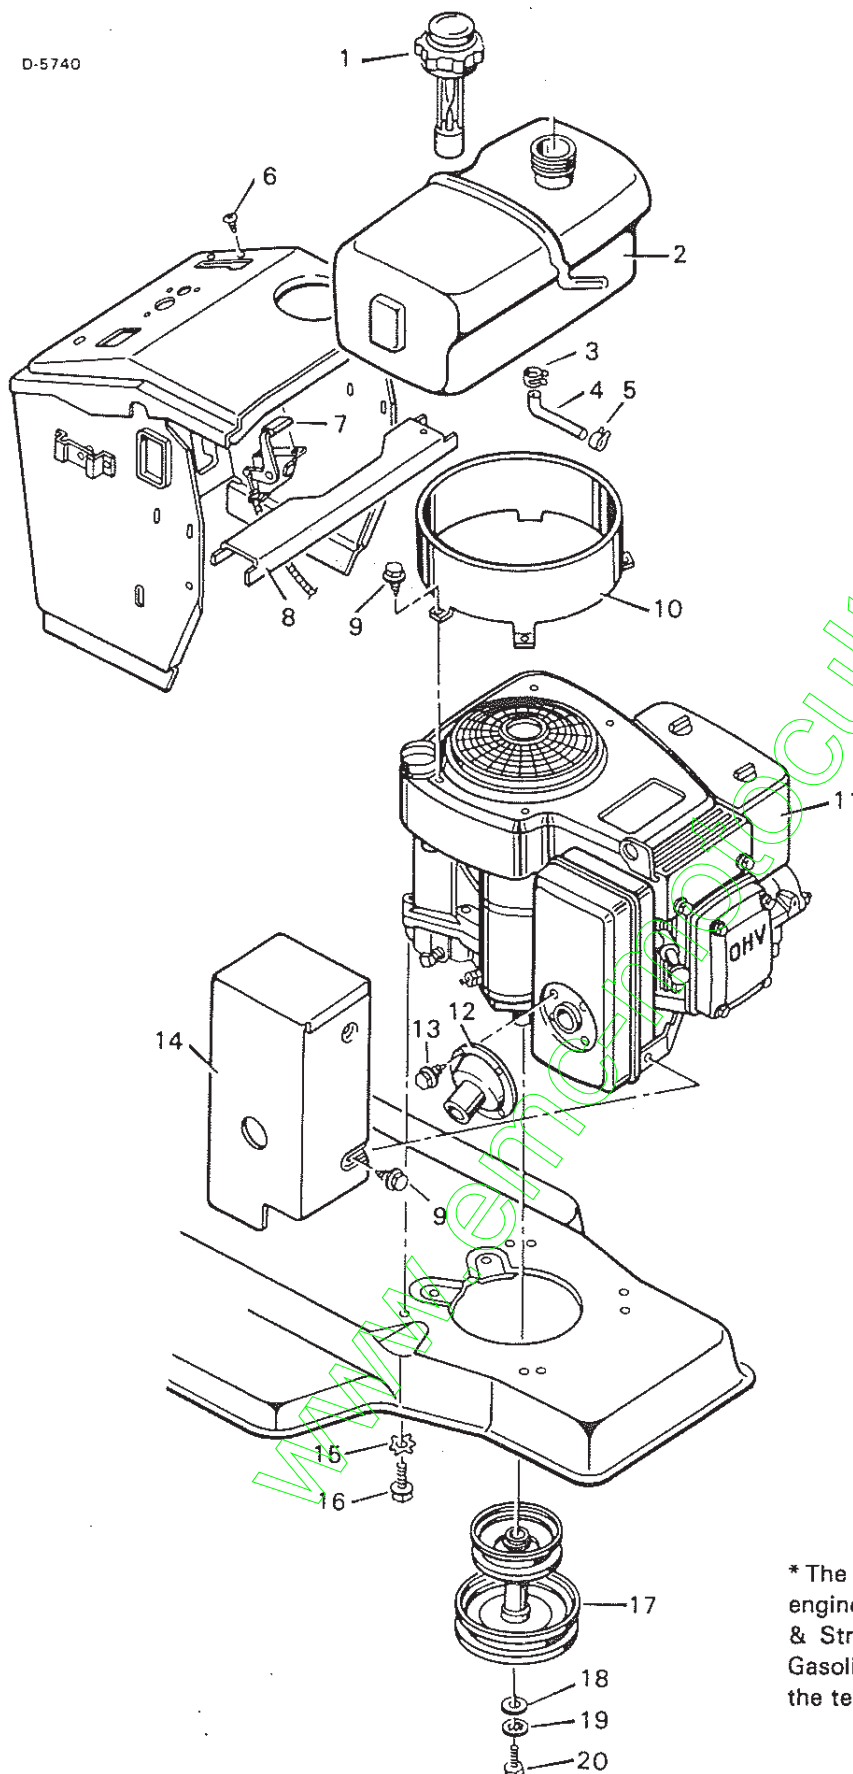

| KEY<br>NO. | DESCRIPTION           | PART<br>NO. |
|------------|-----------------------|-------------|
| 1          | Fuel Cap              | 91348       |
| 2          | Fuel Tank             | 91320       |
| 3          | Hose Clamp            | 91174       |
| 4          | Fuel Line             | 23715       |
| 5          | Hose Clamp            | 23713       |
| 6          | Screw                 | 26x201      |
| 7          | Throttle Control      | 91984       |
| 8          | Channel               | 91329       |
| 9          | Screw                 | 180x5       |
| 10         | Duct, Air Intake      | 92141E700   |
| 11         | Engine *              | -----       |
| 12         | Deflector, Exhaust    | 92144E700   |
| 13         | Screw                 | 26x203      |
| 14         | Shield, Muffler Heat  | 92142E700   |
| 15         | Washer                | 19x8        |
| 16         | Bolt, Engine Mount    | 25x7        |
| 17         | Stack Pulley Assembly | 92246Z      |
| 18         | Washer                | 17x170      |
| 19         | Lockwasher            | 19x35       |
| 20         | Bolt, Hex             | 1x140       |

\* The engine model, type, and code numbers are on the engine. All parts to the engine are available from a Briggs & Stratton Authorized Service Center. See "Engines, Gasoline" or "Gasoline Engines" in the yellow pages of the telephone directory.