



BV 32

1992.11.10


01

www.emc-motoculture.com

BV 32


**RESERVDLAR
SPARE PARTS
ERSATZTEILE
PIECES DE RECHANCHE
PIEZAS DE REPUESTO
RICAMBI
PEÇAS SOBRESSELENTE**

Model BV 32

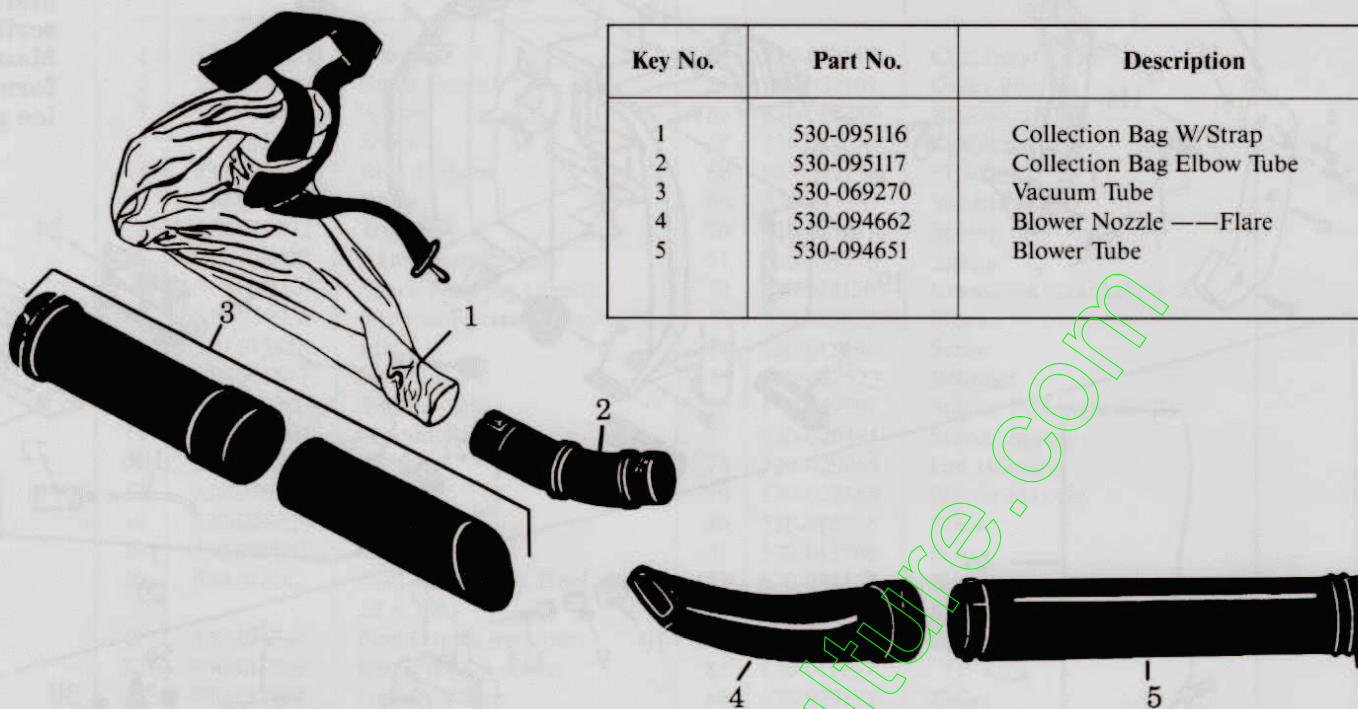

Key No.	Part No.	Description
1	530-095116	Collection Bag W/Strap
2	530-095117	Collection Bag Elbow Tube
3	530-069270	Vacuum Tube
4	530-094662	Blower Nozzle —Flare
5	530-094651	Blower Tube


Carburetor Assembly Part Number 530-035263

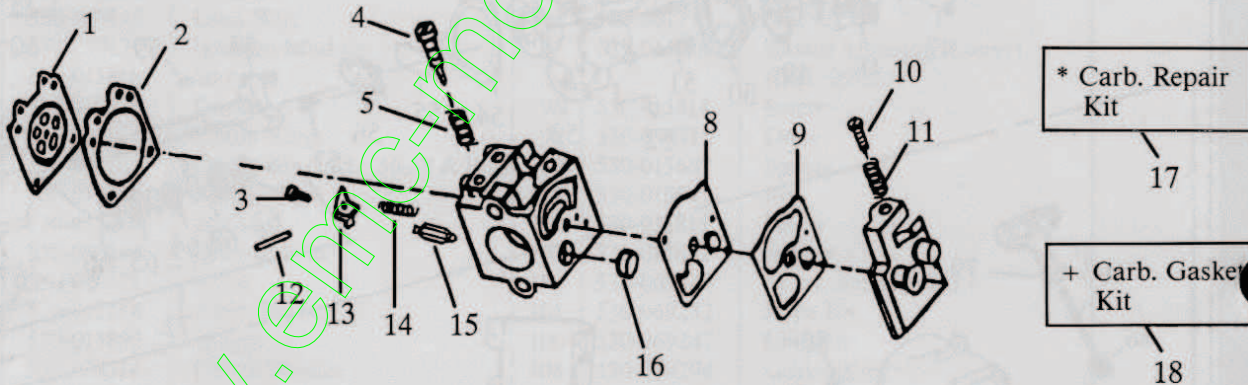

Key No	Part No.	Discription	Key No.	Part No.	Description
1	504-130808	*+ Metering Diaphragm	11	501-667801	*+ Idle Speed Spring
2	530-035151	*+ Metering Diaphragm Gasket	12	530-035028	*+ Metering Lever Pin
3	530-035016	Metering Lever Pin Screw	13	530-035031	Metering Lever
4	530-035268	Mixture Needle	14	530-035188	Metering Lever Spring
5	504-210050	Mixture Needle Spring	15	530-035106	* Inlet Needle Valve
8	504-130807	Fuel Pump Diaphragm	16	530-035178	* Fuel Inlet Screen
9	530-035164	Fuel Pump Gasket	17	505-520130	* Carb. Kwik Repair Kit (*Indicates Contents)
10	530-035203	Idle Speed Screw	18	530-035219	* Carb. Gasket/Diaphragm Kit (+ Indicates Contents)

Model BV 32

⚠ WARNING
 All repairs, adjustments and maintenance not described in the Operator Manual must be performed by qualified ice personnel.

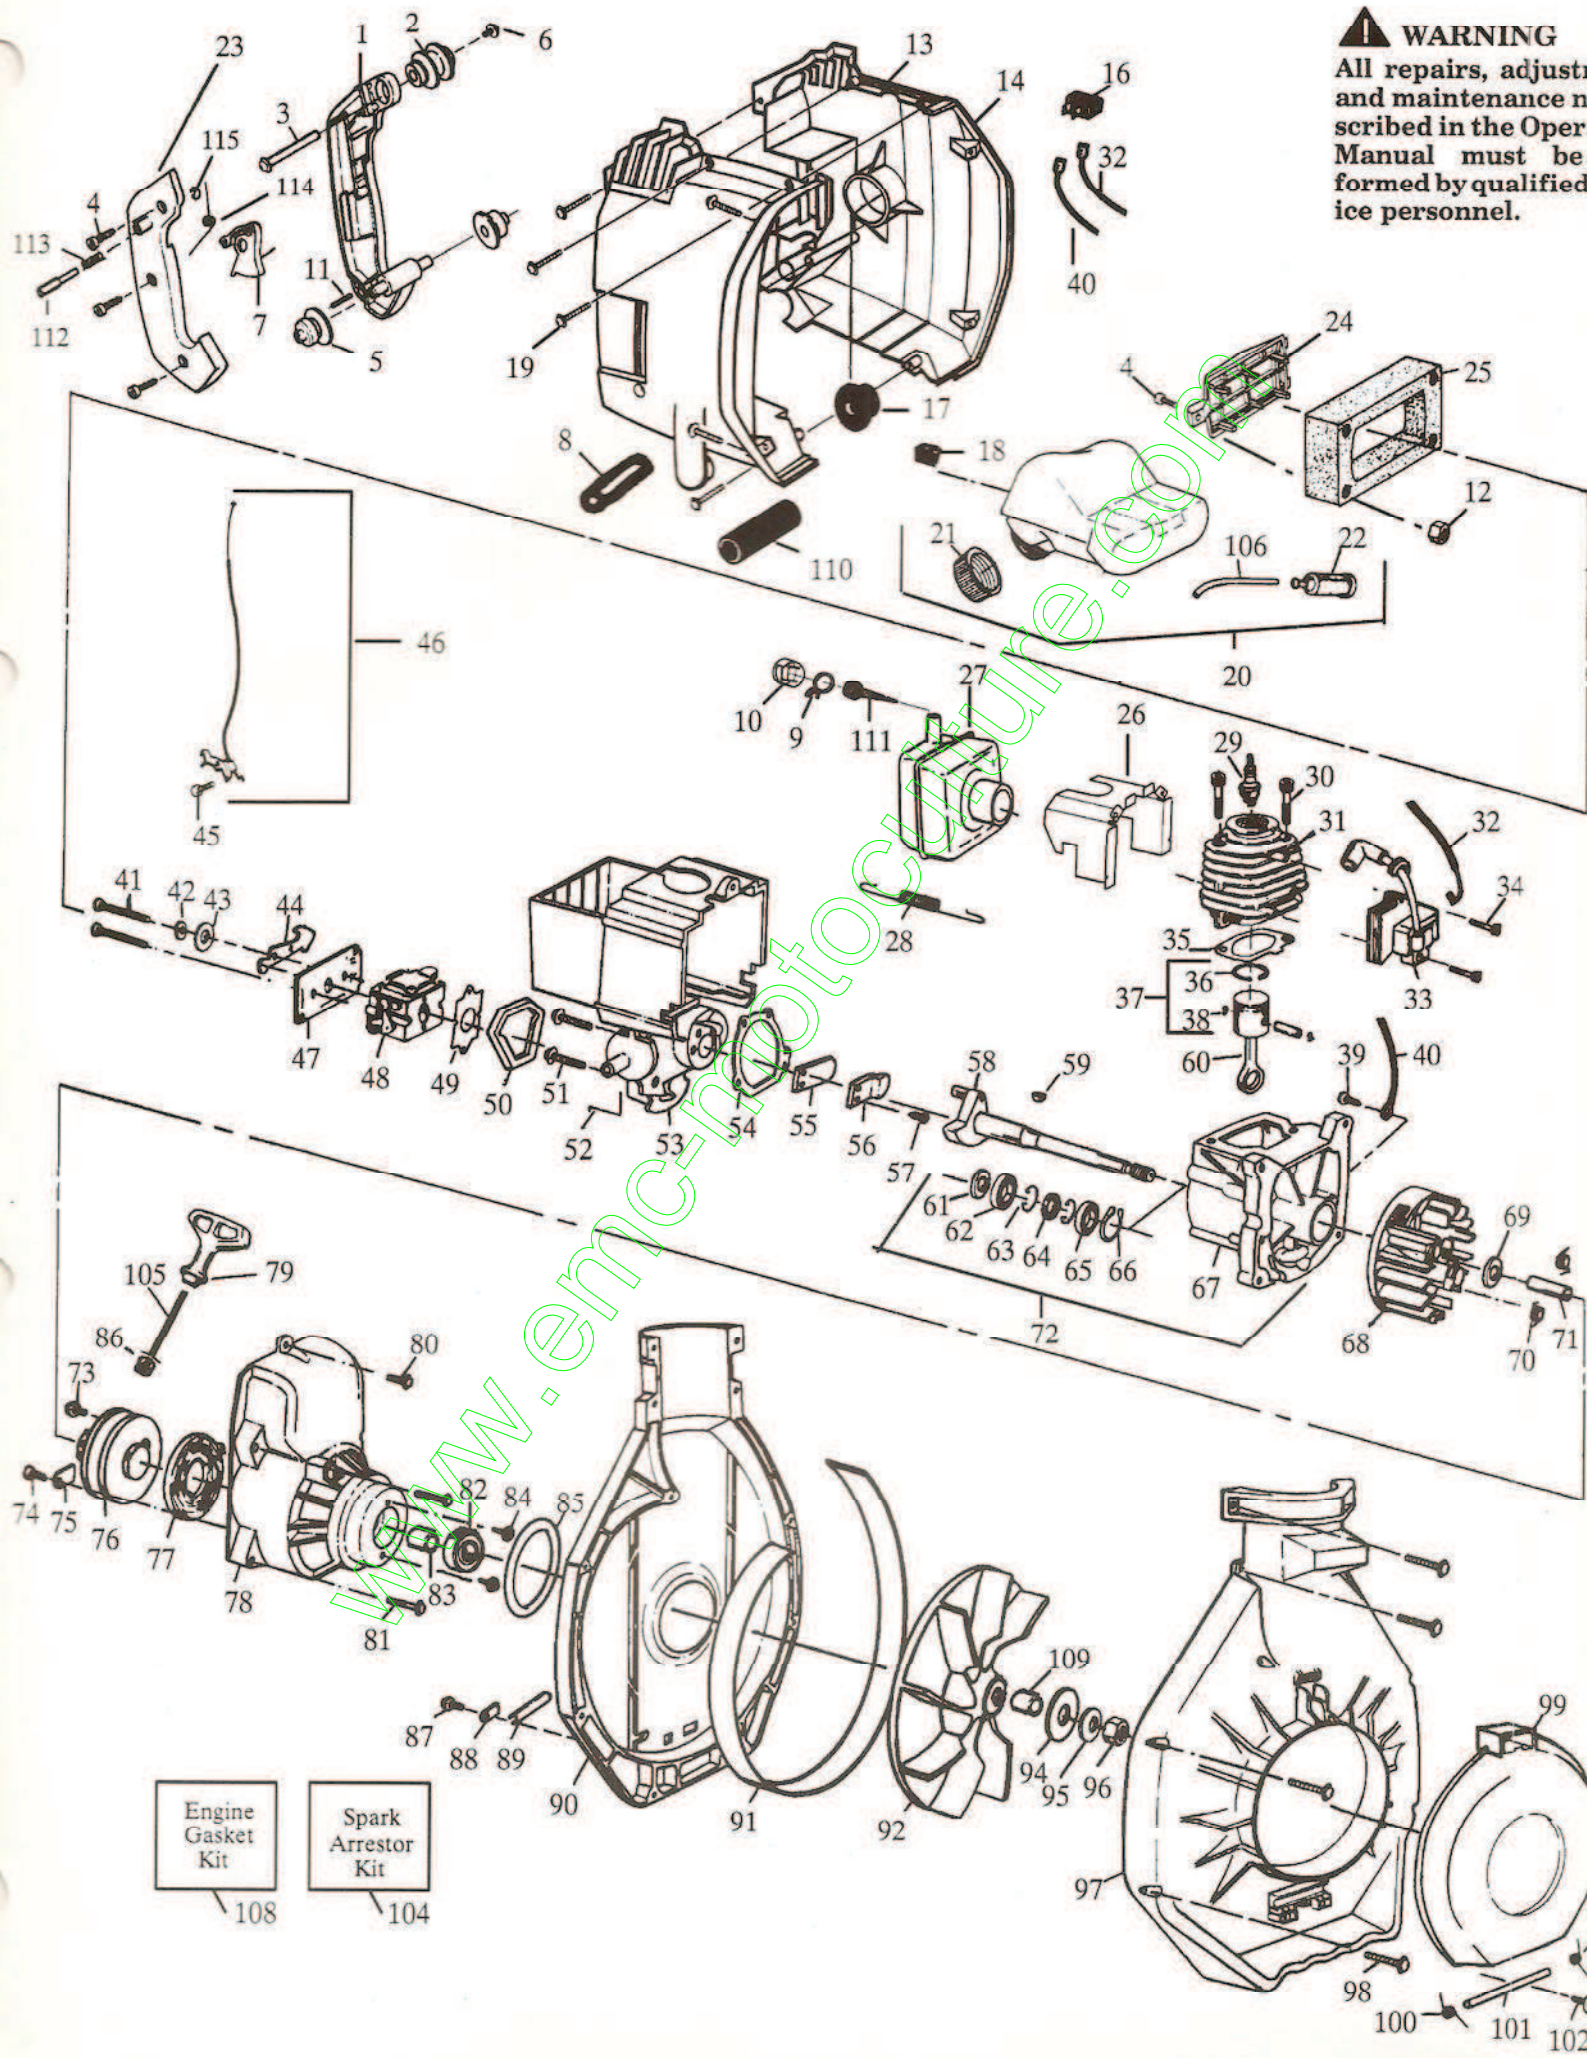

Model BV 32

Key No.	Part No.	Description	Key No.	Part No.	Description
1	530-094712	Handle	64	530-019158	Crankshaft Seal
2	530-026994	Front Isolator	65	530-032102	Outer Bearing
3	530-029111	Spacer	66	530-015789	Retaining Ring
4	530-015635	Screw	67	530-014016	Crankcase
5	530-029130	Rear Isolator	68	530-039136	Flywheel
6	530-015813	Screw	69	530-347987	Washer
7	530-029072	Trigger	70	530-023817	Spring
8	534-100940	Assist Handle Tube	71	530-029176	Spacer
9	530-029228	Spark Arrestor Clamp	72	530-014156	Crankcase/Crankshaft Ass'y.
10	530-029928	Exhaust Deflector Ass'y.	73	530-015823	Screw
11	530-015840	Pin	74	530-015496	Screw
12	530-001543	Nut	75	530-027523	Retainer
13	530-037303	Shroud-Left	76	530-069291	Starter Pulley (Incl. 73)
14	530-037302	Shroud-Right	77	530-029395	Starter Spring
16	530-069292	Switch	78	530-029069	Fan Housing
17	530-029129	Isolator	79	530-027569	Starter Handle
18	530-029295	Isolator	80	530-015775	Screw
19	530-015814	Screw	81	530-015769	Screw
20	530-014162	Fuel Tank Ass'y. (Incl. 21, 22 & 106)	82	530-032108	Bearing
21	530-014347	Fuel Cap (w/retainer)	83	530-029110	Spacer
22	530-014362	Fuel Pick-up Ass'y.	84	530-015805	Screw
23	530-014160	Handle Cover	85	530-019167	"O" Ring
24	530-037306	Cover	86	530-029182	Eyelet
25	530-029112	Air Filter	87	530-015815	Screw
26	530-029404	Air Baffle	88	530-027523	Retainer
27	530-069293	Muffler	89	530-029119	Roll Pin
28	530-029116	Spring	90	530-094710	Blower Housing (Upper)
29	503-235008	Spark Plug (CJ-8Y)	91	530-029173	Band
30	530-015239	Screw	92	530-014157	Impeller
31	530-012238	Cylinder	94	530-015818	Washer
32	530-029145	Lead Wire	95	530-015441	Washer
33	530-039137	Ignition Module	96	530-001733	Nut
34	530-015816	Screw	97	530-014158	Blower Housing (Lower) (Incl. 99-103)
35	530-019178	Gasket	98	530-015814	Screw
36	530-025875	Piston Ring	99	530-094715	Door
37	530-069277	Piston Kit (Incl. 36, 38 & Pin)	100	530-015667	Spring
38	530-015162	Retainer	101	530-015647	Pin
39	530-015306	Screw	102	530-015815	Screw
40	530-029144	Ground Wire	103	530-015672	Spring
41	530-015771	Screw	104	530-069348	Spark Arrestor Kit
42	530-015254	Wave Washer	105	530-069232	Rope Kit
43	530-015852	Spacer	106	530-069247	Line Kit
44	530-029114	Choke Shutter	108	530-069294	Gasket Kit
45	530-015775	Screw	109	530-029118	Hub
46	530-029146	Cable Assembly	110	534-101900	Foam Grip
47	530-029115	Plate	111	530-029227	Spark Arrestor Screen
48	530-035263	Carburetor	112	530-029117	Throttle Lock Button
49	530-019164	Gasket	113	530-024772	Spring
50	530-019165	Seal	114	530-027597	Spring
51	530-015849	Screw	115	530-015702	"C" Clip
52	530-029113	Ground Wire			
53	530-029070	Reed Block			
54	530-019166	Gasket			
55	530-027593	Reed Valve			
56	530-027594	Reed Stop			
57	530-015241	Screw			
58	530-014033	Crankshaft			
59	530-015126	Key			
60	530-010960	Connecting Rod Ass'y.			
61	530-015788	Spacer			
62	530-032103	Inner Bearing			
63	530-015787	Retaining Ring			