

www.eng-photoculture.com


JONSERED

HT 22E

Serial No.


HT 22E CRANK CASE

www.encycloculture.com

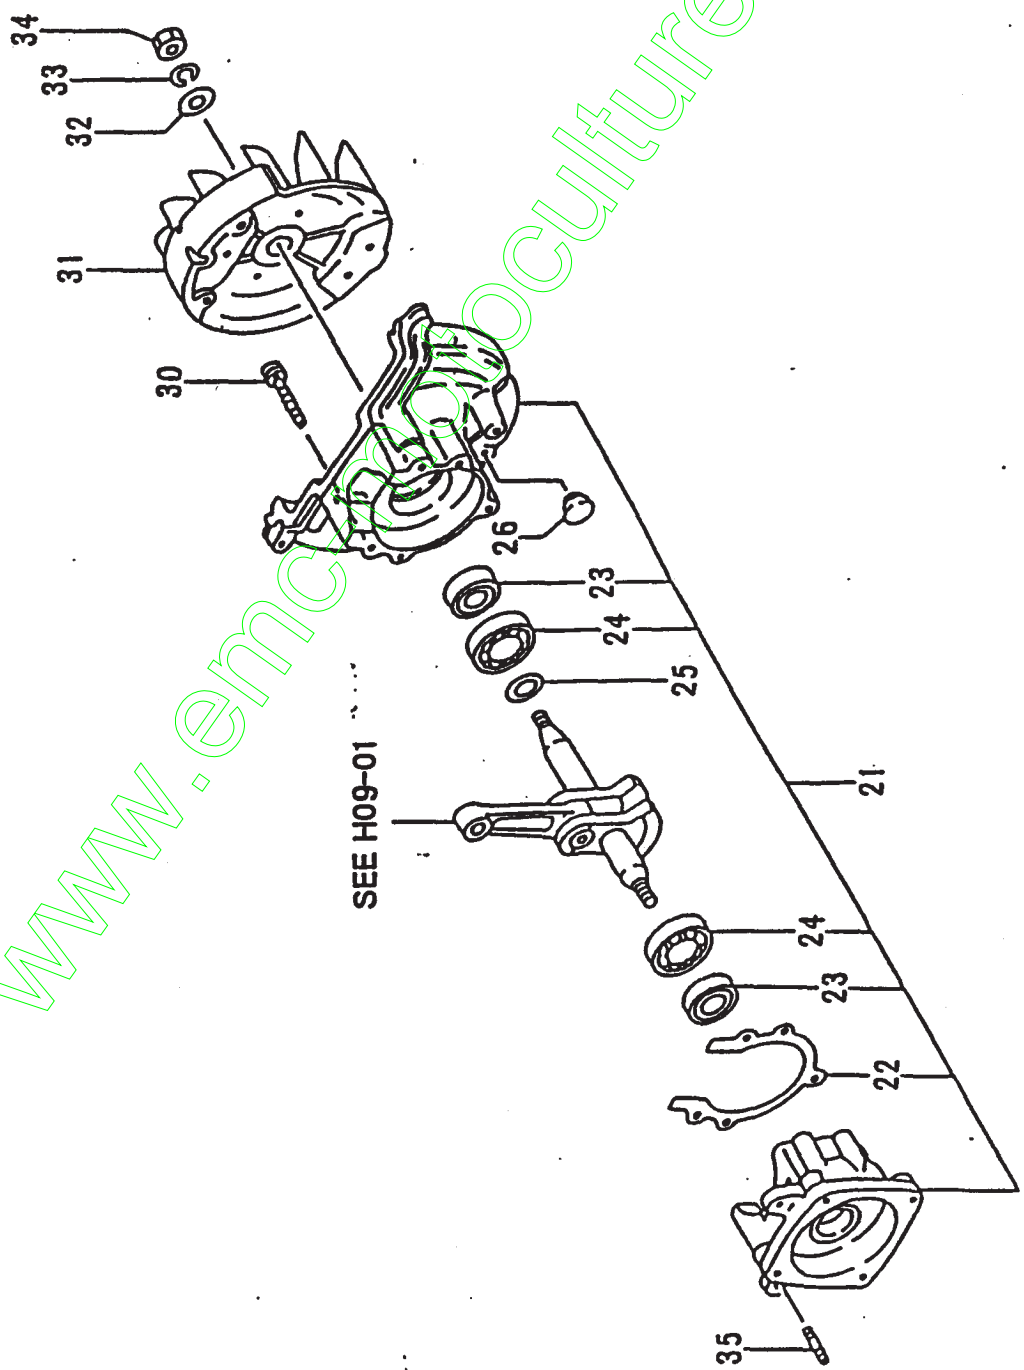


REF. NUMBER	PARTS NUMBER	QTY	SERIAL NUMBER
021	072-06500-90	1	
022	090-06500-20	1	
023	999-66122-269	2	
024	999-61600-100	2	
025	330-00200-21	V	
025	330-00200-22	V	
025	330-00200-23	V	
025	330-00200-24	V	
026	599-00601-20	1	
030	994-14050-301	3	
031	155-21523-80	1	
032	992-01080-011	1	
033	992-10080-012	1	
034	991-01080-011	1	
035	100-02100-20	2	

HT 22E CYLINDER/PISTON/CRANK SHAFT

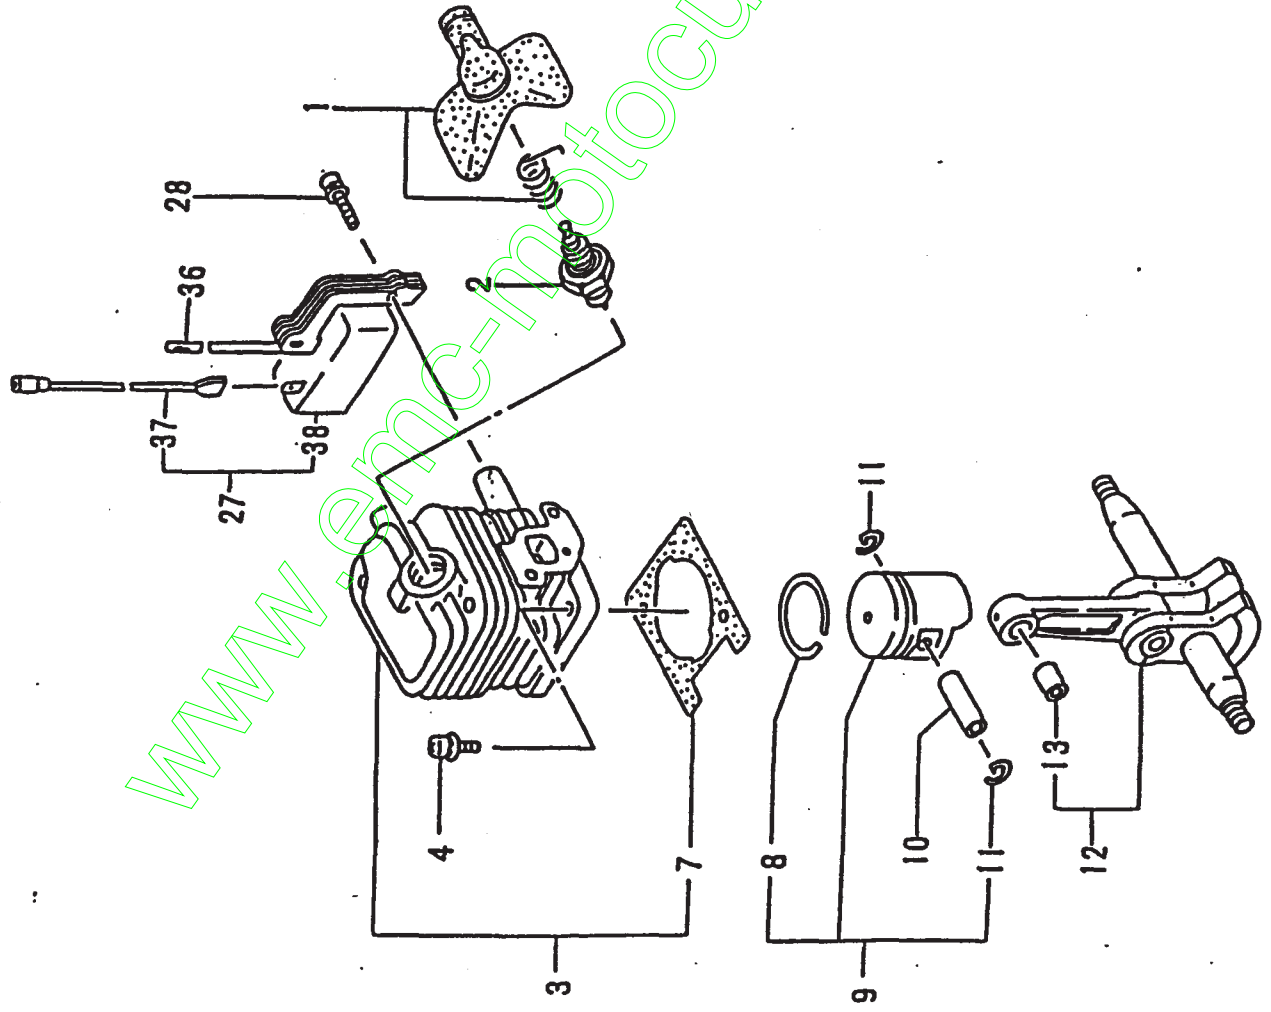


REF. NUMBER	PARTS NUMBER	Q'TY	SERIAL NUMBER
001	157-06500-91	1	
002	018-06540-21	1	
003	001-06500-90	1	
004	994-16050-201	2	
007	017-06500-20	1	
008	041-00601-21	1	
009	030-06500-90	1	
010	037-06500-20	1	
011	039-01620-20	2	
012	046-06500-80	1	
013	999-62081-225	1	
027	153-21532-90	1	
028	994-16040-226	2	
036	250-06500-20	1	
037	178-06500-80	1	
038	167-21532-80	1	

HT 22E ENGINE-1

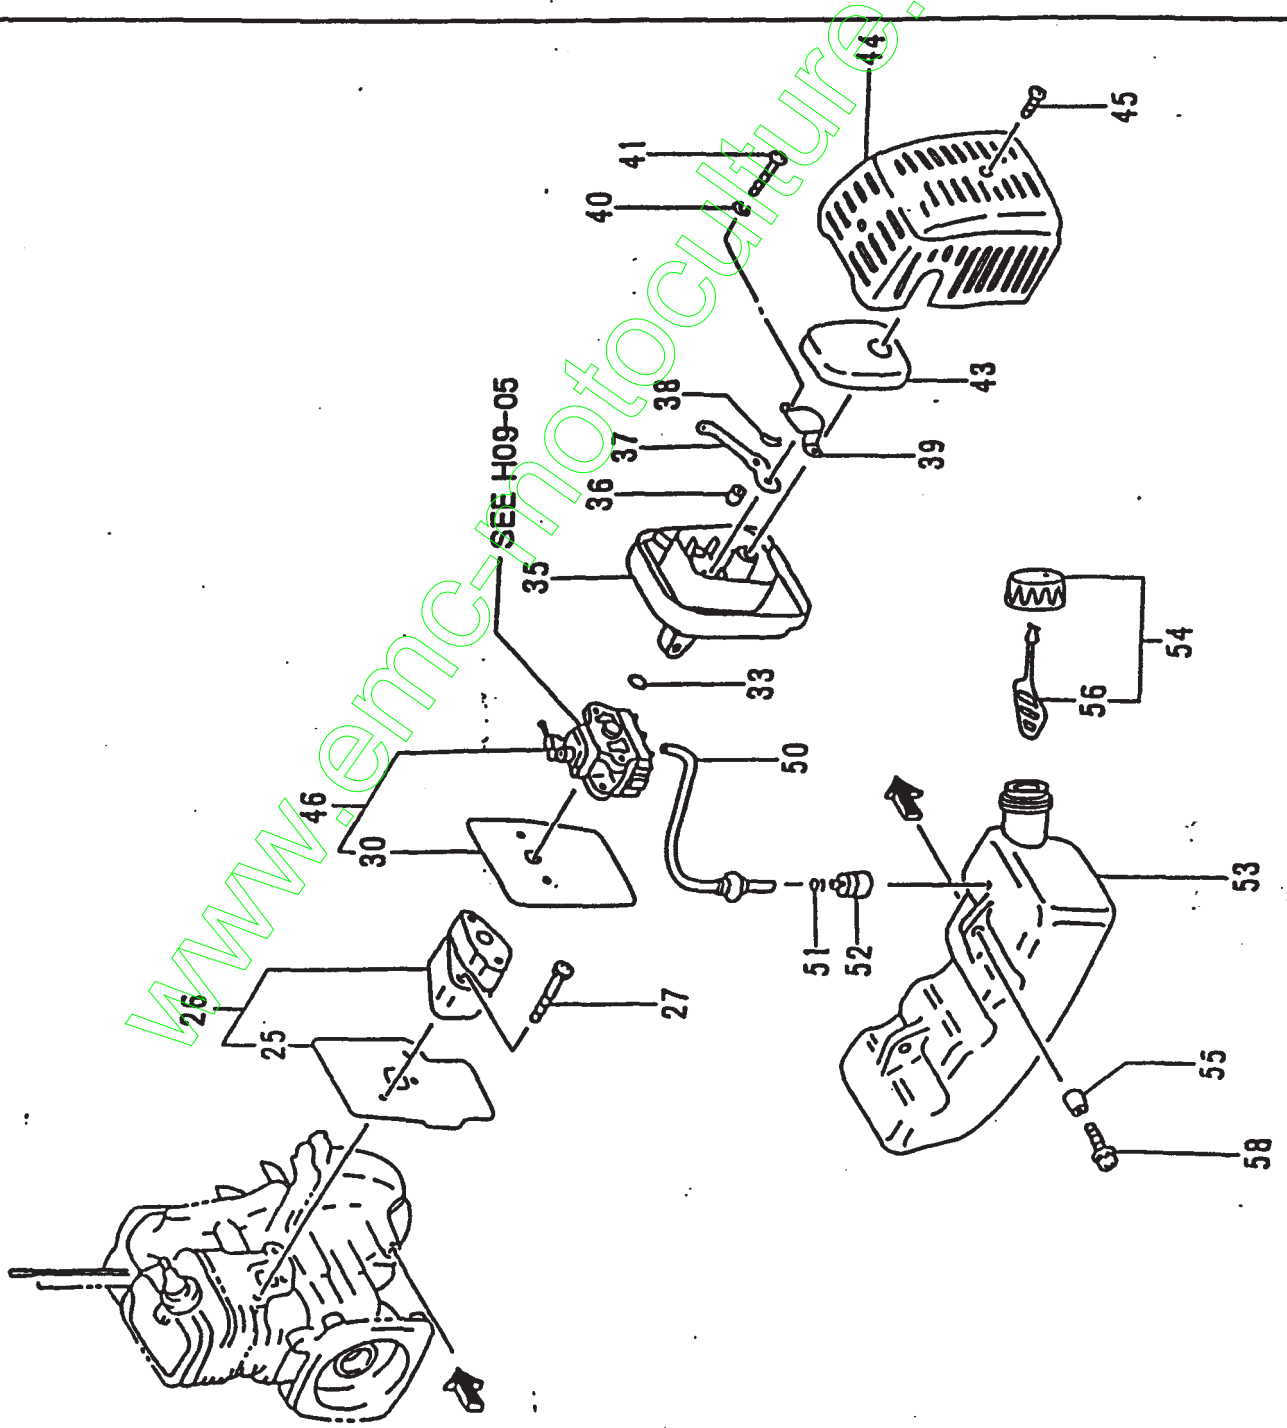


REF. NUMBER	PARTS NUMBER	QTY	SERIAL NUMBER
025	403-06500-20	1	
026	404-06500-90	1	
027	994-16050-252	2	
030	402-06500-20	1	
033	999-67015-000	1	
035	423-06500-80	1	
036	470-06500-20	2	
037	528-0650T-20	1	
038	992-04080-031	1	
039	476-01700-20	1	
040	992-10050-012	2	
041	990-11050-602	2	
043	446-06500-20	1	
044	452-06500-20	1	
045	380-0637C-20	1	
046	455-06500-90	1	
-050	223-06500-90	1	
051	680-00731-20	1	
052	675-04042-80	1	
053	591-06500-21	1	
054	595-0650R-90	1	
055	659-00801-20	2	
056	626-32810-20	1	
058	994-63050-185	2	

HT 22E CARBURETOR

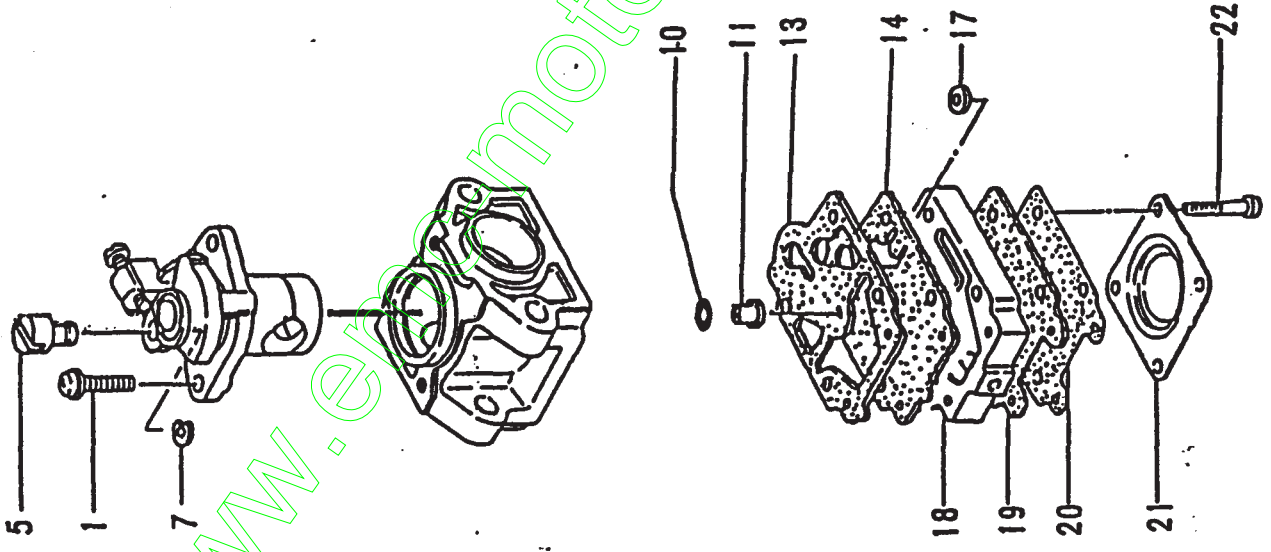


REF. NUMBER	PARTS NUMBER	QTY	SERIAL NUMBER
001	548-25140-20	2	
005	539-25120-20	1	
007	489-25100-20	1	
010	550-25100-20	1	
011	599-2000W-41	1	
013	577-25100-20	1	
014	576-25100-20	1	
017	578-25007-20	1	
018	575-25182-80	1	
019	475-25001-20	1	
020	474-25001-80	1	
021	476-25004-20	1	
022	548-25101-20	4	

HT 22E ENGINE-2

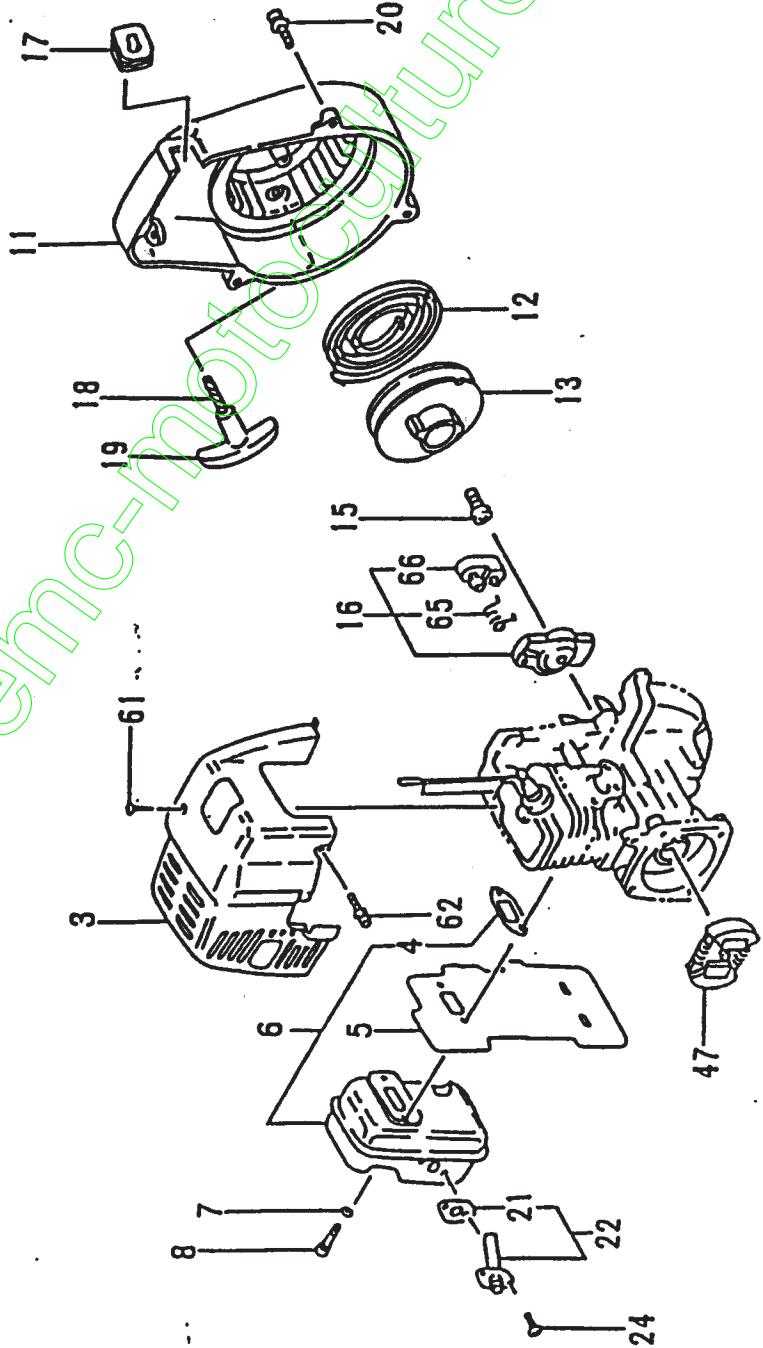


REF. NUMBER	PARTS NUMBER	QTY	SERIAL NUMBER
003	738-06500-20	1	
004	737-06500-20	1	
005	133-06500-20	1	
006	704-06500-90	1	
007	992-01050-011	2	
008	990-51050-503	2	
011	112-06500-80	1	
012	780-06097-20	1	
013	774-06097-20	1	
015	839-02010-20	1	
016	798-06500-90	1	
017	203-0604A-20	1	
018	783-06097-20	1	
019	785-06410-20	1	
020	994-15040-162	3	
021	751-06500-20	1	
022	721-06504-90	1	
024	994-14040-081	2	
047	277-0634F-90	1	
061	990-72045-164	1	
062	994-25040-128	2	
065	790-06097-20	1	
066	788-06500-20	1	

HT 22E HANDLE

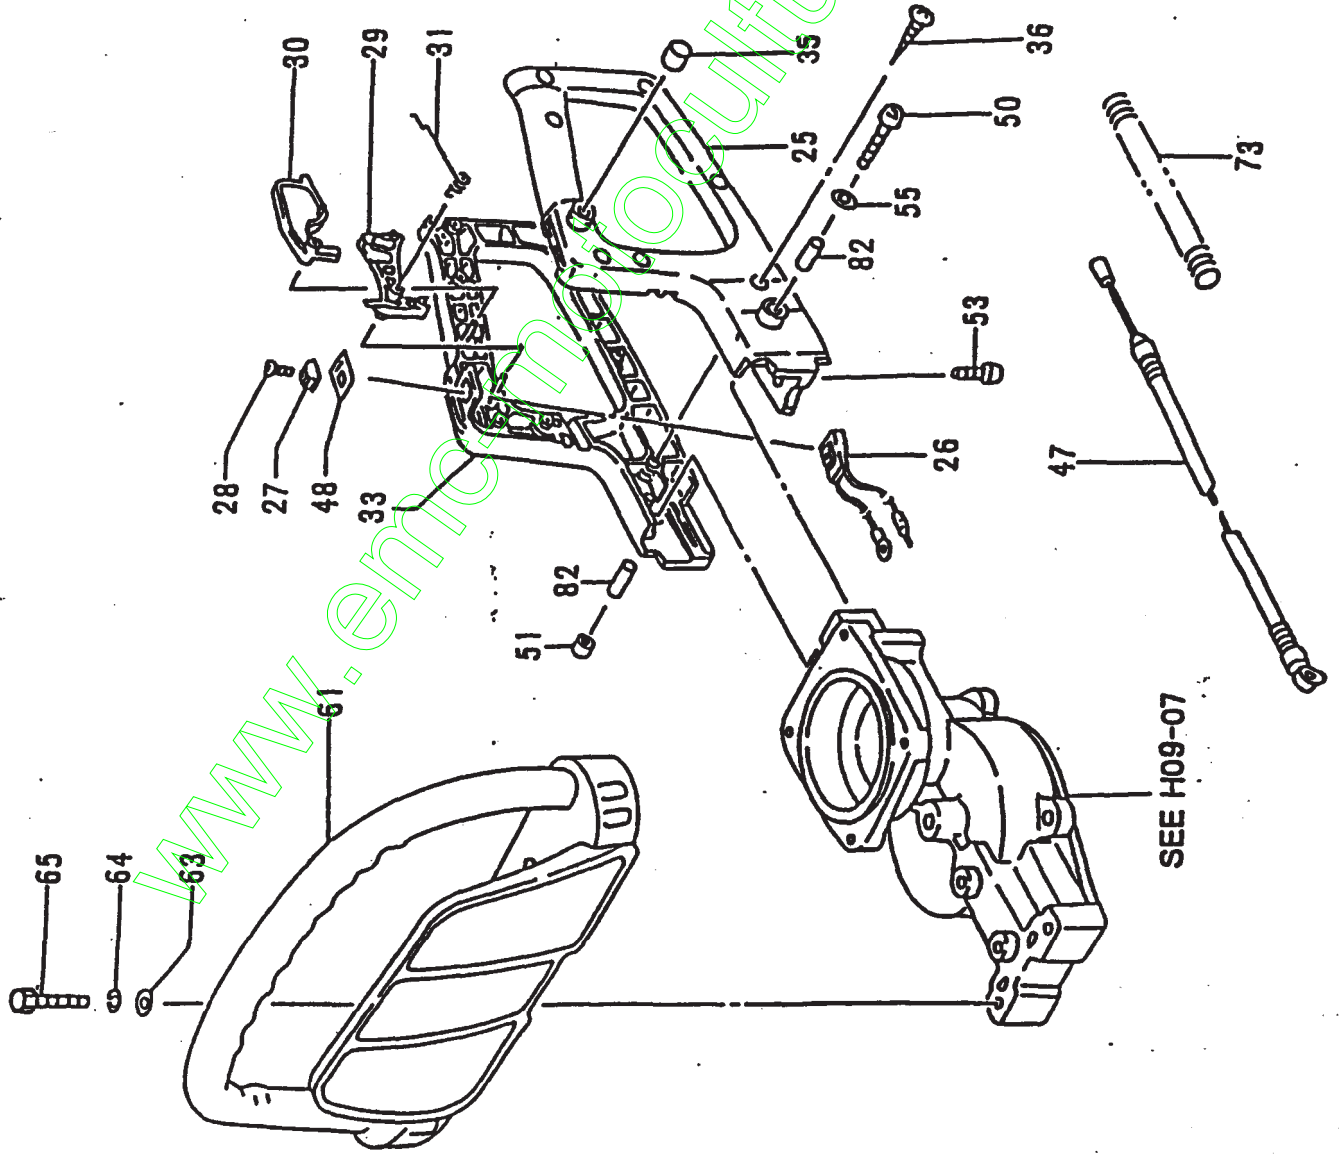

REF. NUMBER	PARTS NUMBER	QTY	SERIAL NUMBER
025	050-33150-22	1	
026	170-3317A-80	1	
027	258-11650-20	1	
028	994-31030-101	1	
029	230-33150-20	1	
030	231-33150-20	1	
031	232-33150-20	1	
033	051-33150-23	1	
035	765-32120-20	1	
036	993-11041-812	7	
047	885-0651C-80	1	
048	925-32530-20	1	
050	994-14050-451	1	
051	991-78050-010	1	
053	994-15060-181	1	
055	992-00050-011	1	
061	210-33160-21	1	
063	992-01050-061	2	
064	992-10050-062	2	
065	990-51050-403	2	
073	164-07014-00	1	
082	659-00801-20	2	

HT 22E GEAR CASE/BLADE

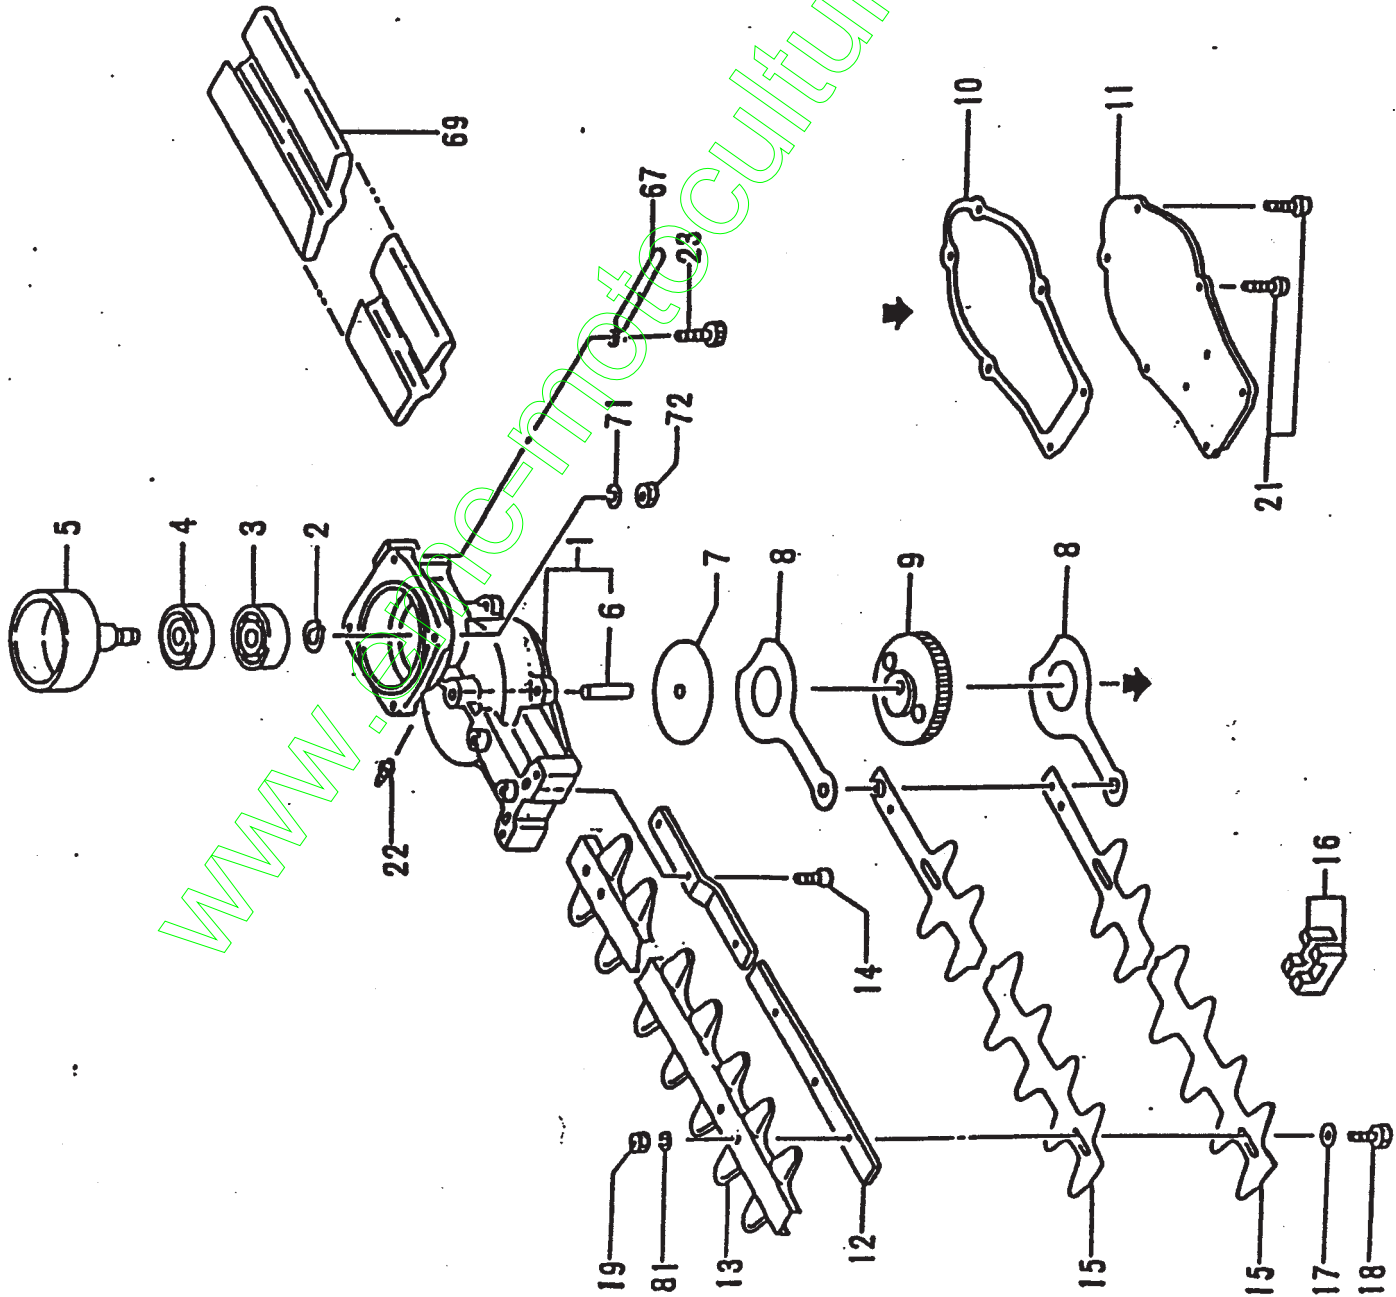

REF. NUMBER	PARTS NUMBER	QTY	SERIAL NUMBER
001	300-3317A-80	1	
002	993-50015-002	1	
003	999-61600-200	1	
004	999-61600-202	1	
005	288-33180-80	1	
006	305-33160-20	1	
007	075-33160-20	1	
008	101-33160-22	2	
009	307-33180-20	1	
010	303-33160-20	1	
011	630-33160-20	1	
012	122-33160-20	1	
013	136-33160-20	1	
014	990-52060-165	2	
015	120-33160-20	2	
016	085-33160-20	2	
017	129-33202-20	4	
018	124-33202-21	4	
019	123-33202-20	4	
021	994-61040-104	8	
022	300-32250-80	1	
023	990-51060-143	2	
067	198-05015-80	1	
069	138-33168-20	1	
071	992-10060-012	4	
072	991-01060-011	2	
081	992-01060-011	3	