


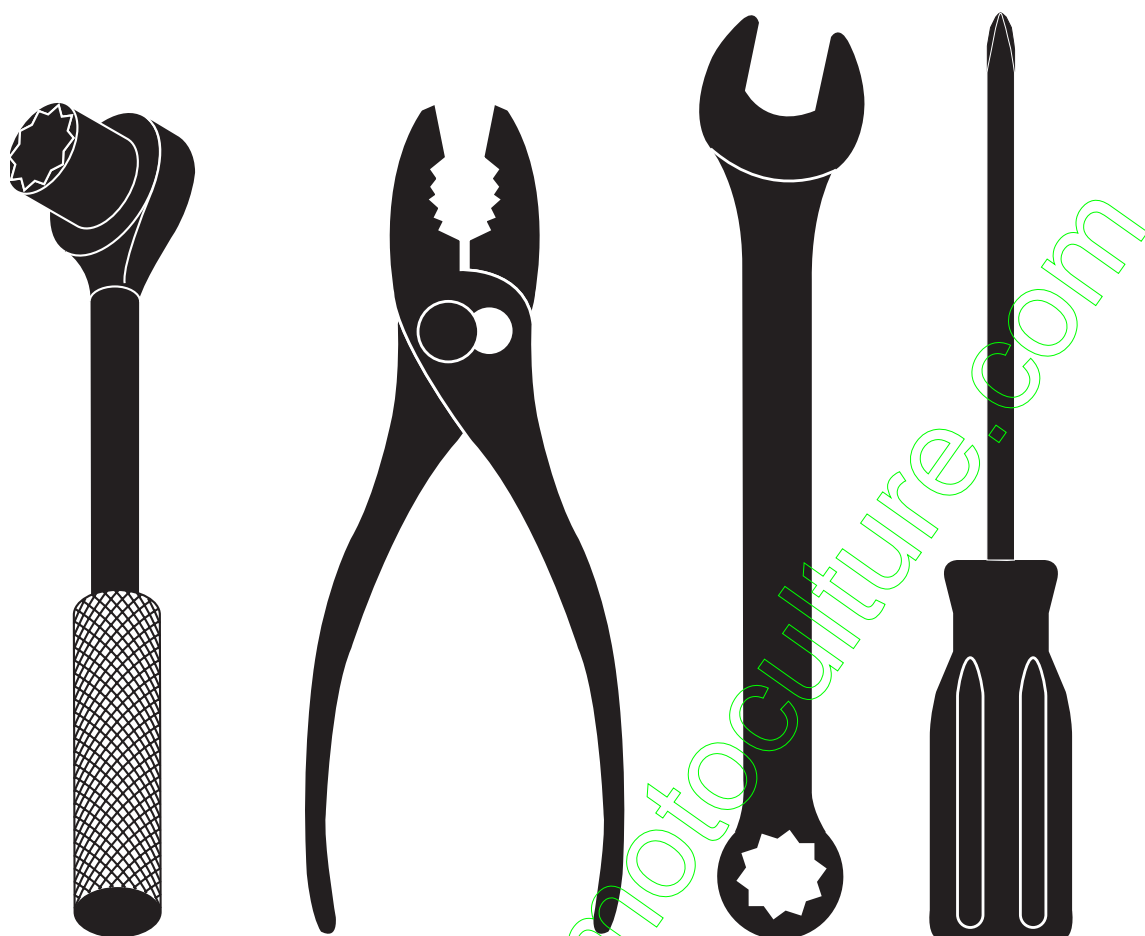

# **REPAIR PARTS MANUAL**

**MODEL NO. MBA1492BRK (96061001900)**  
**Lawn Tractor**

---

# **Mr. Bricolage**

# HOW TO USE THIS MANUAL

This manual is designed to provide the customer with a means to identify the parts on his/her tractor when ordering repair parts. The illustrations may or may not represent the actual assemblies; therefore, it is not recommended to use this manual as a guide to assemble or disassemble the tractor. Some hardware and parts are drawn larger in order to more readily identify them.

Each tractor has its own model number.

The model number for your tractor can be found on the fender under the seat.


When ordering parts, always give the following information:

- Product - "Tractor"
- Model Number - "MBA1492BRK (96061001900)"
- Part Number
- Part Description

## TABLE OF CONTENTS


|                         |              |
|-------------------------|--------------|
| <b>SCHEMATIC .....</b>  | <b>3</b>     |
| <b>ELECTRICAL.....</b>  | <b>4-5</b>   |
| <b>CHASSIS.....</b>     | <b>6-7</b>   |
| <b>DRIVE.....</b>       | <b>8-9</b>   |
| <b>STEERING .....</b>   | <b>10-11</b> |
| <b>SEAT .....</b>       | <b>12</b>    |
| <b>DECALS.....</b>      | <b>13</b>    |
| <b>ENGINE.....</b>      | <b>14-15</b> |
| <b>MOWER LIFT .....</b> | <b>16-17</b> |
| <b>MOWER DECK .....</b> | <b>18-19</b> |
| <b>BAGGER.....</b>      | <b>20-21</b> |

TRACTOR- -MODEL NO. MBA1492BRK (96061001900) PRODUCT NO. 964 77 35-01  
SCHEMATIC

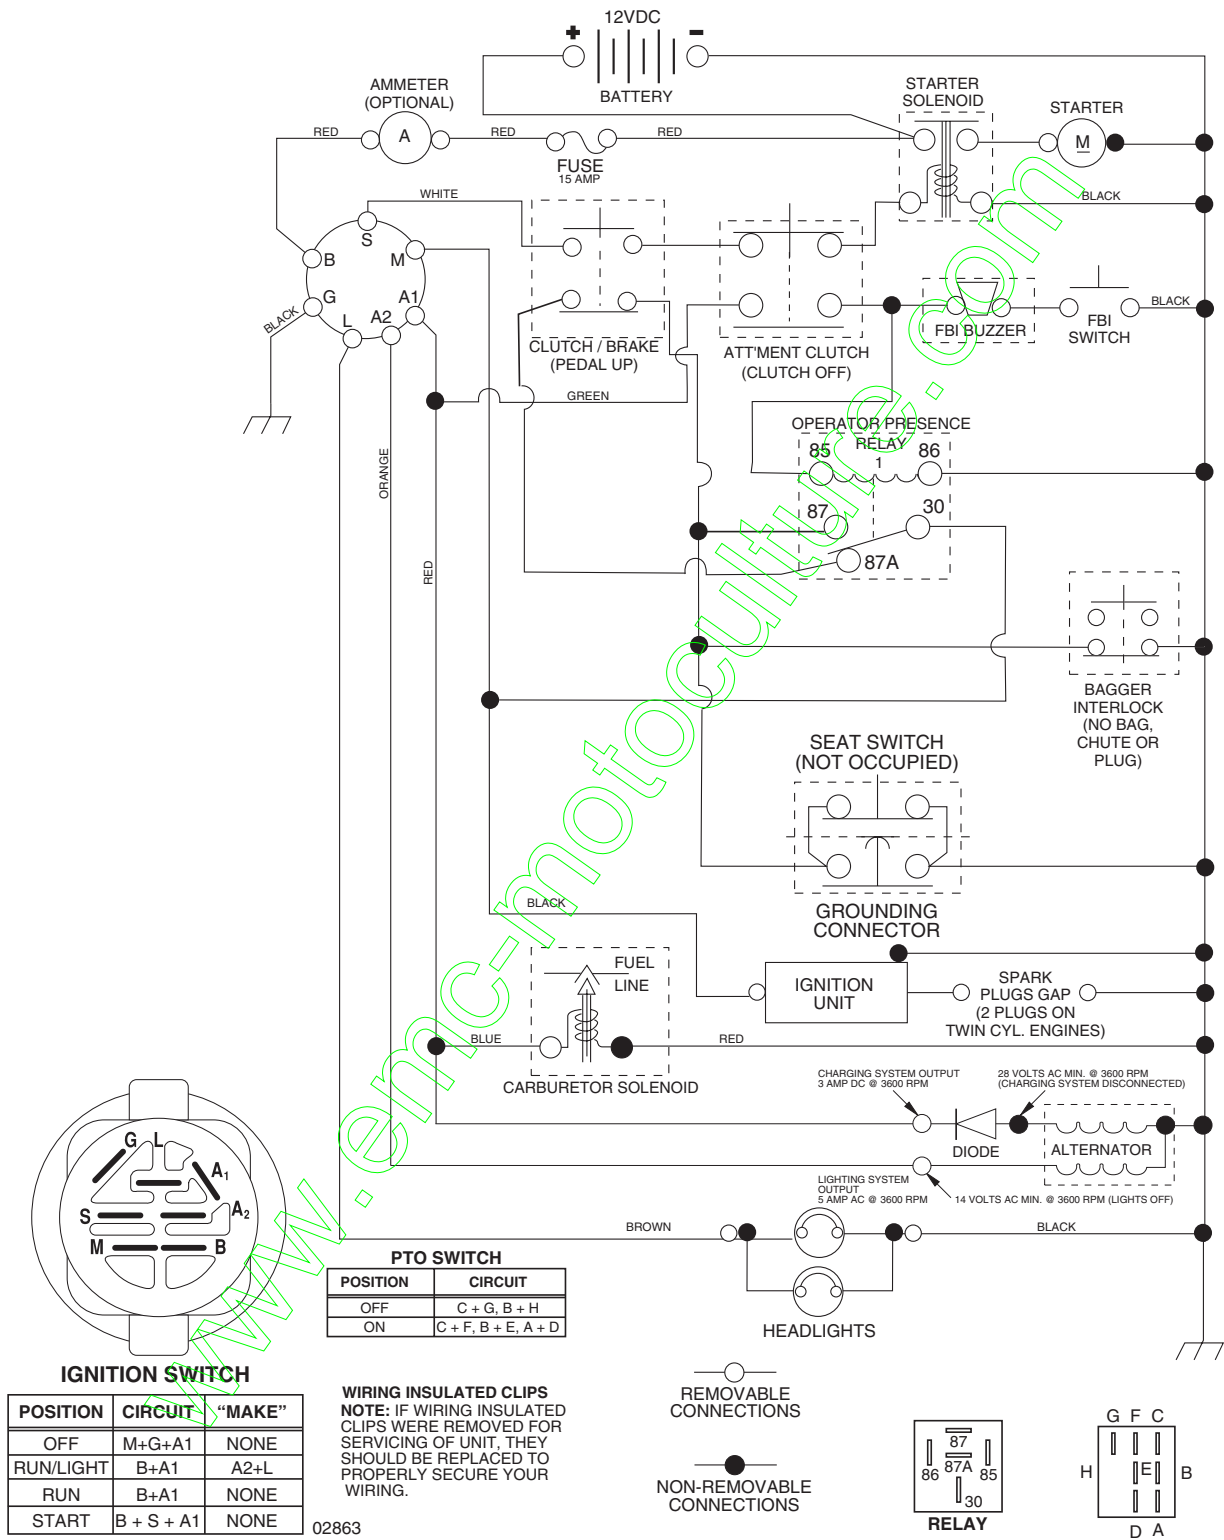

# REPAIR PARTS

TRACTOR- -MODEL NO. MBA1492BRK (96061001900) PRODUCT NO. 964 77 35-01  
ELECTRICAL

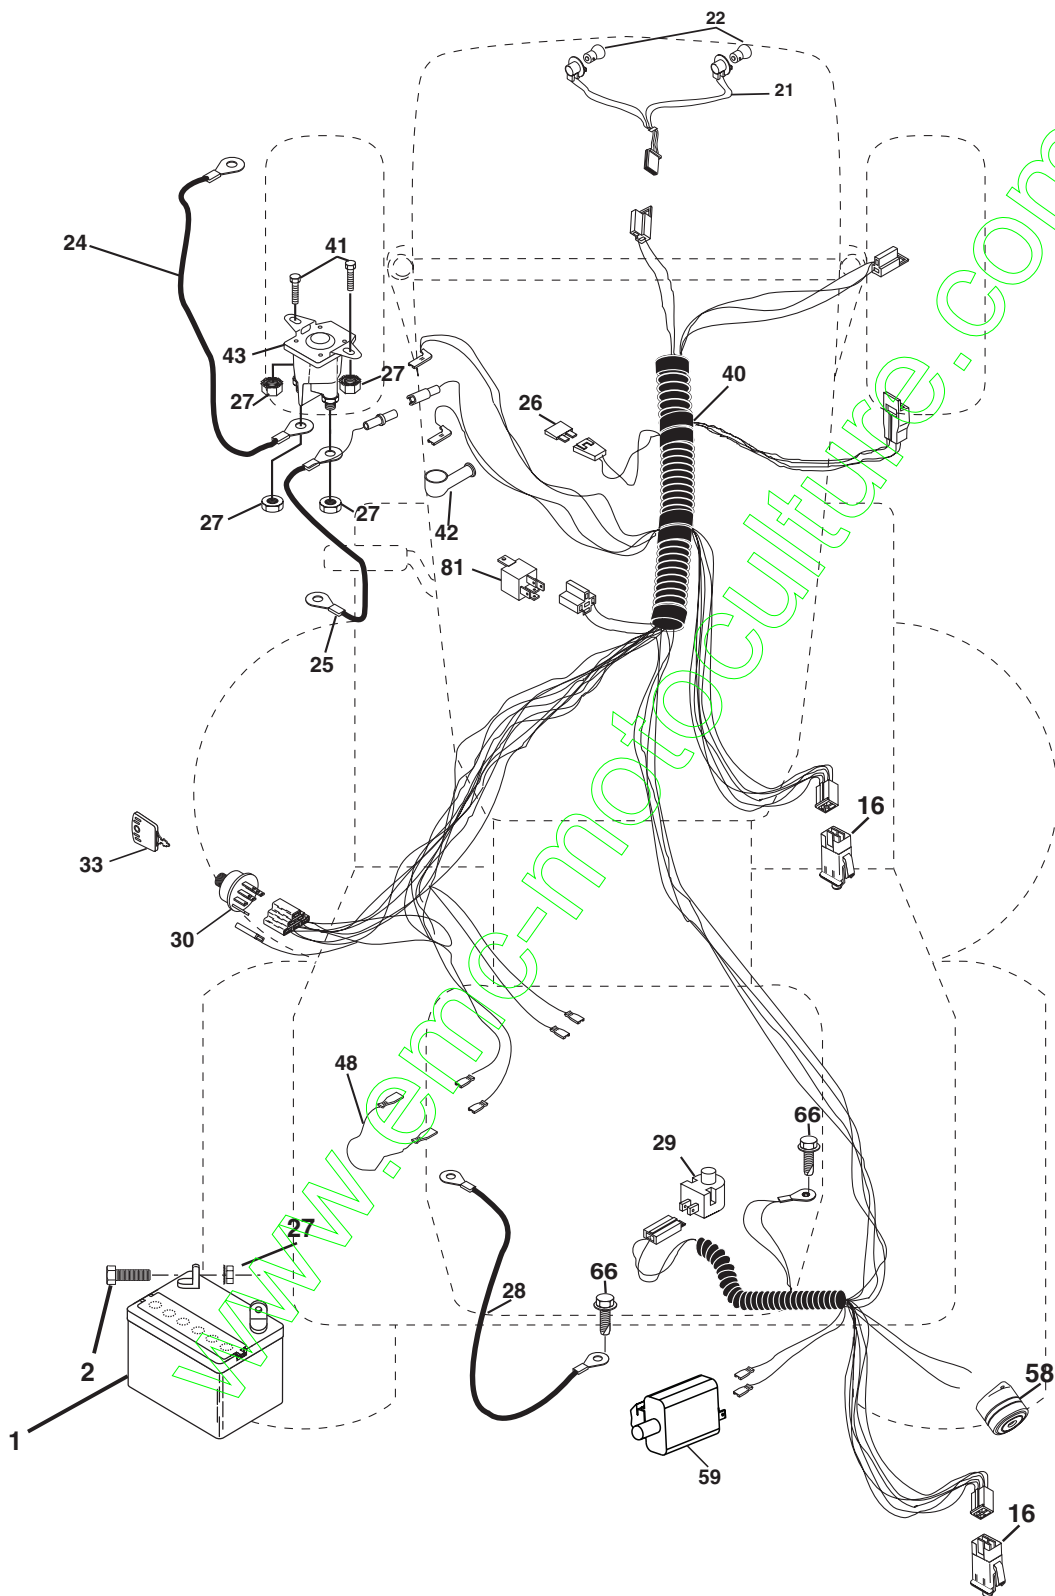

## REPAIR PARTS


TRACTOR- -MODEL NO. MBA1492BRK (96061001900) PRODUCT NO. 964 77 35-01  
ELECTRICAL

| KEY<br>NO. | PART<br>NO.         | DESCRIPTION                       |
|------------|---------------------|-----------------------------------|
| 1          | 532 16 34-65        | Battery 12 Volt 25 AMP Wet        |
| 2          | 874 76 04-12        | Bolt Hex Hd 1/4-20 unc x 3/4      |
| 16         | 532 17 61-38        | Switch Interlock Push-In          |
| 21         | 532 18 37-59        | Harness Asm Light W/41524         |
| 22         | 532 00 41-52        | Bulb Light #1156                  |
| 24         | 532 12 47-80        | Cable Starter 6Ga 11" Red         |
| 25         | 532 16 59-87        | Cable Battery Crd 56" Red         |
| 26         | 532 17 51-58        | Fuse 15 Amp                       |
| 27         | 873 51 04-00        | Nut Keps Hex 1/4-20 unc           |
| 28         | 532 12 77-25        | Cable Ground 6 Ga. 18" Black      |
| 29         | <b>532 12 13-05</b> | Switch Plunger NC Gray            |
| 30         | 532 17 55-66        | Switch Ignition Delta             |
| 33         | 532 14 04-01        | Key Ign Molded Delta              |
| 40         | <b>532 18 80-36</b> | Harness Ign Crd Noram             |
| 41         | 871 11 04-08        | Bolt Flk Fin Hex 1/4-20 unc x 1/2 |
| 42         | 532 13 15-63        | Cover Terminal Red                |
| 43         | 532 17 88-61        | Solenoid                          |
| 48         | 532 14 08-44        | Adapter Ammeter Rectangular       |
| 58         | 532 16 94-19        | Buzzer Crd                        |
| 59         | 532 18 03-79        | Switch FBI CRD                    |
| 66         | 817 49 06-08        | Screw Thdrol 3/8-16 x 1/2 Ty-Tt   |
| 81         | 532 10 97-48        | Relay Asm                         |

**NOTE:** All component dimensions given in U.S. inches.  
1 inch = 25.4 mm.

# REPAIR PARTS

TRACTOR- -MODEL NO. MBA1492BRK (96061001900) PRODUCT NO. 964 77 35-01  
CHASSIS AND ENCLOSURES

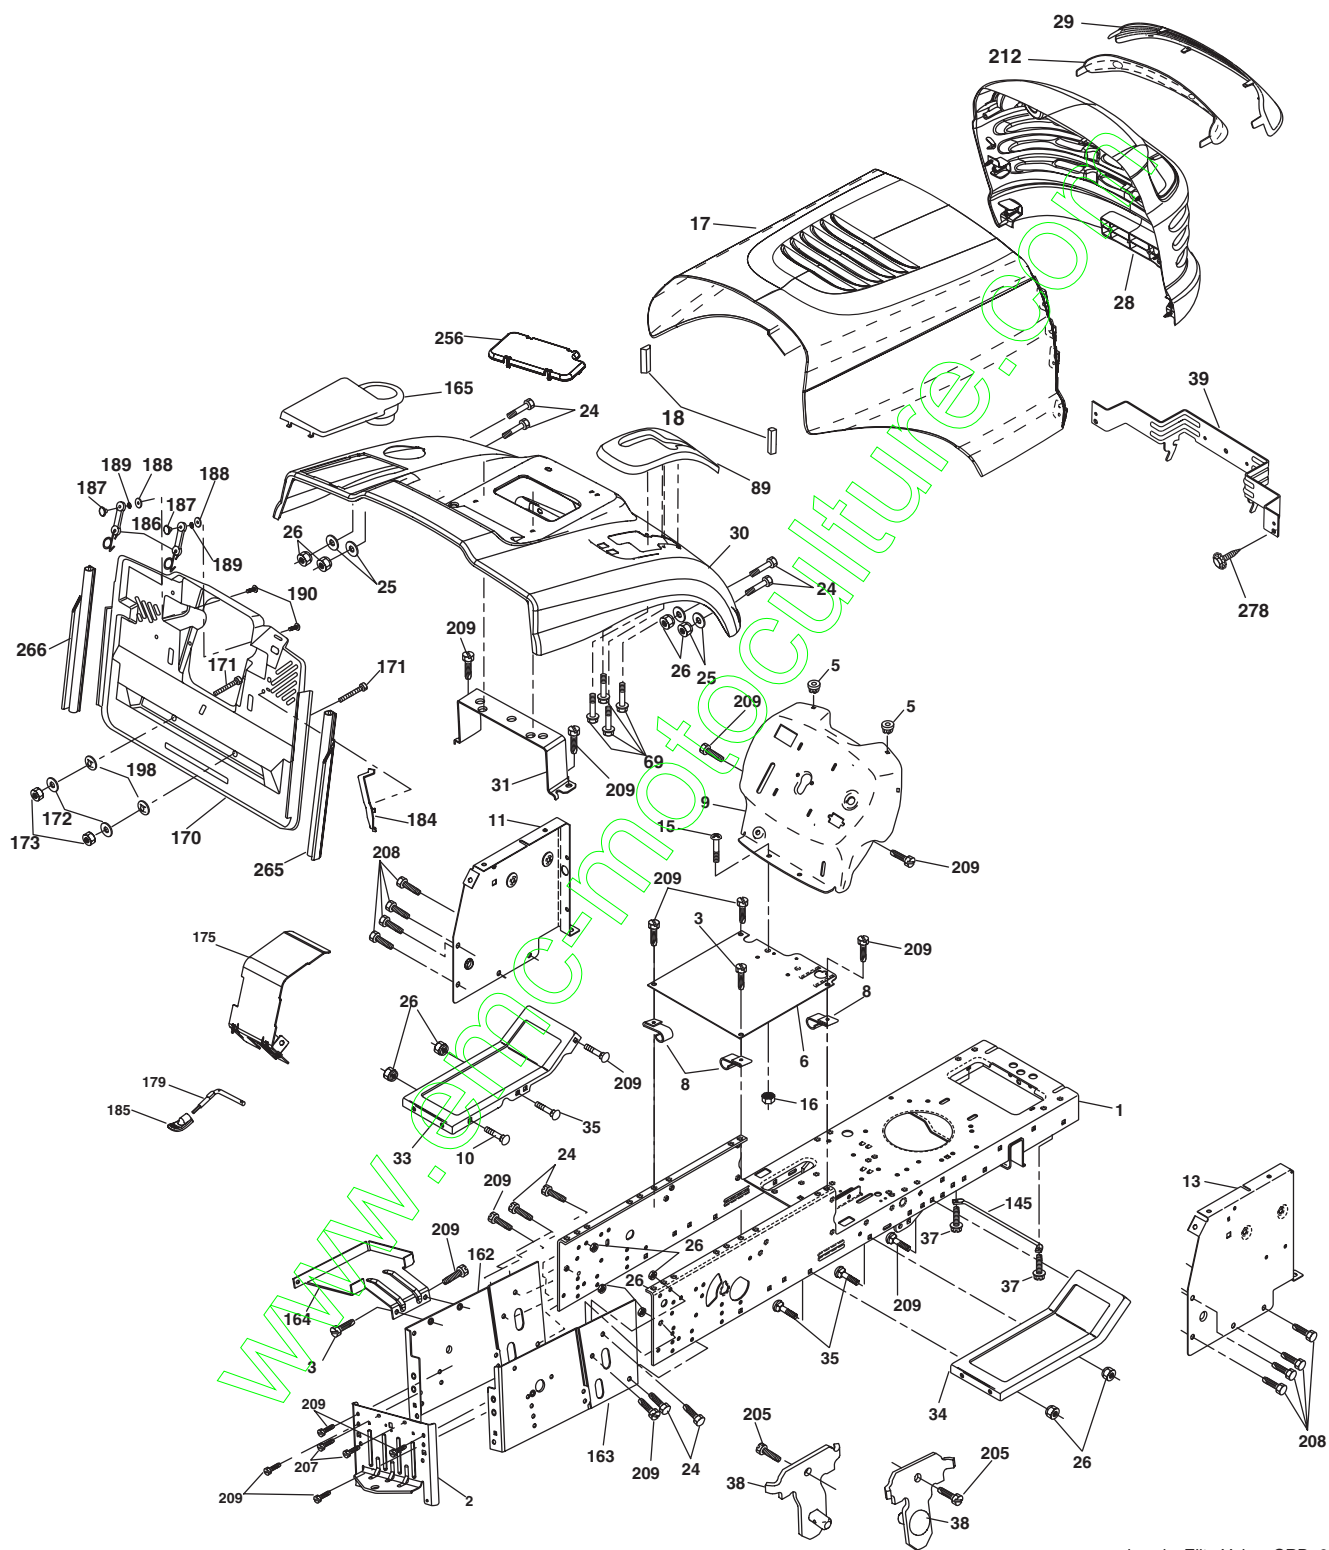

chassis\_Elite Value\_CRD\_6

# REPAIR PARTS


TRACTOR- -MODEL NO. MBA1492BRK (96061001900) PRODUCT NO. 964 77 35-01  
CHASSIS AND ENCLOSURES

| KEY NO. | PART NO.            | DESCRIPTION                                  | KEY NO. | PART NO.            | DESCRIPTION                      |
|---------|---------------------|----------------------------------------------|---------|---------------------|----------------------------------|
| 1       | 532 17 46-20        | Chassis Assembly                             | 145     | 532 15 65-24        | Rod Pivot Chassis/Hood           |
| 2       | 532 18 03-84        | Drawbar                                      | 162     | 532 18 03-82        | Bracket Exten Chassis Lh CRD     |
| 3       | 817 06 06-12        | Screw 3/8-16 x .75 smqml Tap/ R.Z            | 163     | 532 18 03-83        | Bracket Exten Chassis Rh CRD     |
| 5       | 532 15 52-72        | Bumper Hood/Dash                             | 164     | 532 16 56-05        | Support Battery CRD              |
| 6       | 532 18 44-19        | Saddle                                       | 165     | 532 18 13-56        | Cover Battery CRD                |
| 8       | 532 12 64-71        | Clip Insulator 13/32 Mtg. Hole               | 170     | 532 17 88-62        | Backplate Asm. CRD               |
| 9       | <b>532 19 46-88</b> | Dash                                         | 171     | 872 14 06-20        | Bolt Hex 3/8-16 x 2-1/2 Gr. 5    |
| 10      | 872 14 06-08        | Bolt, Carriage 3/8-16 x 3/4                  | 172     | 819 13 20-16        | Washer 13/32 x 1-1/4 x 16 Ga.    |
| 11      | 532 17 49-96        | Panel, Dash, L.H.                            | 173     | 873 51 06-00        | Nut, Keps Hex 3/8-16 UNC         |
| 13      | 532 18 69-52        | Panel, Asm. Dash R.H.                        | 175     | 532 18 82-03        | Guard Door Rear CRD              |
| 15      | 874 18 05-12        | Screw, Machine, Truss Head 5/16-18 unc x 3/4 | 179     | 532 18 82-02        | Rod Pivot FBI CRD                |
| 16      | 873 51 05-00        | Nut                                          | 184     | 532 17 46-62        | Bracket Actuator Bagger CRD      |
| 17      | 532 19 00-85        | Hood Assembly                                | 185     | 532 18 11-01        | Knob Rod Brake Parking           |
| 18      | <b>532 18 49-21</b> | Bumper Hood                                  | 186     | 532 16 07-93        | Latch Asm Mulch/Bagger           |
| 24      | 874 78 06-16        | Bolt                                         | 187     | 532 12 50-04        | Nut Weld                         |
| 25      | 819 13 13-12        | Washer 13/32 x 13/16 x 12 Ga.                | 188     | 819 06 12-16        | Washer #10                       |
| 26      | 873 80 06-00        | Nut                                          | 189     | 810 07 10-00        | Washer Lock #10                  |
| 28      | 532 18 35-52        | Grille/Lens Asm (Includes Nos. 29 & 212)     | 190     | 871 08 10-10        | Screw Pan Hd Phillip 10-24 x 5/8 |
| 29      | 532 18 58-46        | Lens, Grille                                 | 198     | 532 16 89-37        | Nut Push                         |
| 30      | 532 18 55-50        | Fender                                       | 205     | 817 49 06-08        | Screw                            |
| 31      | 532 16 51-56        | Bracket, Fender Support                      | 207     | 817 67 05-08        | Screw 5/16-18 x 1/2              |
| 33      | 532 18 55-45        | Footrest, L.H.                               | 208     | 817 67 06-08        | Screw Thdrol 3/8-16 x 1/2        |
| 34      | 532 18 55-46        | Footrest, R.H.                               | 209     | 817 00 06-12        | Screw Hex Wsh Thdrol 3/8-16      |
| 35      | 872 11 06-06        | Bolt                                         | 212     | 532 18 35-50        | Insert Lens Reflective           |
| 37      | 817 49 05-08        | Screw Thdrol 5/16-18 x 1/2 TYT               | 256     | 532 18 13-61        | Cover Fender Rack                |
| 38      | 532 18 17-48        | Pivot Bracket Assembly                       | 265     | 532 18 57-04        | Seal RH Side Bagger              |
| 39      | 532 17 47-14        | Bracket Pivot                                | 266     | 532 18 57-03        | Seal LH Side Bagger              |
| 69      | 532 14 24-32        | Screw Hex Wsh Hi-Lo 1/4-1/2                  | 278     | <b>532 19 16-11</b> | Screw 10 x 3/4 Single Lead Hex   |
| 89      | 532 18 13-88        | Console CRD 6 Sp                             | --      | 532 00 54-79        | Plug                             |
|         |                     |                                              | --      | <b>532 19 39-35</b> | Plug Switch Light                |

**NOTE:** All component dimensions given in U.S. inches.  
1 inch = 25.4 mm.

# REPAIR PARTS

TRACTOR- -MODEL NO. MBA1492BRK (96061001900) PRODUCT NO. 964 77 35-01  
DRIVE

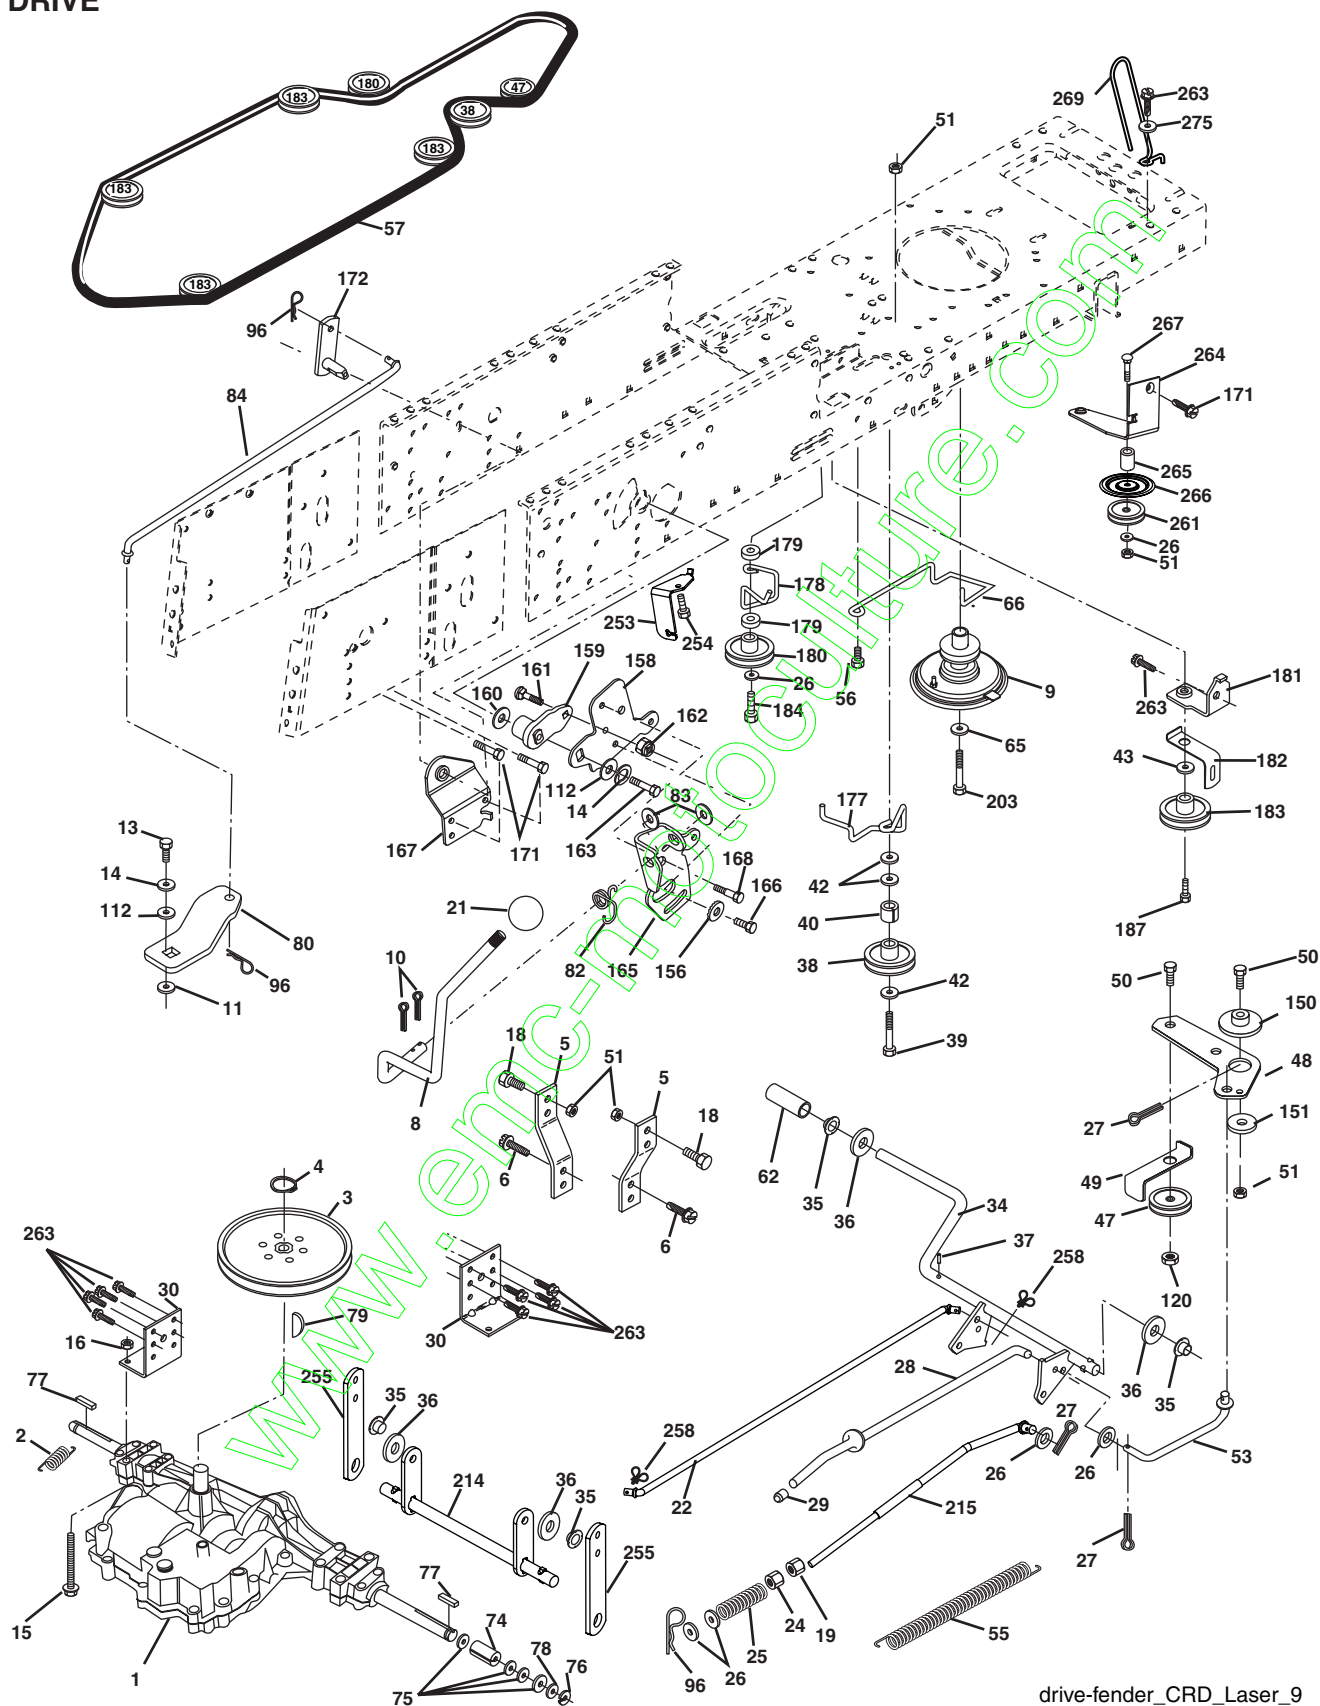

drive-fender\_CRD\_Laser\_9

# REPAIR PARTS


TRACTOR- -MODEL NO. MBA1492BRK (96061001900) PRODUCT NO. 964 77 35-01  
DRIVE

| KEY NO. | PART NO.     | DESCRIPTION                                                                  | KEY NO. | PART NO.     | DESCRIPTION                           |
|---------|--------------|------------------------------------------------------------------------------|---------|--------------|---------------------------------------|
| 1       | -----        | Transaxle Peerless 206-546<br>(Order parts from transaxle manu-<br>facturer) | 80      | 532 14 50-90 | Arm Shift PMST 20" Tires              |
| 2       | 532 14 66-82 | Spring Brake Return                                                          | 82      | 532 16 57-11 | Spring, Torsion                       |
| 3       | 532 16 59-99 | Pulley Transaxle                                                             | 83      | 819 17 12-16 | Washer 17/32 x 3/4 x 16 Ga.           |
| 4       | 812 00 00-28 | Ring Retainer #5100-62                                                       | 84      | 532 16 56-21 | Link Shift CRD Pmst 18" Tires         |
| 5       | 532 12 15-20 | Strap torque 30 degrees                                                      | 96      | 532 12 47-88 | Spring, Retainer 1"                   |
| 8       | 532 16 56-19 | Rod Shift Fender Adjust Lt                                                   | 112     | 819 09 12-10 | Washer 9/32 x 3/4 x 10 Ga.            |
| 9       | 532 18 03-54 | Clutch Noram                                                                 | 120     | 873 90 06-00 | Nut Lock Flg. 3/8-16 unc              |
| 10      | 876 02 04-16 | Pin, Cotter 1/8 x 1                                                          | 145     | 874 49 05-40 | Bolt Hex FGHD 5/16-18 x Gr 5          |
| 11      | 532 10 57-01 | Washer Plate Shf .3888 sq hole                                               | 150     | 532 16 58-50 | Bushing, Bellcrank Grnd Dr            |
| 13      | 874 55 04-12 | Bolt 1/4-28 Unf Gr. 8 w/patch                                                | 151     | 819 13 32-10 | Washer 13/32 x 2 x 10 Ga.             |
| 14      | 810 04 04-00 | Washer, Lock Hvy Helical                                                     | 156     | 532 16 60-02 | Washer Srrd 5/16 ID x 1.125           |
| 16      | 873 80 05-00 | Nut, Lock Hex w/lns 5/16-18 unc                                              | 158     | 532 16 55-89 | Bracket Shift Mount                   |
| 18      | 874 78 06-16 | Bolt Hex 3/8-16 UNC x 1 Gr.5                                                 | 159     | 532 16 54-94 | Hub Tapered Flange Shift Lt           |
| 19      | 873 80 06-00 | Nut, Lock Hex w/Wsh 3/8-16 unc                                               | 160     | 819 29 20-16 | Washer 29/32 x 1-1/4 x 16 Ga.         |
| 21      | 532 10 69-33 | Knob Rd 1/2-13 Plstc Thds Blk                                                | 161     | 872 14 04-06 | Bolt Rdhd Sqnk 1/4-20 x 3/4 Gr. 5     |
| 22      | 532 17 56-07 | Rod, Brake CRD                                                               | 162     | 873 68 04-00 | Nut Crownlock 1/4-20 unc              |
| 24      | 873 35 06-00 | Nut                                                                          | 163     | 874 78 04-16 | Bolt Hex Fin 1/4-20 unc x 1 Gr. 5     |
| 25      | 532 10 68-88 | Spring, Rod, Brake                                                           | 164     | 819 09 10-10 | Washer 5/8 x .281 x 10 Ga.            |
| 26      | 819 13 13-16 | Washer 13/32 x 13/16 x 16 Ga.                                                | 165     | 532 16 56-23 | Bracket Pivot Lever                   |
| 27      | 876 02 04-12 | Pin, Cotter 1/8 x 3/4                                                        | 166     | 532 16 68-80 | Screw 5/16-18 x 5/8                   |
| 28      | 532 17 57-65 | Rod, Parking Brake                                                           | 167     | 532 16 55-88 | Bracket Support Shift CRD             |
| 29      | 532 07 16-73 | Cap, Brake Parking Black                                                     | 168     | 532 16 54-92 | Bolt Shoulder 5/16-18 x .561          |
| 30      | 532 17 49-73 | Bracket, Mfg. Transaxle                                                      | 171     | 817 49 06-08 | Screw Thdrol 3/8-16 x 1/2 Ty-Tt       |
| 34      | 532 17 55-78 | Shaft, Asm Pedal Foot                                                        | 172     | 532 16 56-35 | Shaft Asm Shift Front CRD PMST        |
| 35      | 532 12 01-83 | Bearing, Nylon                                                               | 177     | 532 16 59-32 | Keeper Flat Idler 3.06" CRD           |
| 36      | 819 21 16-16 | Washer 21/32 x 1 x 16 Ga.                                                    | 178     | 532 16 59-33 | Keeper Belt Idler 1.88" CRD           |
| 37      | 532 12 49-63 | Pin, Roll 3/16 x 1"                                                          | 179     | 532 12 09-58 | Washer Sintered                       |
| 38      | 532 16 59-36 | Pulley, Flat                                                                 | 180     | 532 16 56-30 | Pulley Flat Idler                     |
| 39      | 874 76 06-44 | Bolt Fin Hex 3/8-16 unc x 2-3/4                                              | 181     | 532 18 02-11 | Bracket Idler Ground Drive CRD        |
| 40      | 532 12 49-65 | Spacer, Split 395 x 59 Bzp                                                   | 182     | 532 18 26-82 | Keeper Belt 2.5" Od V-Idler CRD       |
| 42      | 819 13 13-12 | Washer 13/32 x 13/16 x 12 Ga.                                                | 183     | 532 17 90-50 | Pulley V-Idler                        |
| 43      | 819 11 10-12 | Washer 11/32 x 5/8 x 12 Ga.                                                  | 184     | 817 49 06-44 | Screw Hexwsh Thdrol<br>3/8-16 x 2-3/4 |
| 47      | 532 12 77-83 | Pulley, Idler, V Groove, Plstc                                               | 187     | 817 58 05-20 | Screw 5/16-18 x 1.25                  |
| 48      | 532 15 44-07 | Bellcrank Clutch Grnd Drv                                                    | 203     | 871 17 07-80 | Bolt Hex 7/16-20 x 5                  |
| 49      | 532 12 32-05 | Retainer, Belt Style Spring                                                  | 214     | 532 17 56-09 | Shaft Asm Brake                       |
| 50      | 872 11 06-12 | Bolt 3/8-16 x 1-1/2 Gr. 5                                                    | 215     | 532 17 56-51 | Rod Brake Secondary                   |
| 51      | 873 68 06-00 | Nut, Crownlock 3/8-16 unc                                                    | 250     | 817 06 06-12 | Screw 3/8-16 x .75                    |
| 53      | 532 10 57-10 | Link, Clutch 7.66                                                            | 253     | 532 17 50-28 | Bracket Cable Chassis                 |
| 55      | 532 10 57-09 | Spring, Return, Clutch                                                       | 254     | 817 06 06-16 | Screw 3/8-16 x 1                      |
| 56      | 817 06 06-20 | Screw 3/8-16 x 1-1/4                                                         | 255     | 532 17 56-08 | Brace Shaft Brake Mtg.                |
| 57      | 532 16 56-31 | V-Belt Kev PMST CRD                                                          | 258     | 532 17 80-62 | Clip Retainer                         |
| 62      | 532 12 48-72 | Cover, Pedal                                                                 | 261     | 532 13 14-94 | Pulley Idler                          |
| 65      | 810 04 07-00 | Washer                                                                       | 263     | 817 00 06-12 | Screw 3/8-16 x 3/4                    |
| 66      | 532 15 47-78 | Keeper, Belt Engine F-Proof                                                  | 264     | 532 18 19-95 | Bracket Clutch Mounting               |
| 74      | 532 13 70-57 | Spacer Axle                                                                  | 265     | 532 18 20-13 | Spacer Idler Chassis                  |
| 75      | 532 12 17-49 | Washer 25/32 x 1-1/4 x 16 Ga.                                                | 266     | 532 18 20-61 | Shield Idler                          |
| 76      | 812 00 00-01 | Ring, E                                                                      | 267     | 872 14 06-26 | Bolt Rdhd 3/8-16 unc x 3-1/4          |
| 77      | 532 12 35-83 | Key, Square                                                                  | 269     | 532 18 24-02 | Guard Muffler RH                      |
| 78      | 532 12 17-48 | Washer 25/32 x 1-5/8 x 16 Ga.                                                | 275     | 819 13 16-14 | Washer 13/32 x 1 x 14 Ga.             |
| 79      | 532 12 50-96 | Key Woodruff                                                                 |         |              |                                       |

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

# REPAIR PARTS

TRACTOR- -MODEL NO. MBA1492BRK (96061001900) PRODUCT NO. 964 77 35-01  
STEERING ASSEMBLY

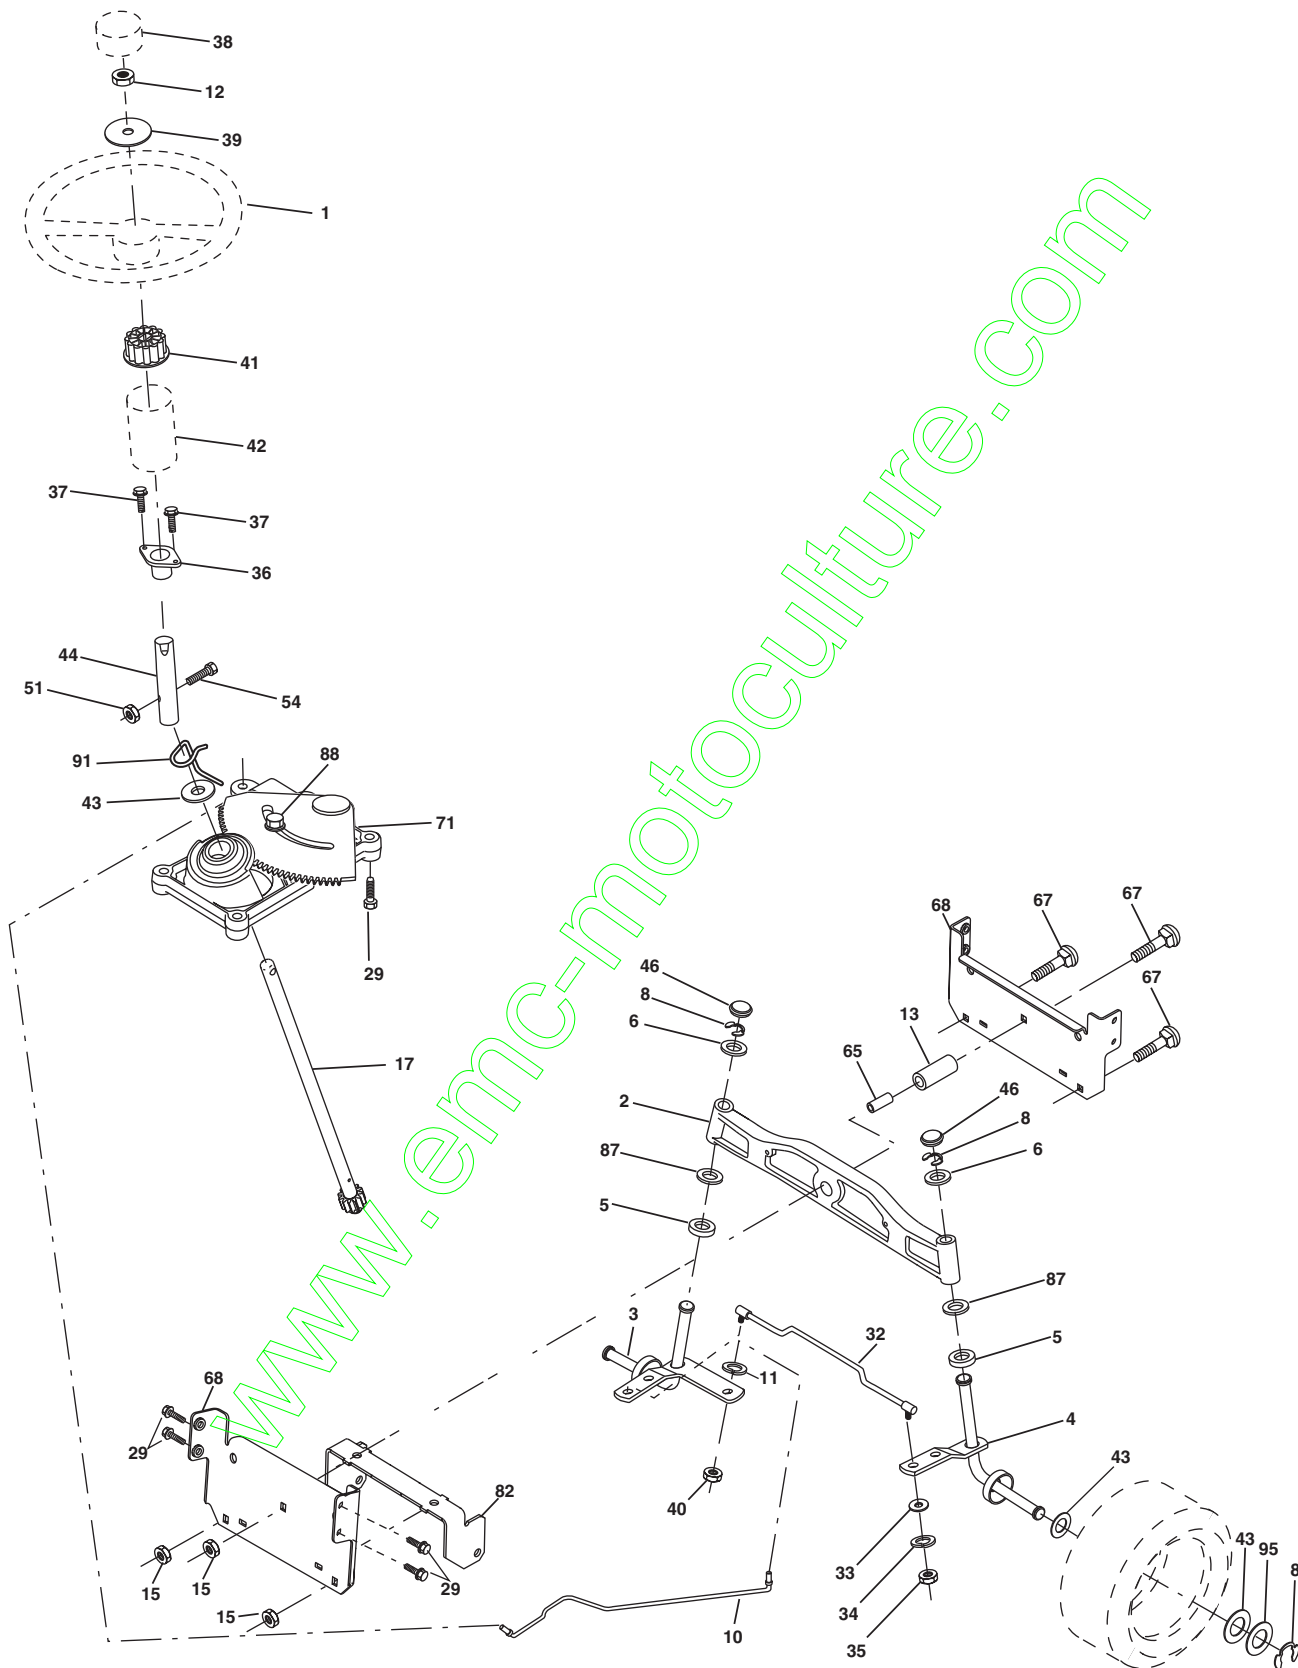

# REPAIR PARTS


TRACTOR- -MODEL NO. MBA1492BRK (96061001900) PRODUCT NO. 964 77 35-01  
STEERING ASSEMBLY

| KEY<br>NO. | PART<br>NO.         | DESCRIPTION                      |
|------------|---------------------|----------------------------------|
| 1          | <b>532 18 67-80</b> | Steering Wheel                   |
| 2          | 532 18 47-06        | Axle Asm                         |
| 3          | 532 16 98-40        | Spindle Assembly, L.H.           |
| 4          | 532 16 98-39        | Spindle Assembly, R.H.           |
| 5          | 532 12 49-31        | Washer, Thrust .75 x 1.230       |
| 6          | 532 12 17-48        | Washer 25/32 x 1-5/8 x 16 Gauge  |
| 8          | 812 00 00-29        | Ring, Klip                       |
| 10         | 532 17 51-21        | Link, Drag                       |
| 11         | 810 04 06-00        | Washer, Lock                     |
| 12         | 873 94 08-00        | Nut Hex Jam Toplock 1/2-20 Unf   |
| 13         | 532 13 65-18        | Spacer Brg Axle Front            |
| 15         | 532 14 52-12        | Nut, Hex Flange Lock             |
| 17         | 532 18 06-41        | Shaft Assembly, Steering         |
| 29         | 817 06 06-12        | Screw 3/8-16 x 3/4               |
| 32         | 532 17 01-62        | Rod, Tie                         |
| 33         | 819 11 12-16        | Washer 11/32 x 3/4 x 16 Ga.      |
| 34         | 810 04 05-00        | Washer Lock Hvy Hlcl Spr 5/16    |
| 35         | 873 54 05-00        | Crownlock Nut 5/16-24 Unf        |
| 36         | 532 15 50-99        | Bushing, Steering                |
| 37         | 532 15 29-27        | Screw TT #10-32 x 5 x 3/8 Flange |
| 38         | <b>532 19 29-16</b> | Cap Wheel Steering               |
| 39         | 819 18 38-12        | Washer 9/16 ID x 2 3/8 OD 12G    |
| 40         | 532 12 47-01        | Nut Lock Center 3/8-24 Unf       |
| 41         | 532 18 67-37        | Adaptor, Steering Wheel          |
| 42         | 532 16 96-33        | Boot, Steering Dash P/L Mtl      |
| 43         | 532 12 17-49        | Washer 25/32 x 1-1/4 x 16 Gauge  |
| 44         | 532 18 06-40        | Extension Steering               |
| 46         | 532 12 12-32        | Cap, Spindle                     |
| 51         | 873 54 04-00        | Nut Crownlock 1/4-28             |
| 54         | 871 13 04-20        | Bolt Hex 1/4-28 Unf x 1-1/4      |
| 65         | 532 16 03-67        | Spacer Brace Axle                |
| 67         | 872 14 06-18        | Bolt Rdhd Sq 3/8-16 x 2-1/4      |
| 68         | 532 16 98-27        | Brace Axle                       |
| 71         | 532 17 51-46        | Steering Asm.                    |
| 82         | 532 16 98-35        | Bracket Susp Chassis Front 15"   |
| 87         | 532 17 39-66        | Washer Flat .781 x 1-1/2 x .14   |
| 88         | 532 17 51-18        | Bolt Shoulder 7/16-20 UNC        |
| 91         | 532 17 55-53        | Clip Steering                    |
| 95         | 532 18 89-67        | Washer Hardened                  |

**NOTE:** All component dimensions given in U.S. inches.  
1 inch = 25.4 mm.

# REPAIR PARTS

TRACTOR- -MODEL NO. MBA1492BRK (96061001900) PRODUCT NO. 964 77 35-01  
SEAT ASSEMBLY

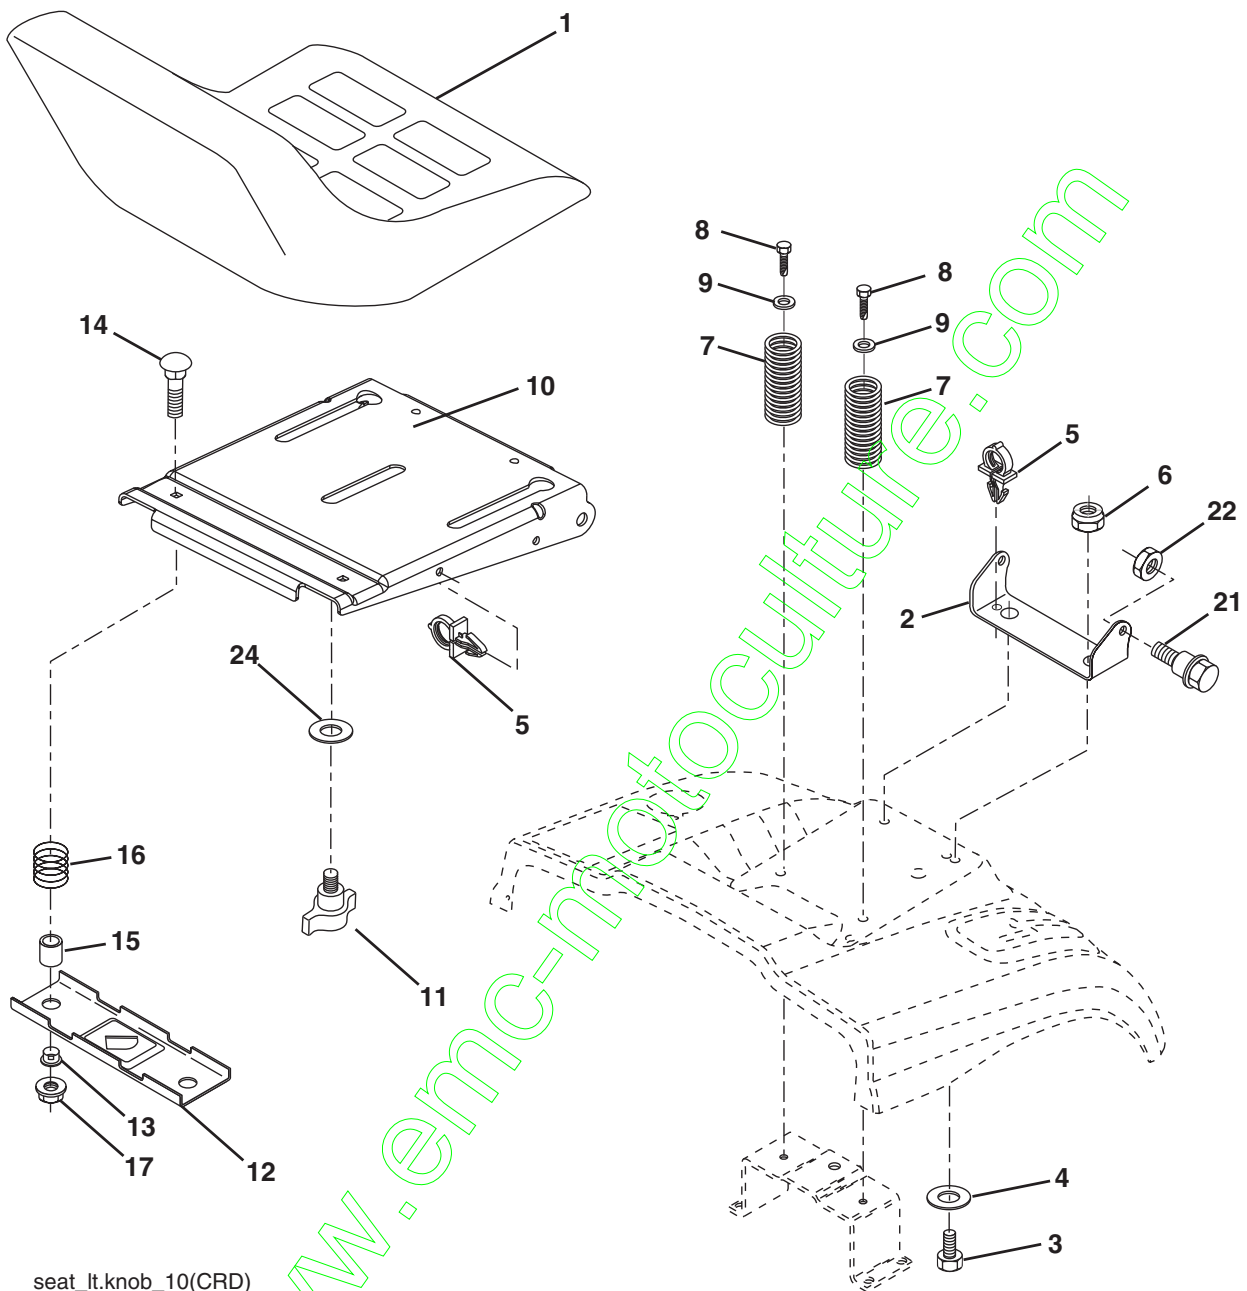

seat\_lt.knob\_10(CRD)


| KEY NO. | PART NO.     | DESCRIPTION                      |
|---------|--------------|----------------------------------|
| 1       | 532 18 87-05 | Seat                             |
| 2       | 532 18 01-66 | Bracket Pnt Pivot Seat (blk )    |
| 3       | 871 11 06-16 | Bolt Fin Hex 3/8-16 x 1          |
| 4       | 819 13 16-10 | Washer Flat 13/32 x 1 x 10 Ga.   |
| 5       | 532 14 50-06 | Clip Push In Hinged              |
| 6       | 873 80 06-00 | Nut Lock w/Ins. 3/8-16           |
| 7       | 532 12 41-81 | Spring Seat Cprsn 2 250 Blk Zi   |
| 8       | 817 00 06-16 | Screw 3/8-16 X 1.5 Smgml Tap/R.Z |
| 9       | 819 13 16-14 | Washer 13/32 X 1 X 14 Ga         |
| 10      | 532 18 01-86 | Pan Assembly Seat                |
| 11      | 532 16 63-69 | Knob Seat Adj. Wingnut           |

| KEY NO. | PART NO.     | DESCRIPTION                    |
|---------|--------------|--------------------------------|
| 12      | 532 12 12-46 | Bracket Pnt Mounting Switch    |
| 13      | 532 12 12-48 | Bushing Snap Blk Nyl 50 Id     |
| 14      | 872 05 04-12 | Bolt Rdhd Sht Nk 1/4-20x1-1/2  |
| 15      | 532 13 43-00 | Spacer Split                   |
| 16      | 532 12 12-50 | Spring Cprsn Plate SW 1.310 Ga |
| 17      | 532 12 39-76 | Nut Lock 1/4 Lge Flg Gr 5 Zinc |
| 21      | 532 17 18-52 | Bolt Shoulder 5/16-18 Unc-2A   |
| 22      | 873 80 05-00 | Nut Hex Lock w/Ins 5/16-18     |
| 24      | 819 17 19-12 | Washer 17/32 X 1-3/16 X 12 Ga. |

**NOTE:** All component dimensions given in U.S. inches.  
1 inch = 25.4 mm

# REPAIR PARTS


TRACTOR- -MODEL NO. MBA1492BRK (96061001900) PRODUCT NO. 964 77 35-01  
DECALS

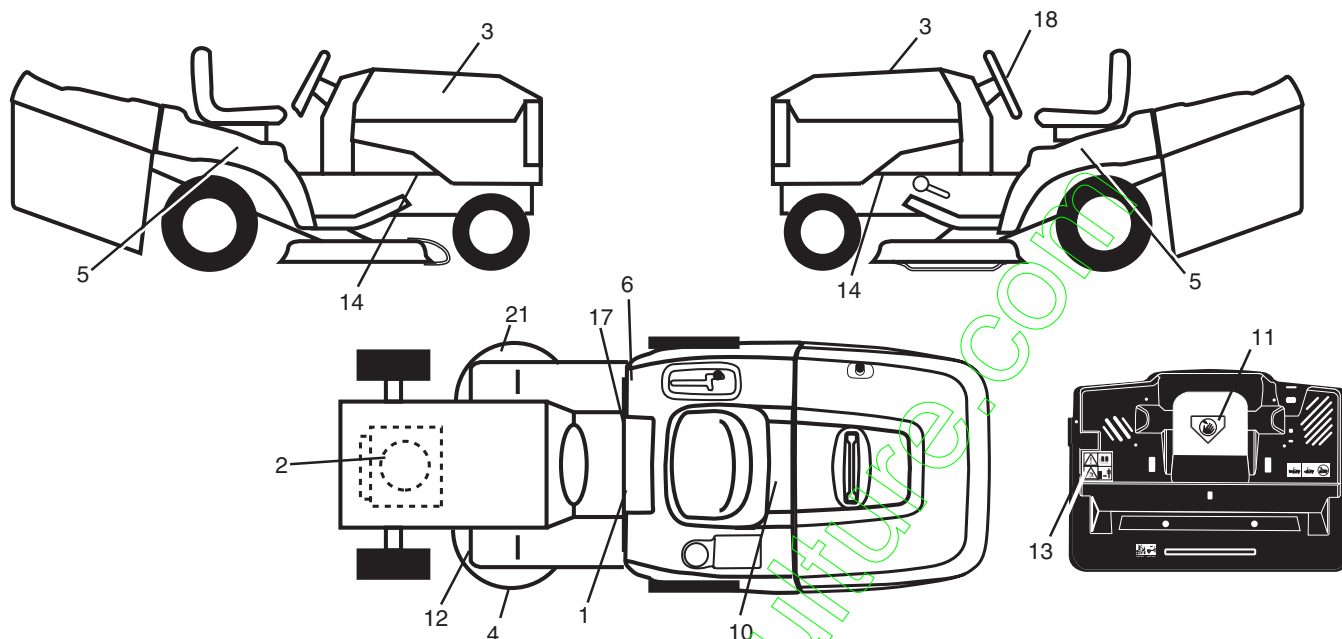

| KEY NO. | PART NO.            | DESCRIPTION                   |
|---------|---------------------|-------------------------------|
| 1       | 532 14 54-98        | Decal Read Owner's Manual Sym |
| 2       | <b>532 18 47-67</b> | Decal Hp Engine               |
| 3       | 532 17 16-68        | Decal Hood                    |
| 4       | 532 18 78-11        | Decal Deck Enviro             |
| 5       | <b>532 19 42-06</b> | Decal Fender                  |
| 6       | 532 18 04-32        | Decal 100 DB/CE               |
| 10      | 532 14 50-05        | Decal Bat Dan/Poi P/L Sym Wpn |
| 11      | 532 18 21-66        | Decal Mower Cut Finger Symbol |
| 12      | 532 15 97-37        | Decal Brake/Clutch Symbol Lt  |
| 13      | 532 18 04-35        | Decal Warn Back Plate CRD     |

| KEY NO. | PART NO.            | DESCRIPTION                |
|---------|---------------------|----------------------------|
| 14      | 532 15 97-36        | Decal Chassis Hot Muffler  |
| 17      | 532 14 08-37        | Decal Saddle Brake Parking |
| 18      | 532 16 79-70        | Decal Ins Strg Whl         |
| 21      | 532 16 62-86        | Decal Deck Sch 92 CRD      |
| —       | 532 13 83-11        | Decal Lift Handle          |
| —       | 532 18 10-91        | Pad FTREST LH              |
| —       | 532 18 10-90        | Pad FTREST RH              |
| —       | 532 18 26-21        | Decal Bagger Frame         |
| —       | <b>532 19 33-59</b> | Manual Operator's (Euro)   |
| —       | <b>532 19 42-22</b> | Manual Parts               |

## WHEELS & TIRES

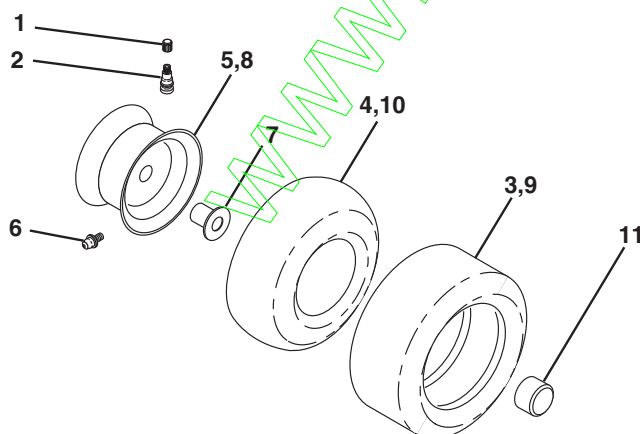


| KEY NO. | PART NO.            | DESCRIPTION                    |
|---------|---------------------|--------------------------------|
| 1       | 532 05 91-92        | Cap Value Tire                 |
| 2       | 532 06 51-39        | Stem Value                     |
| 3       | <b>532 12 41-57</b> | Tire F Ts 15 x 6 0 - 6 Service |
| 4       | 532 05 99-04        | Tube Inner Front #35060        |
| 5       | 532 18 33-37        | Rim Asm 6" front Service       |
| 6       | 532 12 49-57        | Fitting Grease                 |
| 7       | 532 12 49-59        | Bearing Flange                 |
| 8       | 532 18 33-38        | Rim Asm 8" rear Service        |
| 9       | <b>532 12 39-69</b> | Tire R Ts 18 x 8.5-8 Service   |
| 10      | 532 12 49-26        | Tube Rear 9.5 x 8 Service      |
| 11      | 532 17 50-39        | Cap Axle Blk 1 50 x 1 00       |
| --      | 532 14 43-34        | Sealant, Tire (10 oz. tube)    |

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

# REPAIR PARTS

TRACTOR- -MODEL NO. MBA1492BRK (96061001900) PRODUCT NO. 964 77 35-01  
ENGINE

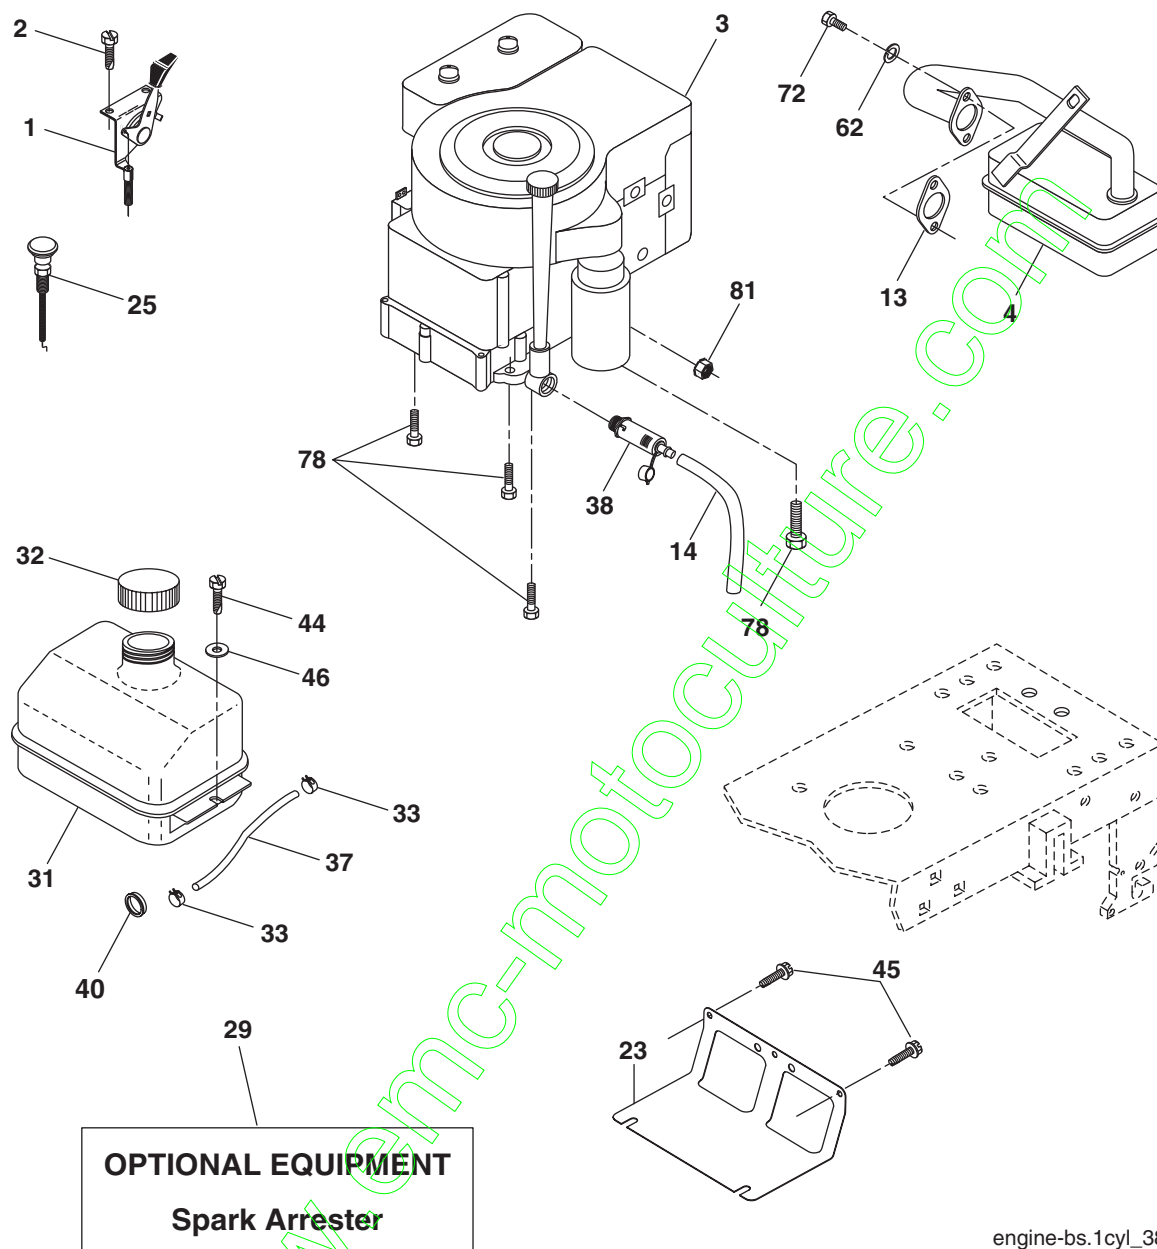

engine-bs.1cyl\_38


| KEY NO. | PART NO.            | DESCRIPTION                                                            |
|---------|---------------------|------------------------------------------------------------------------|
| 1       | 532 17 05-51        | Control Throttle /Choke Flag                                           |
| 2       | 817 72 04-08        | Screw Hex Thd Cut 1/4-20 x 1/2                                         |
| 3       | -----               | Engine Briggs & Stratton 280H07 (Order Parts from Engine Manufacturer) |
| 4       | <b>532 13 73-52</b> | Muffler Exhaust B&S Lt                                                 |
| 13      | 532 16 52-91        | Gasket 1 313 Id Tin Plated                                             |
| 14      | 532 14 84-56        | Tube Drain Oil Easy                                                    |
| 23      | 532 16 98-37        | Shield Browning/Debris Guard                                           |
| 25      | <b>532 19 06-95</b> | Control Choke                                                          |
| 29      | 532 13 71-80        | Arrestor Spark                                                         |
| 31      | <b>532 18 77-50</b> | Tank Fuel 1.25 Fr                                                      |
| 32      | 532 14 05-27        | Cap Asm Fule Top Vent N/Lany                                           |
| 33      | 532 12 34-87        | Clamp Hose Blk                                                         |

| KEY NO. | PART NO.            | DESCRIPTION                      |
|---------|---------------------|----------------------------------|
| 37      | 532 13 70-40        | Line Fuel 20"                    |
| 38      | 532 18 16-54        | Plug Drain Oil Easy              |
| 44      | 817 67 04-12        | Screw Hexwsh Thdrol 1/4-20 x 3/4 |
| 45      | 817 00 06-12        | Screw Hexwsh Thdr 3/8-16 x 3/4   |
| 46      | 819 09 14-16        | Washer 9/32 x 7/8 x 16 Ga.       |
| 62      | <b>810 01 05-00</b> | Washer Split                     |
| 72      | <b>871 07 05-12</b> | Screw Hex Hd Cap 5/16-18 x 3/4   |
| 78      | 817 06 06-20        | Screw 3/8-16 x 1-1/4 Smgml Tap/R |
| 81      | 873 51 04-00        | Nut Keps Hex 1/4-20 unc          |

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

# REPAIR PARTS

TRACTOR- -MODEL NO. MBA1492BRK (96061001900) PRODUCT NO. 964 77 35-01  
MOWER LIFT

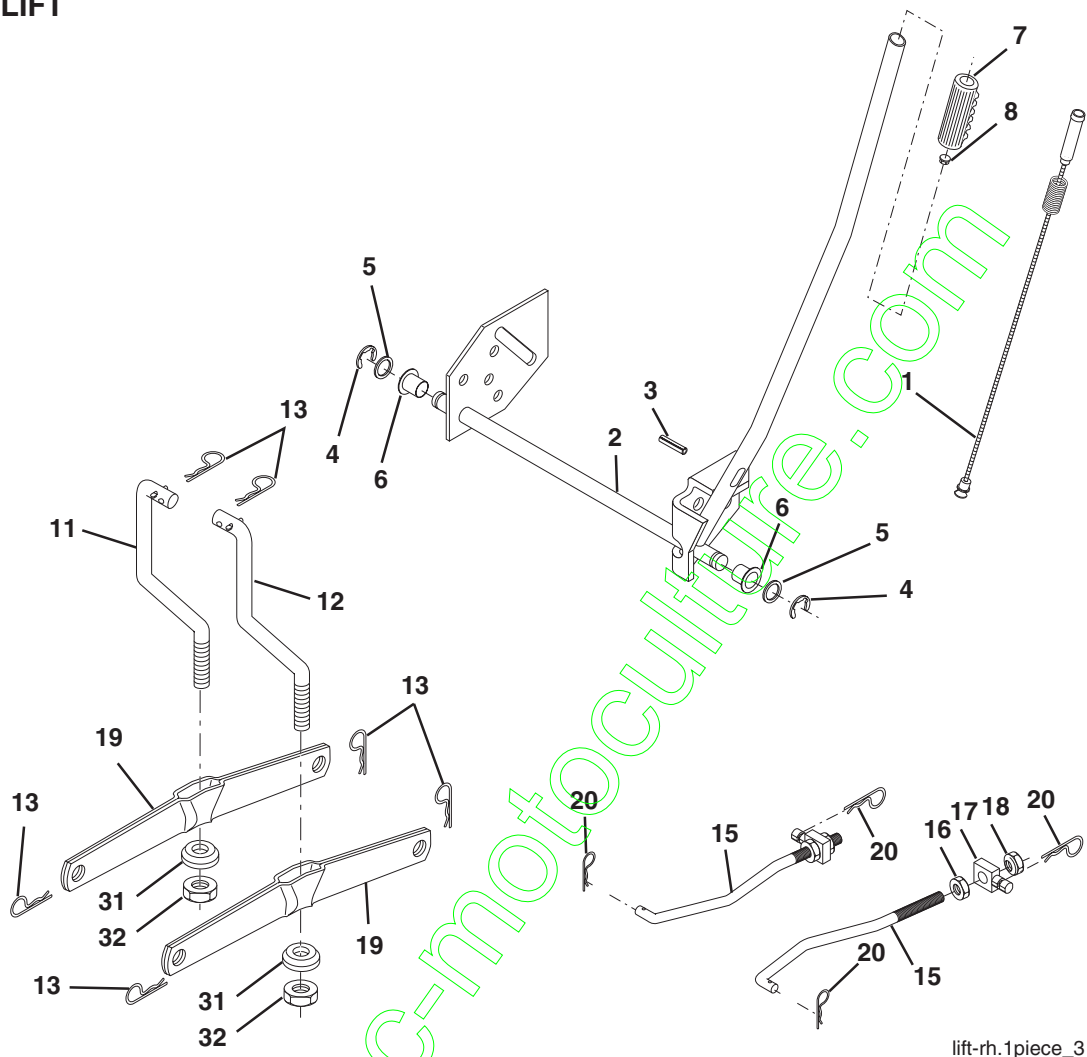

lift-rh.1piece\_3


| KEY NO. | PART NO.     | DESCRIPTION                        |
|---------|--------------|------------------------------------|
| 1       | 532 15 94-61 | Washer Asm Inner Spring W/ Plunger |
| 2       | 532 15 94-76 | Shaft Asm. Lift                    |
| 3       | 532 17 89-81 | Pin Groove                         |
| 4       | 812 00 00-02 | E Ring #5133-62                    |
| 5       | 819 21 16-21 | Washer 21/32 x 1 x 21 Ga.          |
| 6       | 532 12 01-83 | Bearing Nylon                      |
| 7       | 532 10 94-13 | Grip Handle                        |
| 8       | 532 12 45-26 | Button Plunger                     |
| 11      | 532 16 58-29 | Link Asm Lift L.H.                 |
| 12      | 532 16 58-31 | Link Asm Lift R.H.                 |

| KEY NO. | PART NO.     | DESCRIPTION               |
|---------|--------------|---------------------------|
| 13      | 532 12 46-70 | Retainer Spring           |
| 15      | 532 17 32-88 | Link Front                |
| 16      | 873 35 08-00 | Nut Jam Hex 1/2-13 unc    |
| 17      | 532 17 56-89 | Trunnion Blk Zinc         |
| 18      | 873 80 08-00 | Nut Lockwasher 1/2-13 unc |
| 19      | 532 13 98-68 | Arm Suspension Mower      |
| 20      | 532 16 35-52 | Retainer Spring           |
| 31      | 532 16 98-65 | Bearing, Pvt. Lift.       |
| 32      | 873 54 06-00 | Nut Crownlock 3/8-24      |

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

# REPAIR PARTS

TRACTOR- -MODEL NO. MBA1492BRK (96061001900) PRODUCT NO. 964 77 35-01  
MOWER

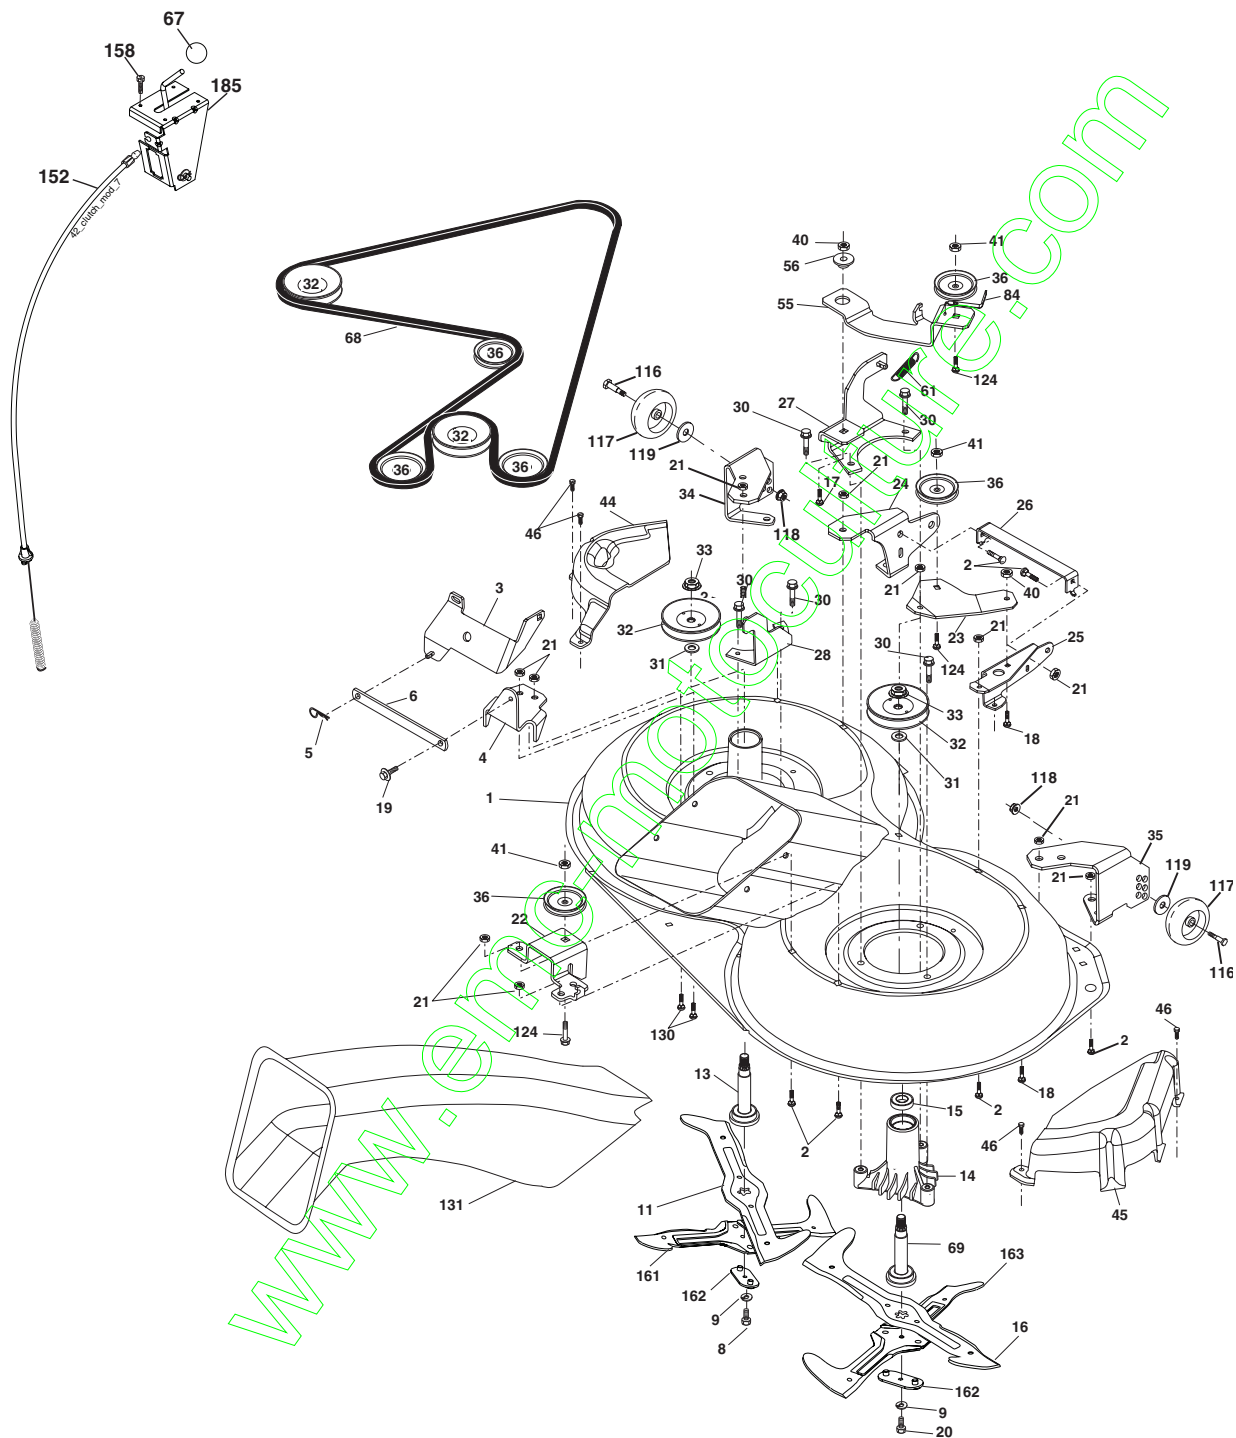

36(92cm)\_deck-elect.(CRD)\_1

# REPAIR PARTS


TRACTOR- -MODEL NO. MBA1492BRK (96061001900) PRODUCT NO. 964 77 35-01  
MOWER

| KEY NO. | PART NO.     | DESCRIPTION                       | KEY NO. | PART NO.     | DESCRIPTION                                                                                       |
|---------|--------------|-----------------------------------|---------|--------------|---------------------------------------------------------------------------------------------------|
| 1       | 532 16 55-52 | Housing Asm. Mower 92 CRD         | 41      | 873 90 06-00 | Nut Lock Flg 3/8-16 unc                                                                           |
| 2       | 872 14 05-06 | Bolt Rdhd Sqnk 5/16-18 unc x 3/4  | 44      | 532 17 55-38 | Cover Mandrel Lh 92 CRD                                                                           |
| 3       | 532 16 55-69 | Bracket Asm. S-Bar Chass 92 CRD   | 45      | 532 17 55-39 | Cover Mandrel Rh 92 CRD                                                                           |
| 4       | 532 16 55-58 | Bracket Bar Sway Deck 92 CRD      | 46      | 532 13 77-29 | Screw Thd Roll 1/4-20 x 5/8                                                                       |
| 5       | 532 12 46-70 | Retainer Spring                   | 55      | 532 16 54-45 | Arm Idler 92 CRD                                                                                  |
| 6       | 532 16 55-57 | Bar Sway 92 CRD                   | 56      | 532 16 57-23 | Spacer Retainer Mower                                                                             |
| 8       | 532 18 17-12 | Bolt 3/8-24 x 1.25 Gr8 Patched    | 61      | 532 16 59-45 | Spring Tension Belt                                                                               |
| 9       | 810 03 06-00 | Washer Lock Hvy 3/8 Unplated      | 67      | 532 10 69-32 | Knob Rd 3/8-16 Plstc Thds Blk                                                                     |
| 11      | 532 18 63-85 | Blade 3-1 Lh 92 CRD               | 68      | 532 18 02-17 | Hex-Belt 92 Mower 92                                                                              |
| 13      | 532 13 76-45 | Shaft Asm. W/Lower Bearing        | 69      | 532 16 54-82 | Shaft Asm W/Lwr Brg Rh Thd CRD                                                                    |
| 14      | 532 12 87-74 | Housing Mandrel Vented (Machd)    | 84      | 532 15 60-85 | Keeper Belt Idler                                                                                 |
| 15      | 532 11 04-85 | Bearing Ball Mandrel              | 116     | 532 18 42-19 | Bolt Shoulder                                                                                     |
| 16      | 532 18 63-86 | Blade 3-1 Rh 92 CRD               | 117     | 532 13 39-57 | Wheel Gage Donut Wide                                                                             |
| 17      | 872 14 06-10 | Bolt Carriage 3/8-16 x 1-1/4      | 118     | 873 93 06-00 | Nut Centerlock 3/8-16 Unc                                                                         |
| 18      | 872 11 06-06 | Bolt Rdhd Sqnk 3/8-16 x 3/4 Gr. 5 | 119     | 819 12 14-14 | Washer 3/8 x 7/8 x 14 Ga.                                                                         |
| 19      | 532 13 28-27 | Bolt Shoulder 5/16-18 Thd Form    | 124     | 872 11 06-12 | Bolt Carr Sh 3/8-16 x 1-1/2 Gr5                                                                   |
| 20      | 532 18 17-13 | Bolt 3/8-24 x 1.25 Gr8 Ptch Lhthd | 130     | 872 11 05-06 | Bolt Rdhdsqnk 5/16-18 Unc x 3/4                                                                   |
| 21      | 873 68 05-00 | Nut Crown Lock 5/16-18            | 131     | 532 16 56-61 | Chute Bagger CRD 92cm                                                                             |
| 22      | 532 16 52-43 | Bracket Idler Sprt RR 92 CRD      | 152     | 532 17 60-74 | Clutch Cable CRD                                                                                  |
| 23      | 532 16 54-46 | Bracket Idler Sprt RF 92 CRD      | 158     | 817 72 04-08 | Screw Hex Thd Cut 1/4-20 x 1/2                                                                    |
| 24      | 532 16 52-42 | Bracket Suspension LF 92 CRD      | 161     | 532 18 63-87 | Blade Cross LH                                                                                    |
| 25      | 532 16 52-44 | Bracket Suspension RF 92 CRD      | 162     | 532 18 08-78 | Adapter Blade Cross                                                                               |
| 26      | 532 16 52-37 | Brace Support Susp Frt CRD        | 163     | 532 18 63-88 | Blade Cross RH                                                                                    |
| 27      | 532 16 55-68 | Bracket Asm. Susp RR 92 CRD       | 185     | 532 18 82-34 | Head Asm. Cable Clutch                                                                            |
| 28      | 532 16 55-67 | Bracket Asm. Susp LR 92 CRD       | --      | 532 18 18-57 | Mandrel Asm Service                                                                               |
| 30      | 532 17 39-84 | Screw Thd Rolling Washer Head     | --      | 532 18 18-58 | Mandrel Asm CRD Lh Threads SVC                                                                    |
| 31      | 532 18 76-90 | Washer Spacer Mandrel             | --      | 532 18 82-53 | Replacement Mower Complete (Std. Deck - Order separately gauge wheel components key nos. 116-119) |
| 32      | 532 15 35-31 | Mandrel Pulleys 36 & 46           |         |              |                                                                                                   |
| 33      | 532 17 83-42 | Nut Flg Top Lock Cntr B 9/16      |         |              |                                                                                                   |
| 34      | 532 16 52-39 | Bracket Gauge Wheel Lf 92 CRD     |         |              |                                                                                                   |
| 35      | 532 16 52-38 | Bracket Gauge Wheel Rf 92 CRD     |         |              |                                                                                                   |
| 36      | 532 14 67-63 | Pulley Idler V-Groove Dim 4.25    |         |              |                                                                                                   |
| 40      | 873 68 06-00 | Nut Crownlock 3/8-16 unc          |         |              |                                                                                                   |

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

# REPAIR PARTS

TRACTOR- -MODEL NO. MBA1492BRK (96061001900) PRODUCT NO. 964 77 35-01  
BAGGER

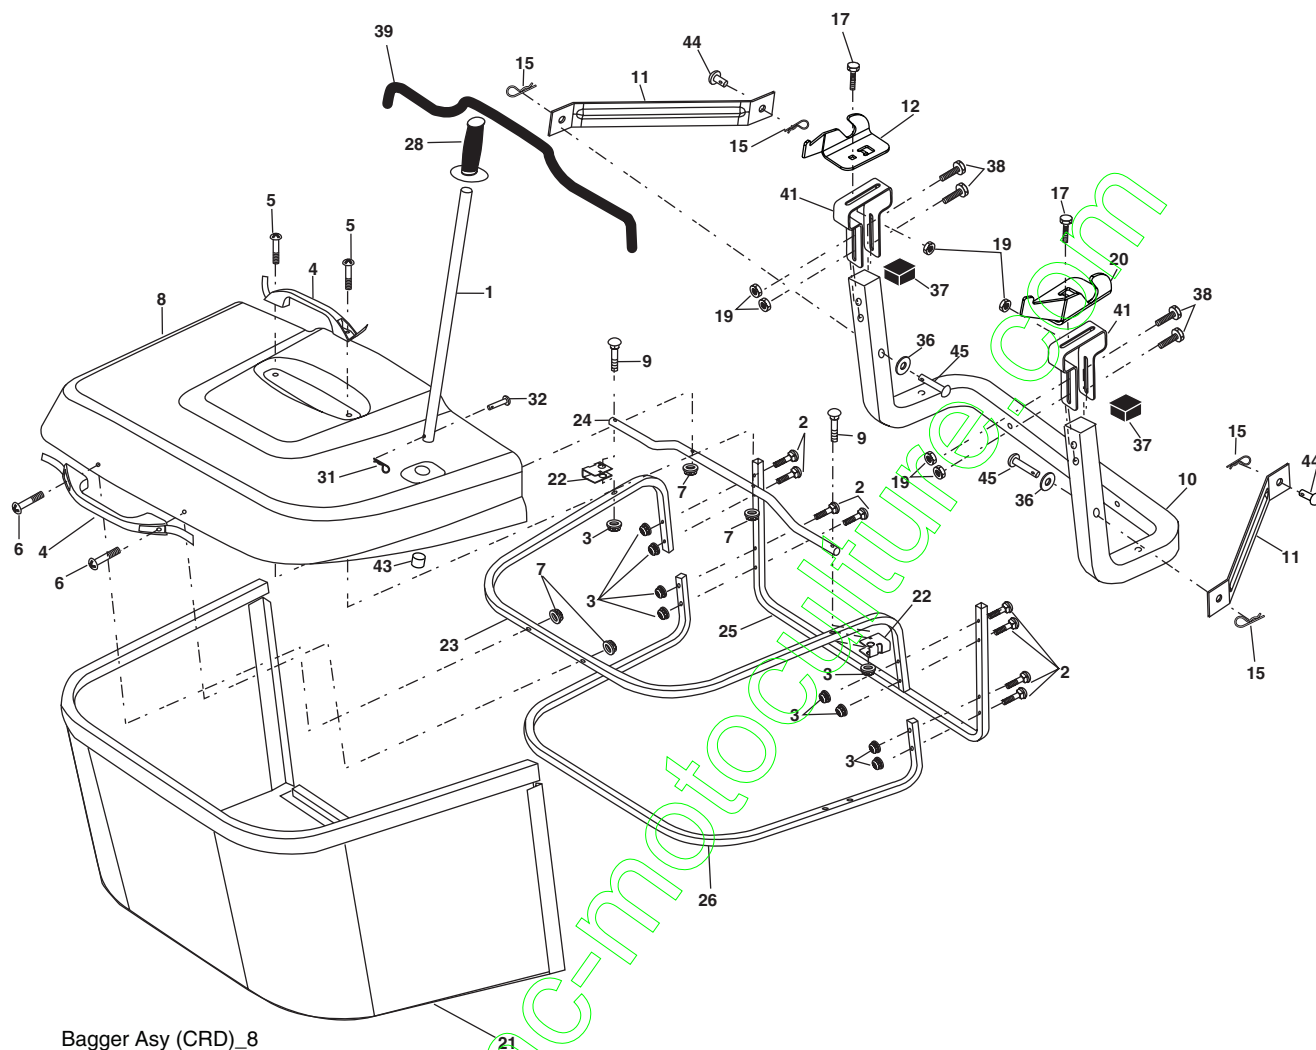

Bagger Asy (CRD)\_8

| KEY NO. | PART NO.            | DESCRIPTION                           |
|---------|---------------------|---------------------------------------|
| 1       | 532 16 52-49        | Tube Handle Bagger CRD                |
| 2       | 872 14 04-16        | Bolt Carriage 1/4-20 x 2.0 Gr. 5      |
| 3       | 532 12 39-76        | Nut Lock 1/4 Lge Flg Gr. 5 Zinc       |
| 4       | 532 16 99-16        | Handle Grab Plastic Black W/Lvrs      |
| 5       | 874 98 10-24        | Screw Pan Head #10-24 x 1.50 Blk      |
| 6       | 874 98 10-32        | Screw Pan Hd                          |
| 7       | 873 40 10-00        | Nut Wiz Lock Hex Serr/Hd 10-24        |
| 8       | 532 18 55-53        | Cover Bagger                          |
| 9       | 872 14 04-18        | Bolt Carriage 1/4-20 x 2.25d x Gr. 5  |
| 10      | 532 18 12-82        | Tube Support Bagger CRD               |
| 11      | 532 16 57-19        | Bracket Support Upper Bag CRD         |
| 12      | 532 18 88-48        | Bracket Pivot LH CRD                  |
| 15      | <b>532 12 46-70</b> | Retainer Spring                       |
| 17      | 872 14 05-06        | Bolt Rdhd Sht Sqnk 5/16 -18 unc x 3/4 |
| 19      | 873 90 05-00        | Nut Lock Hex Flange 5/16-18           |
| 20      | 532 18 88-47        | Bracket Pivot RH CRD                  |

| KEY NO. | PART NO.            | DESCRIPTION                  |
|---------|---------------------|------------------------------|
| 21      | 532 18 08-80        | Bag Asm CRD                  |
| 22      | 532 16 57-81        | Bracket Side Bagger CRD      |
| 23      | 532 16 57-82        | Tube Upper Bagger CRD        |
| 24      | 532 16 57-83        | Tube Pivot Bagger CRD        |
| 25      | 532 18 01-24        | Tube Front Bagger CRD        |
| 26      | 532 16 57-85        | Tube Lower Bagger CRD        |
| 28      | 532 16 57-87        | Grip Handle Black            |
| 31      | 532 12 47-88        | Retainer Spring 1" Zinc/Cad  |
| 32      | 532 12 68-75        | Rivet Rd Hd Drilled 3/8 Dia  |
| 36      | <b>819 13 20-12</b> | Washer 13/32 x 1-1/4 x 12 Ga |
| 37      | 532 17 54-01        | Plug Support Bagger CRD      |
| 38      | 872 01 05-20        | Bolt 5/16-18 x 2.50          |
| 39      | 532 18 09-85        | Seal 26"                     |
| 41      | 532 16 96-83        | Bracket Vert Adj. Bagger CRD |
| 43      | 532 17 40-83        | Plug Tubing End              |
| 44      | <b>532 19 33-12</b> | Pin Clevis 3/8 x 11/16       |
| 45      | <b>532 19 33-13</b> | Pin Clevis 3/8 x 2.00        |

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm



Issued January 1980  
Revised January 1991

# SERVICE POLICY WARRANTY



## LIMITED WARRANTIES FOR NEW PEERLESS GEAR POWER TRAIN COMPONENTS

### **A. Products Warranted**

Peerless Gear and Machine Division of Tecumseh Products Company ("Tecumseh"), subject to the limitations contained below, will, at its option, repair or replace, without charge for parts or labor only, any part of a new Power Train Component (which as used herein means and includes the transaxle, gear box, transmission, differential and right angle drives, and any part of the Power Train Component), EXCEPT any new Power Train Component incorporated in equipment used for commercial or rental purposes, which is found upon examination by any Tecumseh Authorized Service Outlet or by Tecumseh's factory in Grafton, Wisconsin, to be DEFECTIVE IN MATERIAL AND/OR WORKMANSHIP if received by Tecumseh or a Tecumseh Authorized Service Outlet for such examination within TWO YEARS from the date of sale to the original consumer purchaser of Peerless Series 820, 900, 910, 915, 920, 930 transaxles and Series 1100 angle drive and ONE YEAR for all other Peerless products. New Power Train Components incorporated in equipment used for commercial purposes are warranted in the same manner and to the same extent EXCEPT such Power Train Components are warranted for NINETY (90) DAYS ONLY, and must be received by Tecumseh or by a Tecumseh Authorized Service Outlet for such examination within 90 days from the date of sale to the original purchaser. New Power Train Components Incorporated in equipment used for rental purposes are warranted in the same manner and to the same extent EXCEPT such Power Train Components are warranted for THIRTY (30) DAYS ONLY, and must be received by Tecumseh or a Tecumseh Authorized Service Outlet within 30 days from the date of sale to the original purchaser.

### **B. Products And Items Not Warranted**

1. Alterations or Modifications of Power Train Components.
2. Accidents, Normal Maintenance, Failure to follow the Original Equipment Manufacturer's Manual.

This warranty covers only parts of new Power Train Components which are found upon examination to be defective in material or workmanship as delivered to the original purchaser. This warranty does not cover defects caused by depreciation or damage caused by normal wear, accidents, improper maintenance, improper use or abuse of the product, failure to follow the instructions contained in an Instruction Manual for the operation of the Power Train Component and parts. The cost of normal maintenance and replacement of service items which are not defective shall be paid for by the original purchaser.

### **C. Securing Warranty Service**

Warranty service can be arranged for by contacting either a Tecumseh Authorized Service Outlet (any Tecumseh Registered Service Dealer, Tecumseh Authorized Service Distributor, or Tecumseh Central Warehouse Distributor) or by contacting Tecumseh, c/o Service Manager, Engine and Transmission Group Service Division, 900 North Street, Grafton, Wisconsin 53024. Warranty service can only be performed by a Tecumseh Authorized Service Outlet or by Tecumseh at its factory in Grafton, Wisconsin. At the time of requesting warranty service, evidence must be presented of the date of sale to the original purchaser. The purchaser shall pay any charges for making service calls and/or for transporting the product to and from the place where the inspection and/or warranty work is performed. The purchaser shall be responsible for any damage or loss incurred in connection with the transportation of Power Train Components and/or part(s) of the Power Train Components submitted for inspection and/or warranty work.

### **D. Limitation of Damages and Implied Warranties**

The foregoing EXPRESSED WARRANTY IS IN LIEU OF ALL OTHER EXPRESS WARRANTIES. Neither Tecumseh nor any of its affiliates makes any warranties, representations or promises, written or oral, as to the quality of the Power Train Component or any of its parts, other than as set forth herein.

ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, TO THE EXTENT THAT EITHER MAY APPLY TO ANY PART(S) OF POWER TRAIN COMPONENTS, SHALL BE LIMITED IN DURATION TO THE PERIODS OF THE EXPRESSED WARRANTIES DEFINED IN PARAGRAPH A HEREOF. IN NO EVENT WILL TECUMSEH BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES AND/OR EXPENSES. Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitation(s) or exclusion(s) may not apply to you. This warranty gives you specific legal rights and you may also have other legal rights which vary from state to state.

### **E. No Dealer Warranty**

Tecumseh neither assumes nor authorizes any other person, natural or corporate, to assume for Tecumseh any other obligations or liabilities in connection with or with respect to any part(s) of a Power Train Component. The seller or dealer of part(s) of a Power Train Component has no authority, whatsoever, to make any representations or promises on behalf of Tecumseh or to modify the terms or limitations of Tecumseh's warranty in any way.

[www.emc-motoculture.com](http://www.emc-motoculture.com)

**Mr. Bricolage**