



# **REPAIR PARTS MANUAL**

## **MODEL NO. MC115T96 (MC115T38B)**

### **Lawn Tractor**

---

**McCULLOCH**®

# HOW TO USE THIS MANUAL

This manual is designed to provide the customer with a means to identify the parts on his/her tractor when ordering repair parts. The illustrations may or may not represent the actual assemblies; therefore, it is not recommended to use this manual as a guide to assemble or disassemble the tractor. Some hardware and parts are drawn larger in order to more readily identify them.

Each tractor has its own model number.


The model number for your tractor can be found on the fender under the seat.

When ordering parts, always give the following information:

- Product - "Tractor"
- Model Number - "MC115T96 (MC115T38B)"
- Part Number
- Part Description

## TABLE OF CONTENTS

SCHEMATIC .....	3
ELECTRICAL.....	4-5
CHASSIS.....	6-7
DRIVE.....	8-9
STEERING .....	10-11
ENGINE.....	12-13
SEAT .....	14
DECALS .....	15
MOWER DECK .....	16-17
MOWER LIFT .....	18

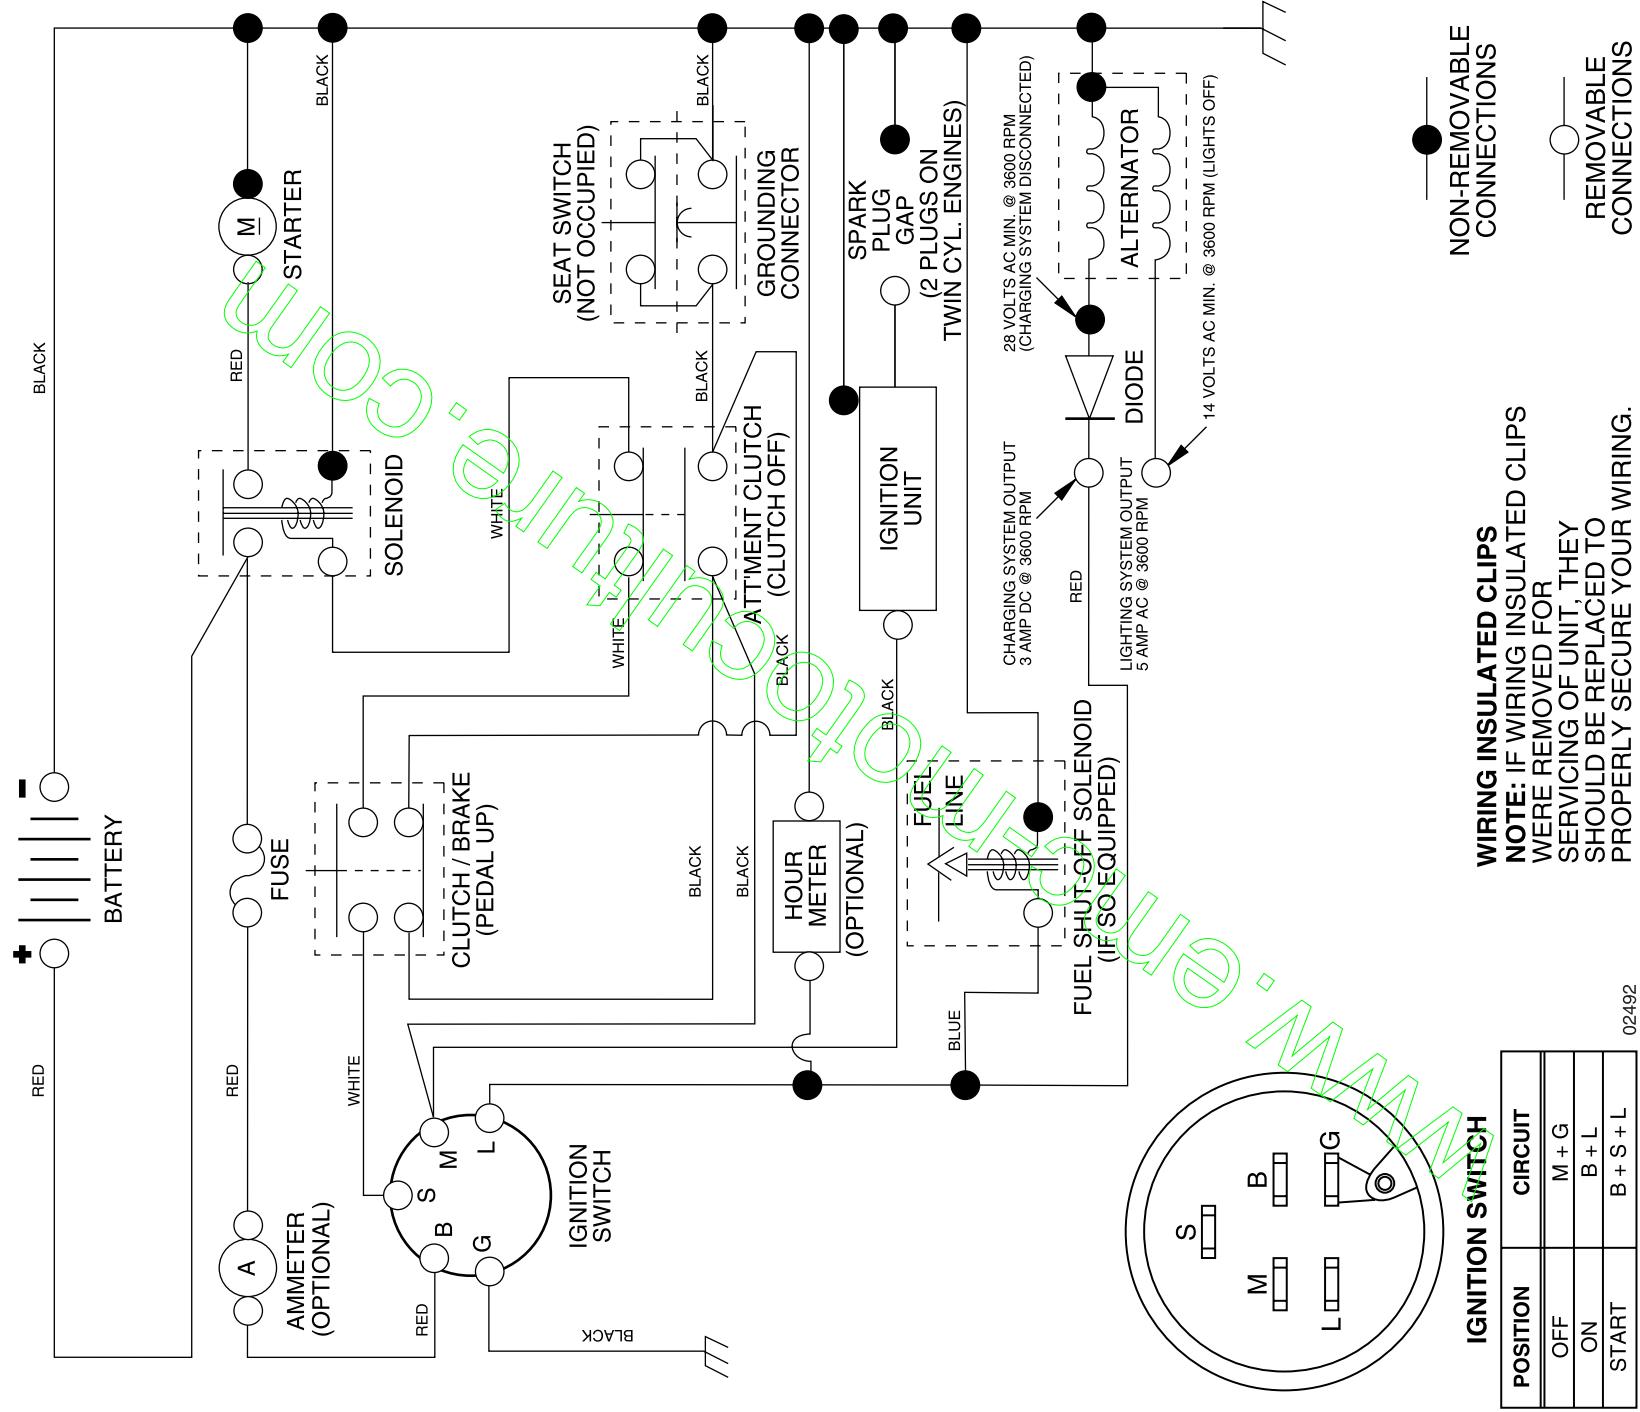

## WIRING INSULATED CLIPS


**NOTE:** IF WIRING INSULATED CLIPS  
WERE REMOVED FOR  
SERVICING OF UNIT, THEY  
SHOULD BE REPLACED TO  
PROPERLY SECURE YOUR WIRING.

## NON-REMOVABLE CONNECTIONS

OFF	M + G
ON	B + L
START	B + S + L

**REPAIR PARTS**  
TRACTOR -- MODEL NUMBER MC115T96 (MC115T38B), PRODUCT NO. 964 77 24-01  
**ELECTRICAL**

1

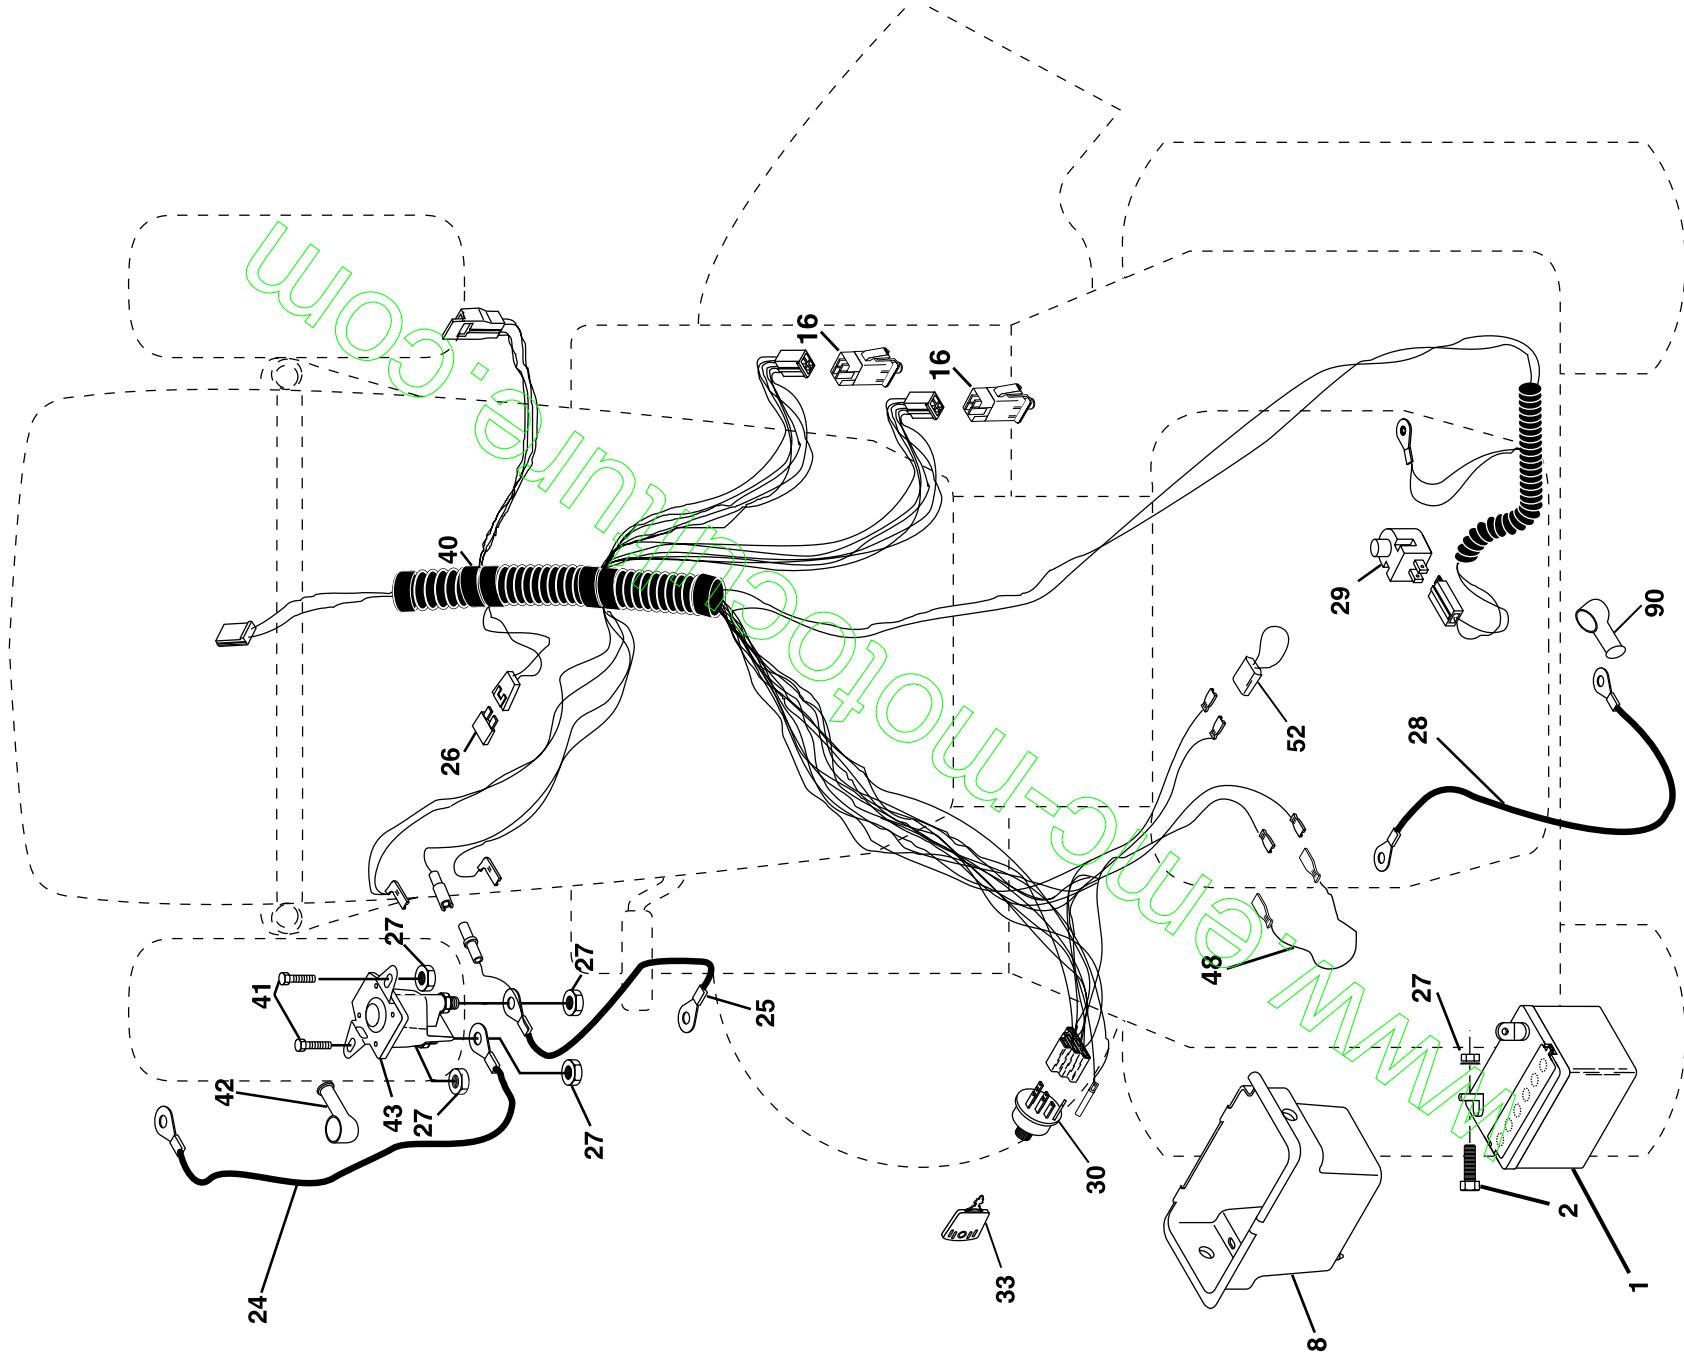

**REPAIR PARTS**  
TRACTOR - - MODEL NUMBER MC115T96 (MC115T38B), PRODUCT NO. 964 77 24-01  
**ELECTRICAL**


KEY PART NO.      DESCRIPTION

1	532 16 34-65	Battery 12 Volt 25 Amp
2	874 76 04-12	Bolt Hex Hd 1/4-20 Unc x 3/4
8	532 17 66-89	Battery Box
16	532 17 61-38	Switch Interlock Push-In
24	532 12 47-80	Cable Battery 6 Ga. 11" red
25	532 14 61-47	Cable Battery
26	532 17 51-58	Fuse
27	873 51 04-00	Nut Keps Hex 1/4-20 unc
28	532 12 47-73	Cable Ground 6 Ga. 12" black
29	532 12 13-05	Switch Plunger Nc Gray
30	532 17 55-67	Switch Ign
33	532 14 04-01	Key Ign
40	532 17 97-30	Harness Ign
41	871 11 04-08	Bolt Blk Fin Hex 1/4-20
42	532 13 15-63	Cover Terminal Red
43	532 17 88-61	Solenoid
48	532 14 08-44	Adapter Ammeter
52	532 14 19-40	Protection Wire Loop
90	532 18 04-49	Cover Terminal Battery

**NOTE:** All component dimensions given in U. S.  
inches 1 inch = 25.4 mm.

**REPAIR PARTS**  
TRACTOR -- MODEL NUMBER MC115T96 (MC115T38B), PRODUCT NO. 964 77 24-01  
**CHASSIS AND ENCLOSURES**

www.equipment-repair.com

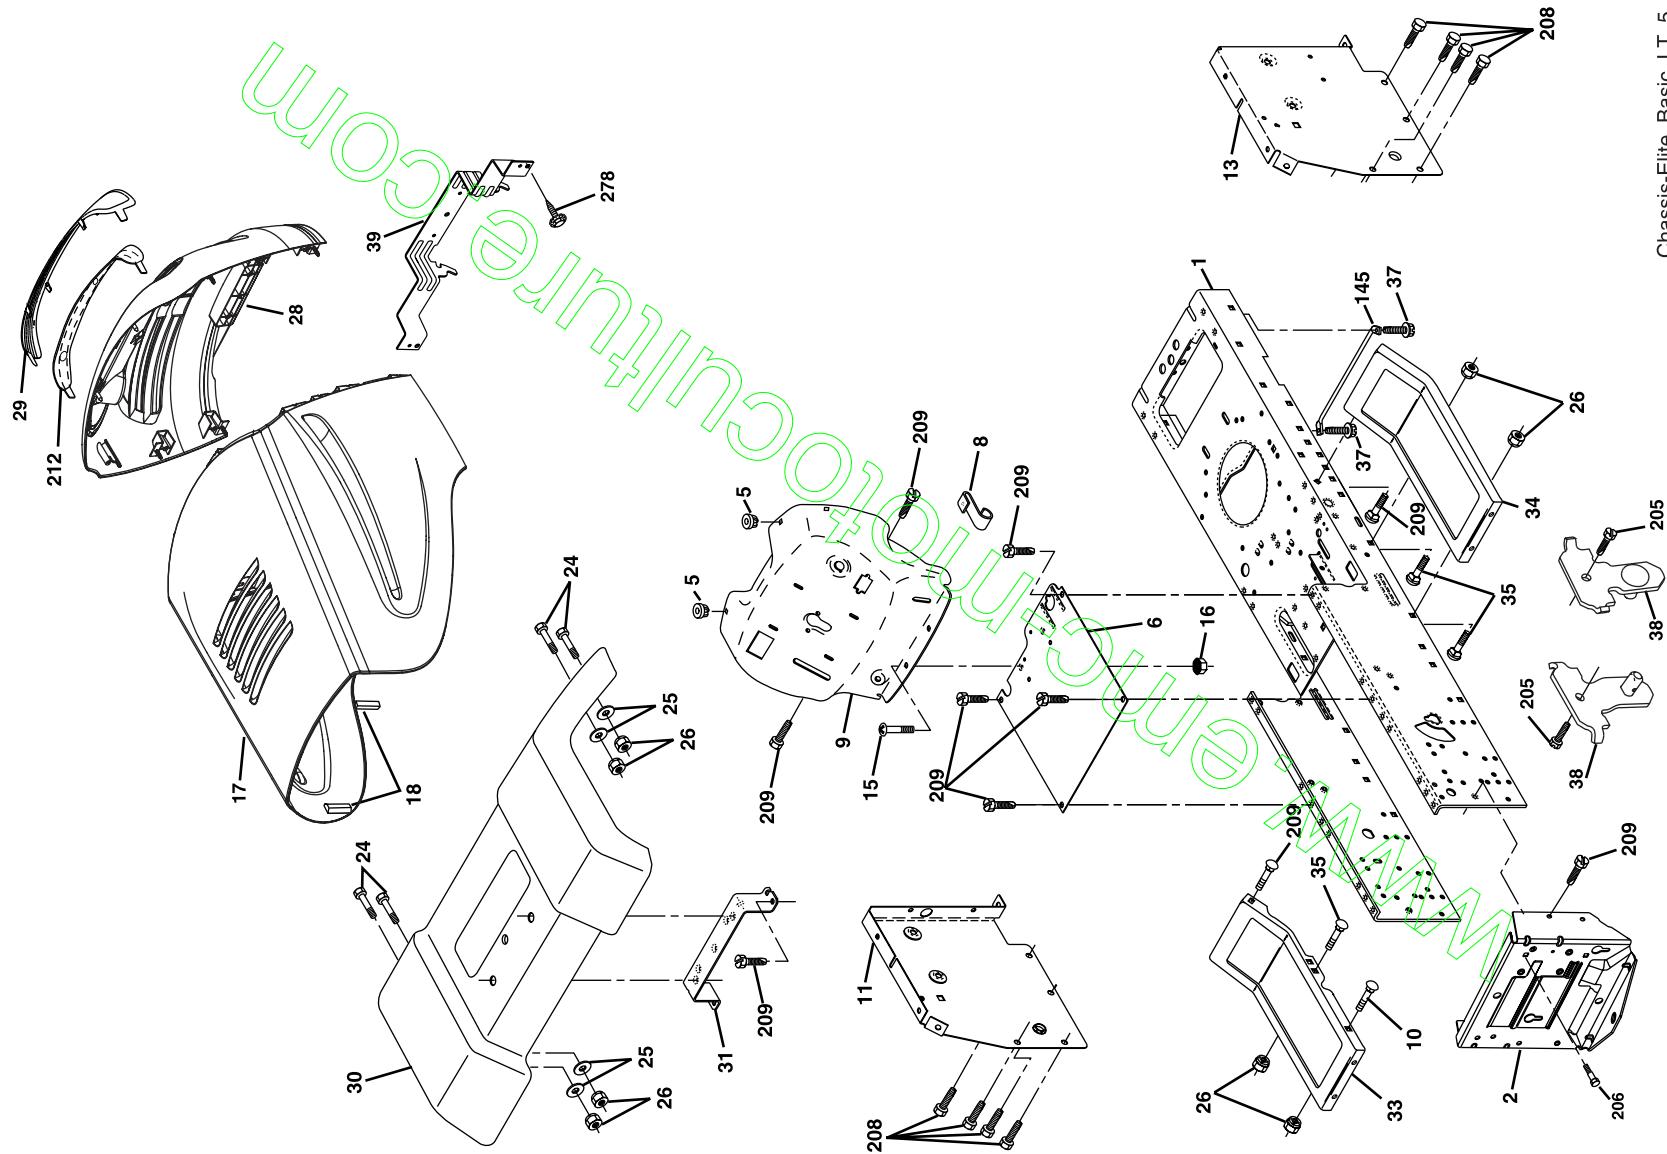


**REPAIR PARTS**  
**TRACTOR - - MODEL NUMBER MC115T96 (MC115T38B), PRODUCT NO. 964 77 24-01**  
**CHASSIS AND ENCLOSURES**

Chassis and Enclosures

KEY NO.	PART NO.	DESCRIPTION
1	532 117 46-20	Chassis
2	532 117 65-54	Drawbar
5	532 115 52-72	Bumper, Hood/Dash
6	532 118 12-71	Saddle
8	532 115 51-38	Clip Retainer Slide-On
9	<b>532 119 06-94</b>	Dash
10	872 114 06-08	Bolt, Carriage 3/8-16 x 1
11	532 117 49-96	Panel Dash LH
13	532 118 69-52	Panel Silkscr Dash RH
15	874 118 05-12	Screw Mach TRHD 5/16-18 unc x 3/4
16	873 51 05-00	Nut Keps 5/16-18 unc
17	532 118 58-47	Hood
18	532 112 69-38	Bumper Hood
24	874 78 06-16	Bolt Fin Hex 3/8-16 unc x 1 Gr. 5
25	819 113 13-12	Washer 13/32 x 13/16 x 12 Ga.
26	873 80 06-00	Nut Lock Hex w/lns 3/8-16 unc
28	532 118 67-18	Grille/Lens Asm.
30	532 118 12-72	Fender
31	532 113 66-19	Bracket Fender Repl 109873x
33	532 118 30-81	Footrest Pnt LH
34	532 118 30-80	Footrest Pnt RH
35	872 111 06-06	Bolt Rdhd Sht Sqnk 3/8-16 x 3/4
37	817 49 05-08	Screw Thdrol 5/16-18 x 1/2 TYT
38	532 117 57-10	Bracket Asm. Pivot Mower Rear
39	532 117 47-14	Bracket Pivot Laser
145	532 115 65-24	Rod Pivot Chassis/Hood
205	817 49 06-08	Screw Thdrol 3/8-16 x 1/2
206	532 117 01-65	Bolt Shoulder 5/16-18
208	817 67 06-08	Screw Thdrol 3/8-16 x 1/2
209	817 00 06-12	Screw Hex Wsh Thdrol 3/8-16
278	<b>532 119 16-11</b>	Screw 10 x 3/4 Single Lead-Hex
--	532 00 54-79	Plug Button Blk 359 Dia Choke

**NOTE:** All component dimensions given in U.S. inches  
 1 inch = 25.4 mm.

**REPAIR PARTS**  
TRACTOR -- MODEL NUMBER MC115T96 (MC115T38B), PRODUCT NO. 964 77 24-01  
DRIVE


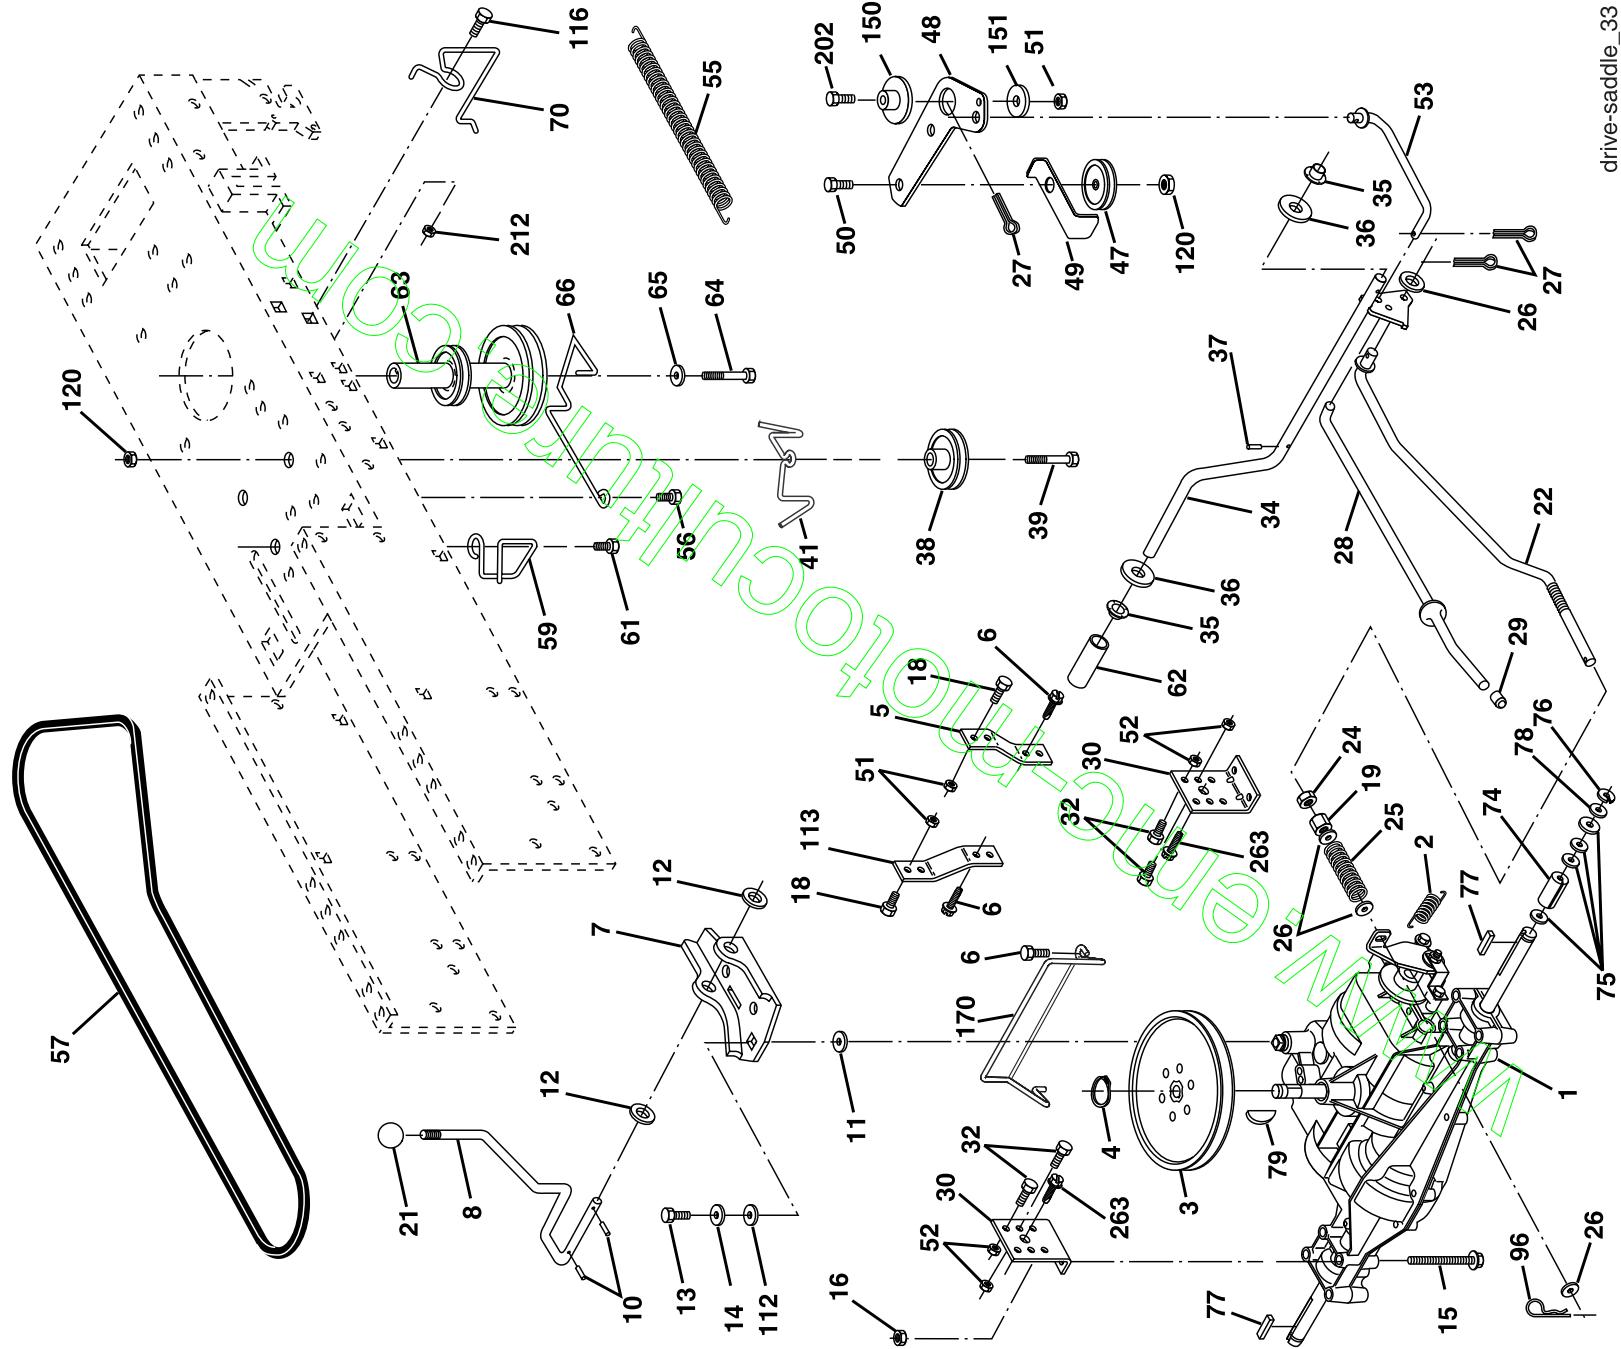


**REPAIR PARTS  
TRACTOR - - MODEL NUMBER MC115T96 (MC115T38B), PRODUCT NO. 964 77 24-01  
DRIVE**

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	-----	Transaxle, Peerless 204-506B (Order parts from transaxle manufacturer)	48	532 15 44-07	Bellcrank Arm
2	532 14 66-82	Spring Return Brake T/a Zinc	49	532 12 32-05	Retainer Belt Style Spring
3	532 12 36-66	Pulley Transaxle 18" tires	50	872 11 06-12	Bolt Carr Sh 3/8-16 x 1-1/2 Gr. 5
4	812 00 00-28	Pulley Retainer # 5100-62	51	873 68 06-00	Nut Crownlock 3/8-16 Unc
5	532 12 15-20	Strap Torque 30 Degrees	52	873 68 05-00	Nut Crownlock 5/16-18 Unc
6	817 00 05-12	Screw 5/16-18 x 3/4	53	532 10 57-10	Link Clutch
7	532 16 22-40	Bracket T/A Saddle Shift	55	532 10 57-09	Spring Return Clutch 6 75
8	532 13 16-79	Rod Shifter	56	817 06 06-20	Screw 3/8-16 x 1-1/4
9	876 02 04-16	Pin Cotter 1/8 x 1 Cad	57	532 13 08-01	V-Belt Ground Drive
10	532 10 57-01	Washer Plate Shf 388 Sq Hole	59	532 16 96-91	Keeper Belt Span Ctr
11	819 15 12-16	Washer 15/32 x 3/4 x 16	61	817 12 06-14	Screw 3/8-16 x .875
12	874 55 04-12	Bolt 1/4-28 Unf Gr 8 W/Patch	62	532 12 48-72	Cover Pedal Blk Round
13	810 04 04-00	Washer Lock Hvy Helical 1/4	63	532 18 02-19	Engine Pulley
14	874 49 05-44	Bolt Hex Flghd 5/16-18 Gr. 5	64	532 17 39-37	Bolt Hex
15	873 80 05-00	Nut Lock Hx W/Ins 5/16-18 Unc	65	810 04 07-00	Washer Lock Hvy HCl Spr 7/16
16	874 78 06-16	Bolt, Fin Hex 3/8-16 Unc x 1 Gr. 5	66	532 15 47-78	Keeper Belt Engine Foolproof
17	873 80 06-00	Nut Lock 3/8-16 Unc	70	532 18 02-18	Guide Belt Mower Drive RH
18	532 10 69-33	Knob	74	532 13 70-57	Spacer Axle
19	532 13 08-04	Rod Brake Blk Zinc 26 840	75	532 12 77-49	Washer 25/32 x 1 1/4 x 16 Ga
20	873 35 06-00	Nut Hex Jam 3/8-16 Unc	76	812 00 00-01	E-ring #5133-75
21	532 10 68-88	Spring Rod Brake 2 00 Zinc	77	532 12 35-83	Key Square 2 0 x 1845/ 1865
22	819 13 13-16	Washer 13/32 x 13/16 x 16 Ga	78	532 12 17-48	Washer 25/32 x 1-5/8 x 16 Ga
23	876 02 04-12	Pin Cotter 1/8 x 3/4 Cad	79	532 12 50-96	Key Woodruff
24	532 17 57-65	Rod Brake Parking	96	532 12 47-88	Retainer Spring 1"
25	532 07 16-73	Cap Brake Parking	112	819 09 12-10	Washer 9/32 x 3/4 x 10 Ga.
26	532 17 49-73	Bracket Mtg Transaxle	113	532 12 72-85	Strap Torque Lh
27	874 76 05-12	Bolt Hex Hd 5/16-18unc x 3/4	116	872 14 06-08	Bolt Rdhd Sq Neck 3/8-16 x 1.00
28	532 17 55-78	Shaft Asm Pedal Foot	120	873 90 06-00	Nut Lock Flg 3/8-16
29	532 12 01-83	Bearing Nylon Blk 629 Id	150	532 17 54-56	Spacer Retainer
30	819 21 16-16	Washer 21/32 x 1 x 16 Ga	151	819 13 32-10	Washer 13/32 x 2 x 10
31	532 12 49-63	Pin Roll 3/16 x 1"	170	532 18 74-14	Keeper Belt T/A
32	532 17 91-14	Pulley Idler Composite	202	872 11 06-14	Bolt, 3/8 - 16 x 1-3/4 Gr. 5
33	872 11 06-22	Bolt Rdhd 3/8-16 Unc x 2-3/4 Gr. 5	212	532 14 52-12	Nut Flange Hex Lock
34	532 17 55-56	Keeper Belt Retainer Idler	263	817 00 06-12	Screw 3/8-16 x 3/4
35	532 12 77-83	Pulley Idler V Groove Plastic			
36	532 17 91-14	Pulley Idler Composite			
37	872 11 06-22	Bolt Rdhd 3/8-16 Unc x 2-3/4 Gr. 5			
38	532 17 55-56	Keeper Belt Retainer Idler			
39	532 12 77-83	Pulley Idler V Groove Plastic			
40	532 17 55-56	Keeper Belt Retainer Idler			
41	532 12 77-83	Pulley Idler V Groove Plastic			
42	532 12 77-83	Pulley Idler V Groove Plastic			
43	532 12 77-83	Pulley Idler V Groove Plastic			
44	532 12 77-83	Pulley Idler V Groove Plastic			
45	532 12 77-83	Pulley Idler V Groove Plastic			
46	532 12 77-83	Pulley Idler V Groove Plastic			
47	532 12 77-83	Pulley Idler V Groove Plastic			

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

**REPAIR PARTS**  
TRACTOR -- MODEL NUMBER MC115T96 (MC115T38B), PRODUCT NO. 964 77 24-01  
**STEERING**

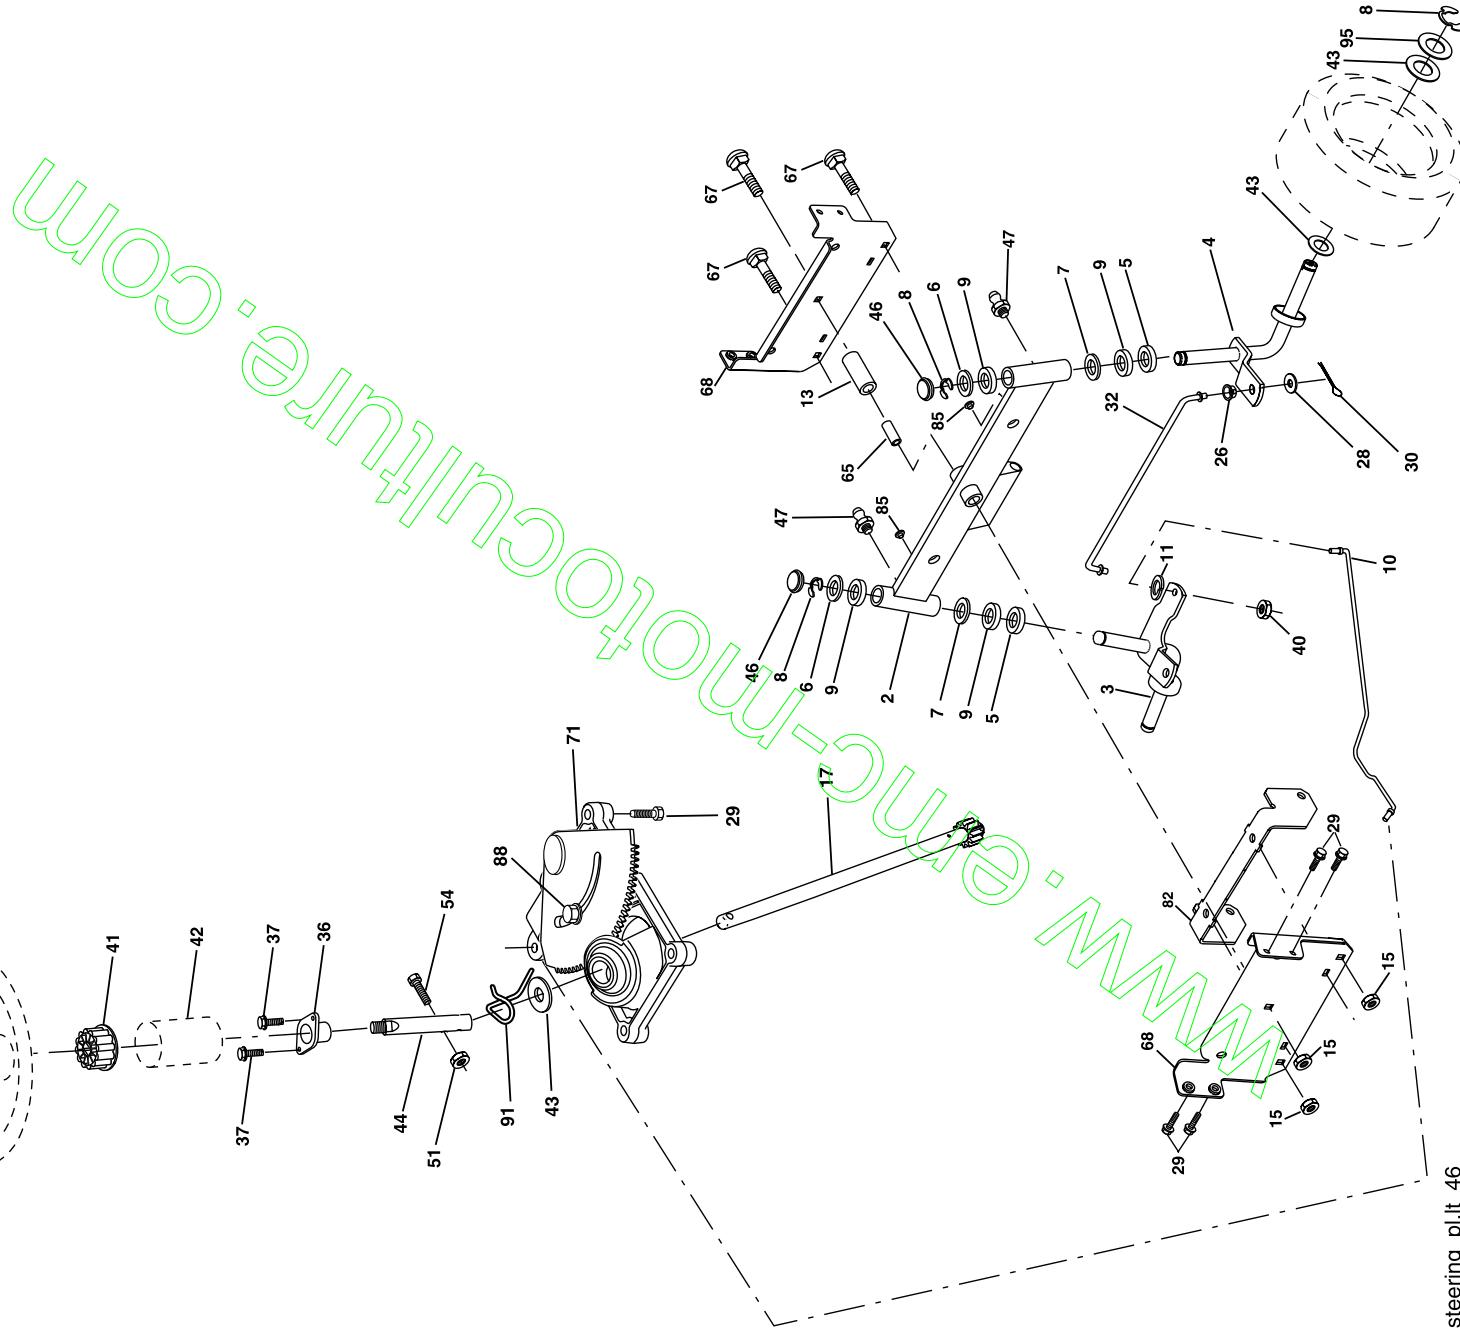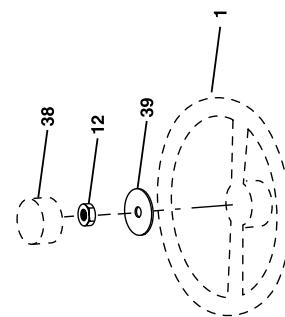

steering\_plt\_46

**REPAIR PARTS**  
**TRACTOR - - MODEL NUMBER MC115T96 (MC115T38B), PRODUCT NO. 964 77 24-01**  
**STEERING**



1 532 13 97-68 Wheel Steering

KEY NO.	PART NO.	DESCRIPTION
1	532 13 97-68	Wheel Steering
2	532 17 51-31	Axle Asm
3	532 16 98-40	Spindle Asm LH
4	532 16 98-39	Spindle Asm RH
5	532 12 49-31	Bearing Race Thrust Harden
6	532 12 17-48	Washer 25/32 x 1-5/8 x 16 Ga.
7	819 27 20-16	Washer 27/32 x 1-1/4 x 16 Ga.
8	812 00 00-29	Ring Clip #t5304-75
9	532 12 49-37	Bearing Col Strg Blk
10	532 17 51-21	Link Drag
11	810 04 06-00	Washer Lock Hvy Hcl Spr 3/8
12	873 94 08-00	Nut Hex Jam Toplock 17/2-20
13	532 13 65-18	Spacer earing Axle Front
15	532 14 52-12	Hexflange Lock
17	532 18 06-41	Shaft Asm Strg
26	532 12 68-47	Bushing Link Drag Blk LR
28	819 13 14-16	Washer 13/32 x 7/8 x 16 Ga.
29	817 00 06-12	Screw 3/8-16 x 3/4
30	876 02 04-12	Pin Cotter 1/8 x 3/4 Cad
32	532 13 04-65	Rod Tie Wire Form 19 75 Mech
36	532 15 50-99	Bushing Strg 5/8 Id Dash
37	532 15 29-27	Screw
38	532 14 01-75	Cap Wheel Steer
39	819 18 38-12	Washer 9/16 ID x 2-3/8OD 12 Ga.
40	873 54 06-00	Nut Crownlock 3/8-24
41	532 18 67-37	Adaptor Wheel Strg
42	532 16 96-33	Boot Steering
43	532 12 17-49	Washer 25/32 x 1 1/4 x 16 Ga.
44	532 18 06-40	Extension Steering
46	532 12 12-32	Cap Spindle Fr Top Blk
47	532 18 32-26	Fitting Grease
51	873 54 04-00	Nut Crownlock 1-4-28
54	871 13 04-20	Bolt Hex 1/4-28unf x 1-1/4 Gr. 8
65	532 16 03-67	Spacer Brace Axle
67	872 11 06-18	Bolt RdHd Sqnk 3/8-16 x 2-1/4
68	532 16 98-27	Brace Axle
71	532 17 51-46	Steering Asm
82	532 16 98-35	Bracket Susp Chassis Front
85	532 13 38-35	Fastener Christmas Tree
88	532 17 51-18	Bolt shoulder 7/16-20
91	532 17 55-53	Clip Steering
95	532 18 89-67	Washer Hardened

**NOTE:** All component dimensions given in U.S. inches  
 1 inch = 25.4 mm.

**REPAIR PARTS**  
TRACTOR -- MODEL NUMBER MC115T96 (MC115T38B), PRODUCT NO. 964 77 24-01  
ENGINE

13 4 62 85 14 38 81 78 3 1 2

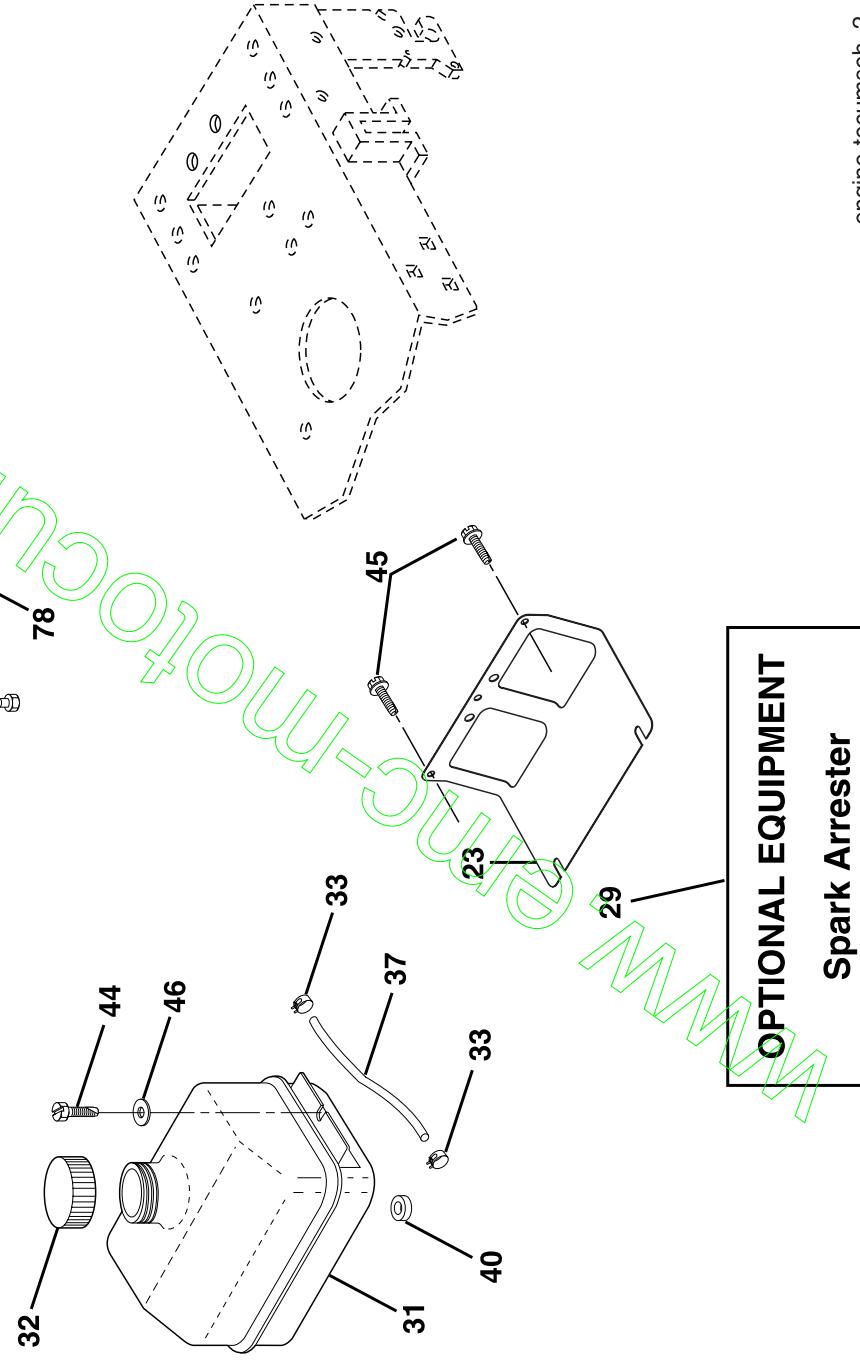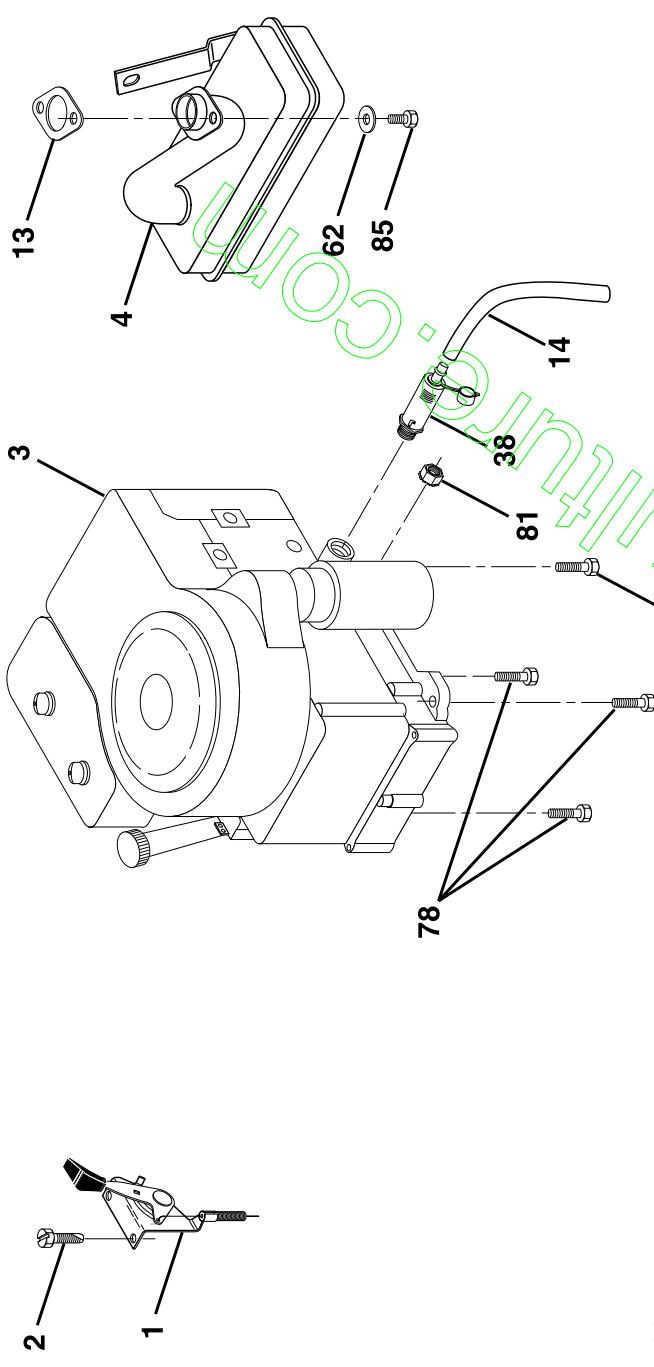

**OPTIONAL EQUIPMENT**  
**Spark Arrester**

engine-tecumseh\_2


# REPAIR PARTS TRACTOR - - MODEL NUMBER MC115T96 (MC115T38B), PRODUCT NO. 964 77 24-01 ENGINE

1 inch = 25.4 mm

KEY NO.	PART NO.	DESCRIPTION
1	532 17 08-64	Control Throttle /Choke
2	817 72 04-08	Screw Hex Thd Cut 1/4-20 x 5/8 T
3	-----	Engine Tec Model OV358EA (Order Parts from Engine Manufacturer)
4	532 15 67-00	Muffler Exhaust
13	-----	Gasket (Order from Engine Mfg.)
14	532 14 84-56	Tube Drain Oil Easy
23	532 16 98-37	Shield Browning/Debris Guard
29	532 13 71-80	Arrestor Spark
31	532 18 49-00	Tank Fuel
32	532 14 05-27	Cap Asm Fuel Top Vent N/Lany
33	532 12 34-87	Clamp Hose Blk
37	532 13 70-40	Line Fuel 20"
38	532 18 16-54	Plug Drain Oil Easy
40	532 12 40-28	Bushing Snap
44	817 67 04-12	Screw Hexwsh Thdrol 3/8-16 x 3/4
45	817 00 06-12	Screw 3/8-16 x 3/4
46	819 09 14-16	Washer 9/32x 7/8 x 16 Ga.
62	810 04 05-00	Washer Lock Hvy HLCL Spr 5/16
78	817 06 06-20	Screw 3/8-16 x 1-1/4
81	873 51 04-00	Nut Keps Hex 1/4-20 unc
85	871 07 05-12	Screw 5/16-18 x 3/4

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

**REPAIR PARTS**  
TRACTOR -- MODEL NUMBER MC115T96 (MC115T38B), PRODUCT NO. 964 77 24-01  
SEAT

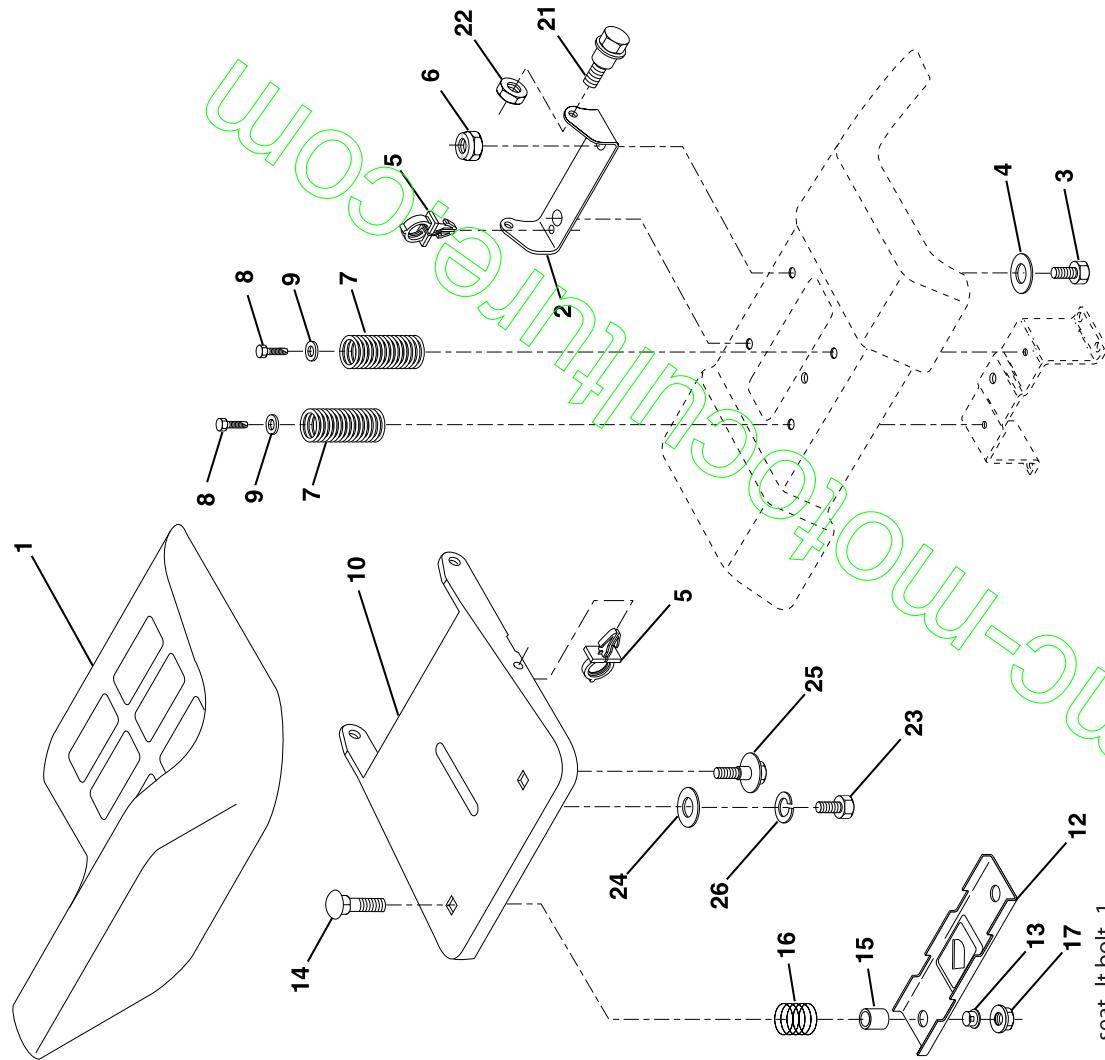


KEY NO.	PART NO.	DESCRIPTION
1	532 17 53-89	Seat
2	532 14 05-51	Bracket Seat Pivot
3	871 11 06-16	Bolt Hex 3/8 - 16 x 1
4	819 13 16-10	Washer 13/32 x 1 x 10 Ga.
5	532 14 50-06	Clip Push-In Hinged
6	873 80 06-00	Nut Lock Hex w/lns 3/8 - 16
7	532 12 41-81	Spring Seat Cprsn 2 250 Blk Zi
8	817 00 06-16	Screw 3/8-16 x 1.5
9	819 13 16-14	Washer 13/32 x 1 x 14 Ga.
10	532 18 24-93	Pan Pnt Seat (Blk)
12	532 12 12-46	Bracket Pnt Mounting Switch
13	532 12 12-48	Brushing Snap Blk Nyl
14	872 05 04-12	Bolt Rdhd Shft Nk 1/4 - 20 x 1 -1/2
15	532 13 43-00	Spacer Split .28 x .96
16	532 12 12-50	Spring Cprsn
17	532 12 39-76	Nut Lock 1/4 Lge Flg
21	532 17 18-52	Bolt Shoulder 5/16-18 unc-2A
22	873 80 05-00	Nut Lock Hex w/lns 5/16 - 18
23	871 11 08-14	Bolt Hex Black
24	819 17 19-12	Washer 17/32 x 1-3/16 x 12 Ga.
25	532 12 70-18	Bolt Shoulder 5/16-18 x .62
26	810 04 08-00	Washer Lock Hvy Hcl Spr 1/2

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm.

# REPAIR PARTS


## TRACTOR -- MODEL NUMBER MC115T96 (MC115T38B), PRODUCT NO. 964 77 24-01

### DECALS

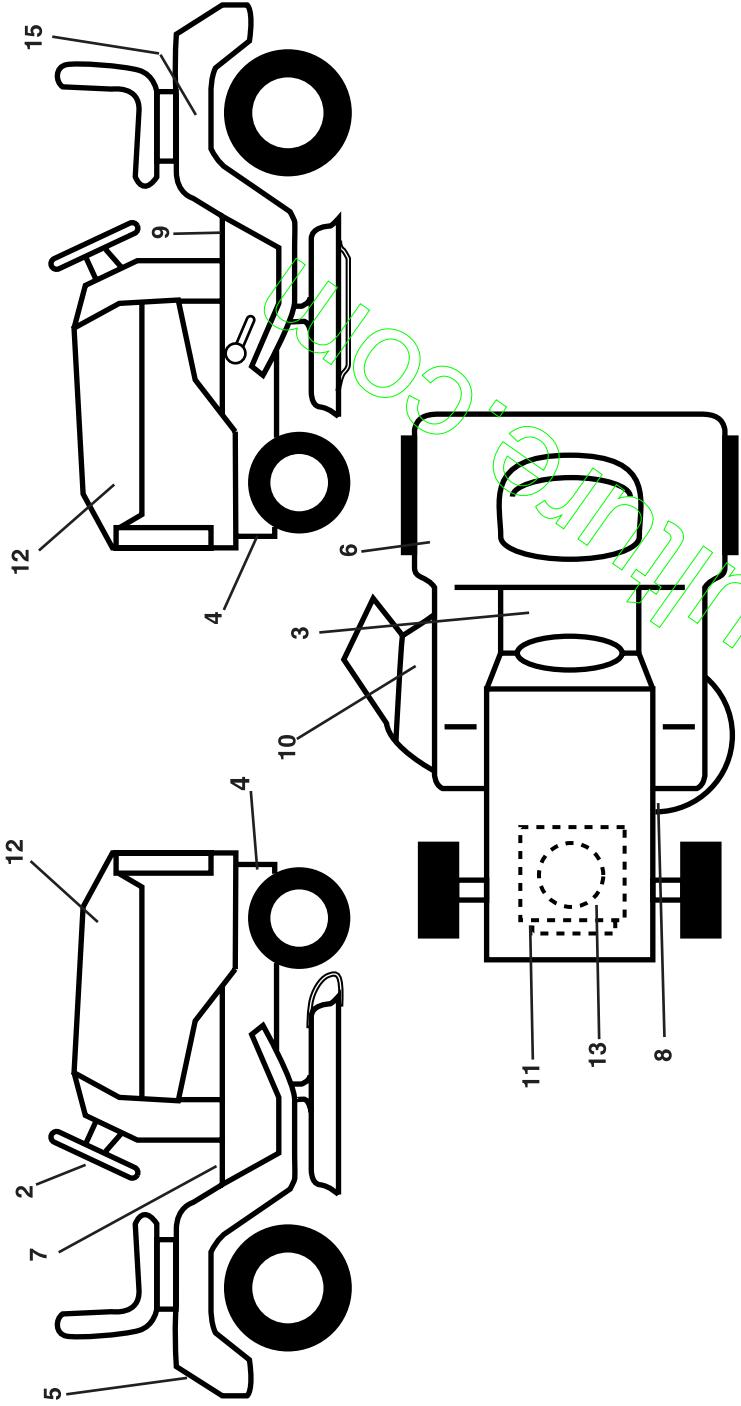

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
2	532 18 58-81	Decal, Steering Wheel	11	532 18 98-86	Decal, Engine
3	532 15 97-37	Decal, Brake/Clutch	12	532 18 90-24	Decal, Hood RH/LH
4	532 15 97-36	Decal, Hot Muffler	13	532 18 69-06	Decal, Warranty
5	532 18 95-67	Decal, Fender	15	532 14 50-05	Decal, Caution, Battery
6	532 18 04-32	Decal, DB/CE	--	532 16 25-98	Decal, Drawbar
7	532 14 54-98	Decal, Read Owner's Manual	--	532 13 83-11	Decal, Handle Lft Height Adj.
8	532 13 68-32	Decal, V-Belt Sch.	--	532 18 51-49	Manual, Operator's, Euro
9	532 14 08-37	Decal, Parking Brake	--	532 18 52-38	Manual, Operator's, Scan
10	532 18 21-66	Decal, Cut Finger	--	532 19 17-31	Manual Parts


### WHEELS & TIRES

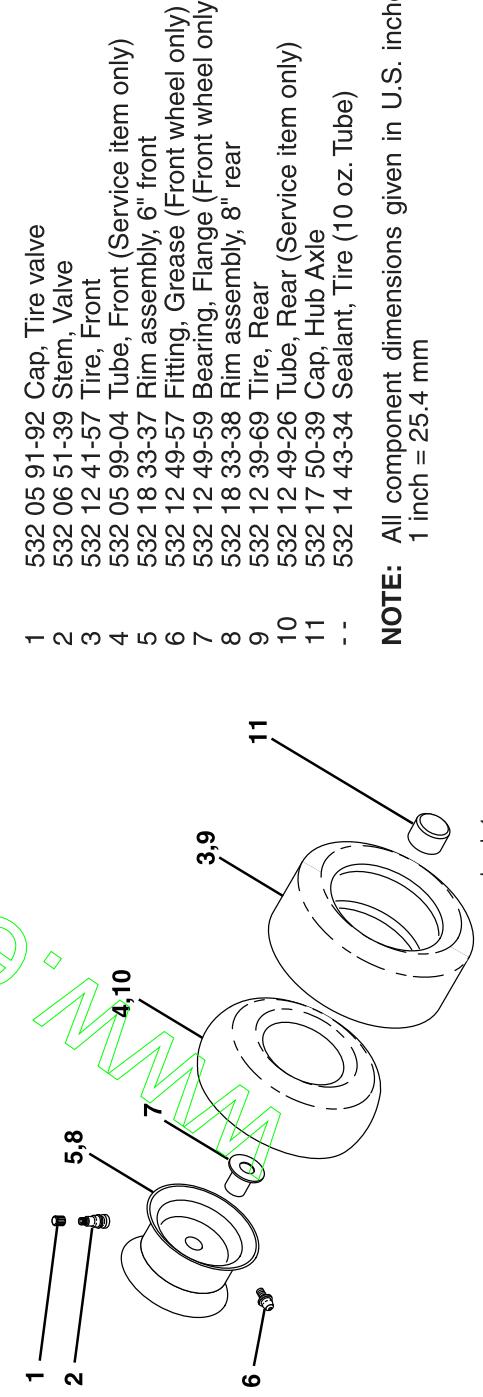

wheel\_1  
15

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

**REPAIR PARTS**  
TRACTOR -- MODEL NUMBER MC115T96 (MC115T38B), PRODUCT NO. 964 77 24-01  
MOWER DECK

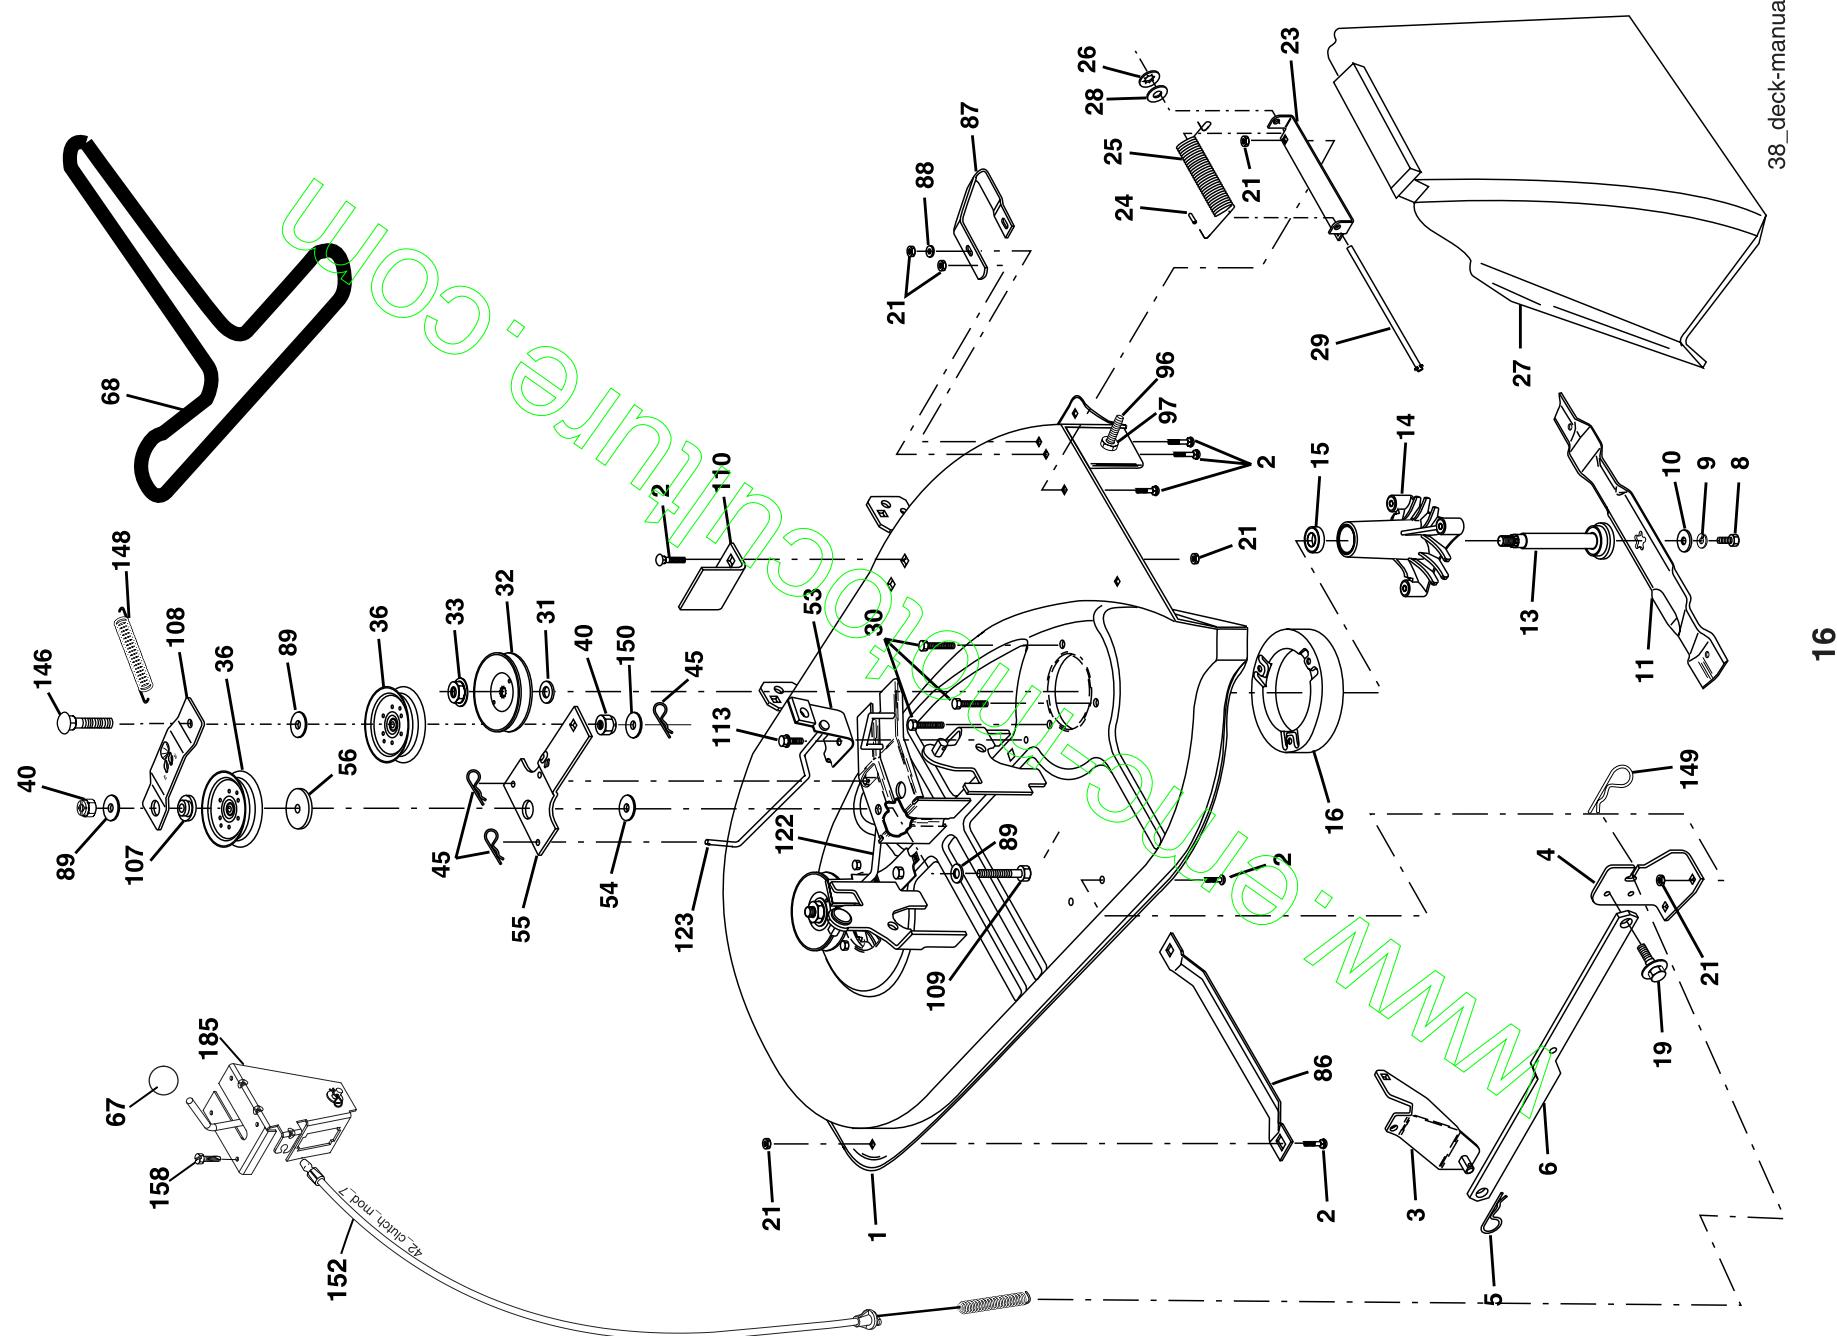

38\_deck-manual\_2

16

# REPAIR PARTS

## TRACTOR - - MODEL NUMBER MC115T96 (MC115T38B), PRODUCT NO. 964 77 24-01

### MOWER DECK

KEY NO. PART NO. DESCRIPTION

1	532 17 02-80	Mower Housing Assembly
2	872 14 05-06	Bolt Carriage 5/16-18 x 3/4
3	532 13 80-17	Bracket Asm Fr. Sway Bar
4	532 16 99-70	Bracket Deck Sway Bar 38"/42"
5	532 12 46-70	Retainer Spring
6	532 17 80-24	Sway Bar Deck
8	532 85 08-57	Bolt 3/8-24 x 1.25 Gr. 8
9	810 03 06-00	Washer, Lock 3/8
10	532 14 02-96	Washer, Hardened
11	532 13 84-97	Blade Mower
13	532 13 76-45	Shaft Assembly, Mandrel, Vented (Includes Key Number 6)
14	532 12 87-74	Housing, Mandrel, Vented
15	532 11 04-85	Bearing, Ball, Mandrel
16	532 17 44-93	Stripper, Mower Deck
19	532 13 28-27	Bolt, Shoulder
21	873 68 05-00	Nut
23	532 13 76-07	Bracket, Mower Deflector
24	532 10 53-04	Cap, Sleeve
25	532 12 37-13	Spring, Torsion, Deflector
26	532 11 04-52	Nut, Push
27	532 17 59-43	Shield, Deflector
28	819 11 10-16	Washer 11/32 x 5/8 x 16 Ga.
29	532 10 67-35	Rod, Hinge
30	532 17 39-84	Screw Thdrol. Hex
31	532 18 76-90	Washer, Spacer
32	532 15 35-32	Pulley, Mandrel
33	532 17 83-42	Nut, Toplock
36	532 13 14-94	Pulley, Idler, Flat
40	873 68 06-00	Nut, Crownlock 3/8-16 unc
45	532 12 47-88	Retainer
53	532 13 08-40	Brake Assembly

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
54	532 17 85-15	Washer, Hardened	55	532 13 38-40	Idler Arm Assembly
	532 16 57-23	Spacer, Retainer	56	532 10 69-32	Knob
	532 18 02-14	V-Belt	67	819 11 12-16	Washer 11/32 x 3/4 x 16 Ga.
	86	532 12 50-74	87	532 12 87-72	Runner, LH
		Runner, RH			Washer 13/32 x 13/32 x 11 Ga.
			88	819 13 13-11	Washer 13/32 x 13/32 x 11 Ga.
			96	874 93 06-20	Bolt 3/8-16 x 1-1/4
			97	873 93 06-00	Nut Centerlock 3/8-16 unc
			107	532 13 35-02	Spacer Retainer
			108	532 13 35-03	Stiffener, Idler Arm
			109	874 76 06-40	Bolt, Hex Hd 3/8-16 x 2-1/2
			110	532 14 25-87	Upstop Deck Front 38"
			113	817 06 205-12	Screw 5/16-1 x 3/4
			122	532 13 12-89	Rod, Brake LH
			123	532 16 99-71	Rod, Brake RH
			146	532 16 58-91	Bolt Carriage Idler
			148	532 16 90-22	Spring Return Idler
			149	532 16 58-98	Retainer Spring Yellow
			150	819 09 12-10	Washer 9/32 x 3/4 x 10 Ga.
			152	532 17 27-58	Clutch Cable 38"/46"
			158	817 72 04-08	Screw Hex Thd Cut 1/4-20 x 5/8
			185	532 18 82-34	Head Asm. Cable Clutch
			--	532 13 07-94	Mandrel Assembly (Includes Housing, Shaft, and Shaft Hardware Only - Pulley Not Included)
			--	532 18 13-80	Mower Replacement, Complete

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

**REPAIR PARTS**  
**TRACTOR - MODEL NUMBER MC115T96 (MC115T38B), PRODUCT NO. 964 77 24-01**  
**MOWER LIFT**

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	532 15 94-61	Wire Assm Inner/Sprng w/plunger	15	532 17 32-88	Link Front
2	532 15 94-76	Shaft Assm Lift RH	16	873 35 08-00	Nut Jam Hex 1/2-13 Unc
3	532 17 89-81	Pin Groove	17	532 17 56-89	Trunion
4	812 00 00-02	E Ring #5133-62	18	873 80 08-00	Nut Lockw/Wsh 1/2-13 Unc
5	819 21 16-21	Washer 21/32 x 1 x 21 Ga	19	532 13 98-68	Arm Suspension Rear
6	532 12 01-83	Bearing Nylon Blk 629 Id	20	532 16 35-52	Retainer, Spring
7	532 10 94-13	Grip Handle Bicycle Matte Blk	31	532 16 98-65	Bearing Pvt Lift
8	532 12 45-26	Button Plunger Black	32	873 54 06-00	Nut Crownlock 3/8-24
11	532 13 98-65	Link Lift LH Fixed Length			
12	532 13 98-66	Link Lift RH Fixed Length			
13	532 12 46-70	Retainer Spring			

NOTE: All component dimensions given in U.S. inches  
 1 inch = 25.4 mm.



# SERVICE POLICY WARRANTY

TECUMSEH

Issued January 1980  
Revised January 1991

## LIMITED WARRANTIES FOR

### NEW PEERLESS GEAR POWER TRAIN COMPONENTS

#### **A. Products Warranted**

Peerless Gear and Machine Division of Tecumseh Products Company ("Tecumseh"), subject to the limitations contained below, will, at its option, repair or replace, without charge for parts or labor only, any part of a new Power Train Component (which as used herein means and includes the transaxle, gear box, transmission, differential and right angle drives, and any part of the Power Train Component), EXCEPT any new Power Train Component incorporated in equipment used for commercial or rental purposes, which is found upon examination by any Tecumseh Authorized Service Outlet or by Tecumseh's factory in Grafton, Wisconsin, to be DEFECTIVE IN MATERIAL AND/OR WORKMANSHIP if received by Tecumseh or a Tecumseh Authorized Service Outlet for such examination within TWO YEARS from the date of sale to the original consumer purchaser of Peerless Series 820, 900, 910, 915, 920, 930 transaxles and Series 1100 angle drive and ONE YEAR for all other Peerless products. New Power Train Components incorporated in equipment used for commercial purposes are warranted in the same manner and to the same extent EXCEPT such Power Train Components are warranted for NINETY (90) DAYS ONLY, and must be received by Tecumseh or by a Tecumseh Authorized Service Outlet for such examination within 90 days from the date of sale to the original purchaser. New Power Train Components incorporated in equipment used for rental purposes are warranted in the same manner and to the same extent EXCEPT such Power Train Components are warranted for THIRTY (30) DAYS ONLY, and must be received by Tecumseh or a Tecumseh Authorized Service Outlet within 30 days from the date of sale to the original purchaser.

#### **B. Products And Items Not Warranted**

1. Alterations or Modifications of Power Train Components.
2. Accidents, Normal Maintenance, Failure to follow the Original Equipment Manufacturer's Manual.

This warranty covers only parts of new Power Train Components which are found upon examination to be defective in material or workmanship as delivered to the original purchaser. This warranty does not cover defects caused by depreciation or damage caused by normal wear, accidents, improper maintenance, improper use or abuse of the product, failure to follow the instructions contained in an Instruction Manual for the operation of the Power Train Component and parts. The cost of normal maintenance and replacement of service items which are not defective shall be paid for by the original purchaser.

#### **C. Securing Warranty Service**

Warranty service can be arranged for by contacting either a Tecumseh Authorized Service Outlet (any Tecumseh Registered Service Dealer, Tecumseh Authorized Service Distributor, or Tecumseh Central Warehouse Distributor) or by contacting Tecumseh, c/o Service Manager, Engine and Transmission Group Service Division, 900 North Street, Grafton, Wisconsin 53024. Warranty service can only be performed by a Tecumseh Authorized Service Outlet or by Tecumseh at its factory in Grafton, Wisconsin. At the time of requesting warranty service, evidence must be presented of the date of sale to the original purchaser. The purchaser shall pay any charges for making service calls and/or for transporting the product to and from the place where the inspection and/or warranty work is performed. The purchaser shall be responsible for any damage or loss incurred in connection with the transportation of Power Train Components and/or part(s) of the Power Train Components submitted for inspection and/or warranty work.

#### **D. Limitation of Damages and Implied Warranties**

The foregoing EXPRESSED WARRANTY IS IN LIEU OF ALL OTHER EXPRESS WARRANTIES. Neither Tecumseh nor any of its affiliates makes any warranties, representations or promises, written or oral, as to the quality of the Power Train Component or any of its parts, other than as set forth herein.

ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, TO THE EXTENT THAT EITHER MAY APPLY TO ANY PART(S) OF POWER TRAIN COMPONENTS, SHALL BE LIMITED IN DURATION TO THE PERIODS OF THE EXPRESSED WARRANTIES DEFINED IN PARAGRAPH HEREOF. IN NO EVENT WILL TECUMSEH BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES AND/OR EXPENSES. Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitation(s) or exclusion(s) may not apply to you. This warranty gives you specific legal rights and you may also have other legal rights which vary from state to state.

#### **E. No Dealer Warranty**

Tecumseh neither assumes nor authorizes any other person, natural or corporate, to assume for Tecumseh any other obligations or liabilities in connection with or with respect to any part(s) of a Power Train Component. The seller or dealer of part(s) of a Power Train Component has no authority, whatsoever, to make any representations or promises on behalf of Tecumseh or to modify the terms or limitations of Tecumseh's warranty in any way.

[www.emc-motoculture.com](http://www.emc-motoculture.com)



[www.electrolux.com/mcculloch](http://www.electrolux.com/mcculloch)