


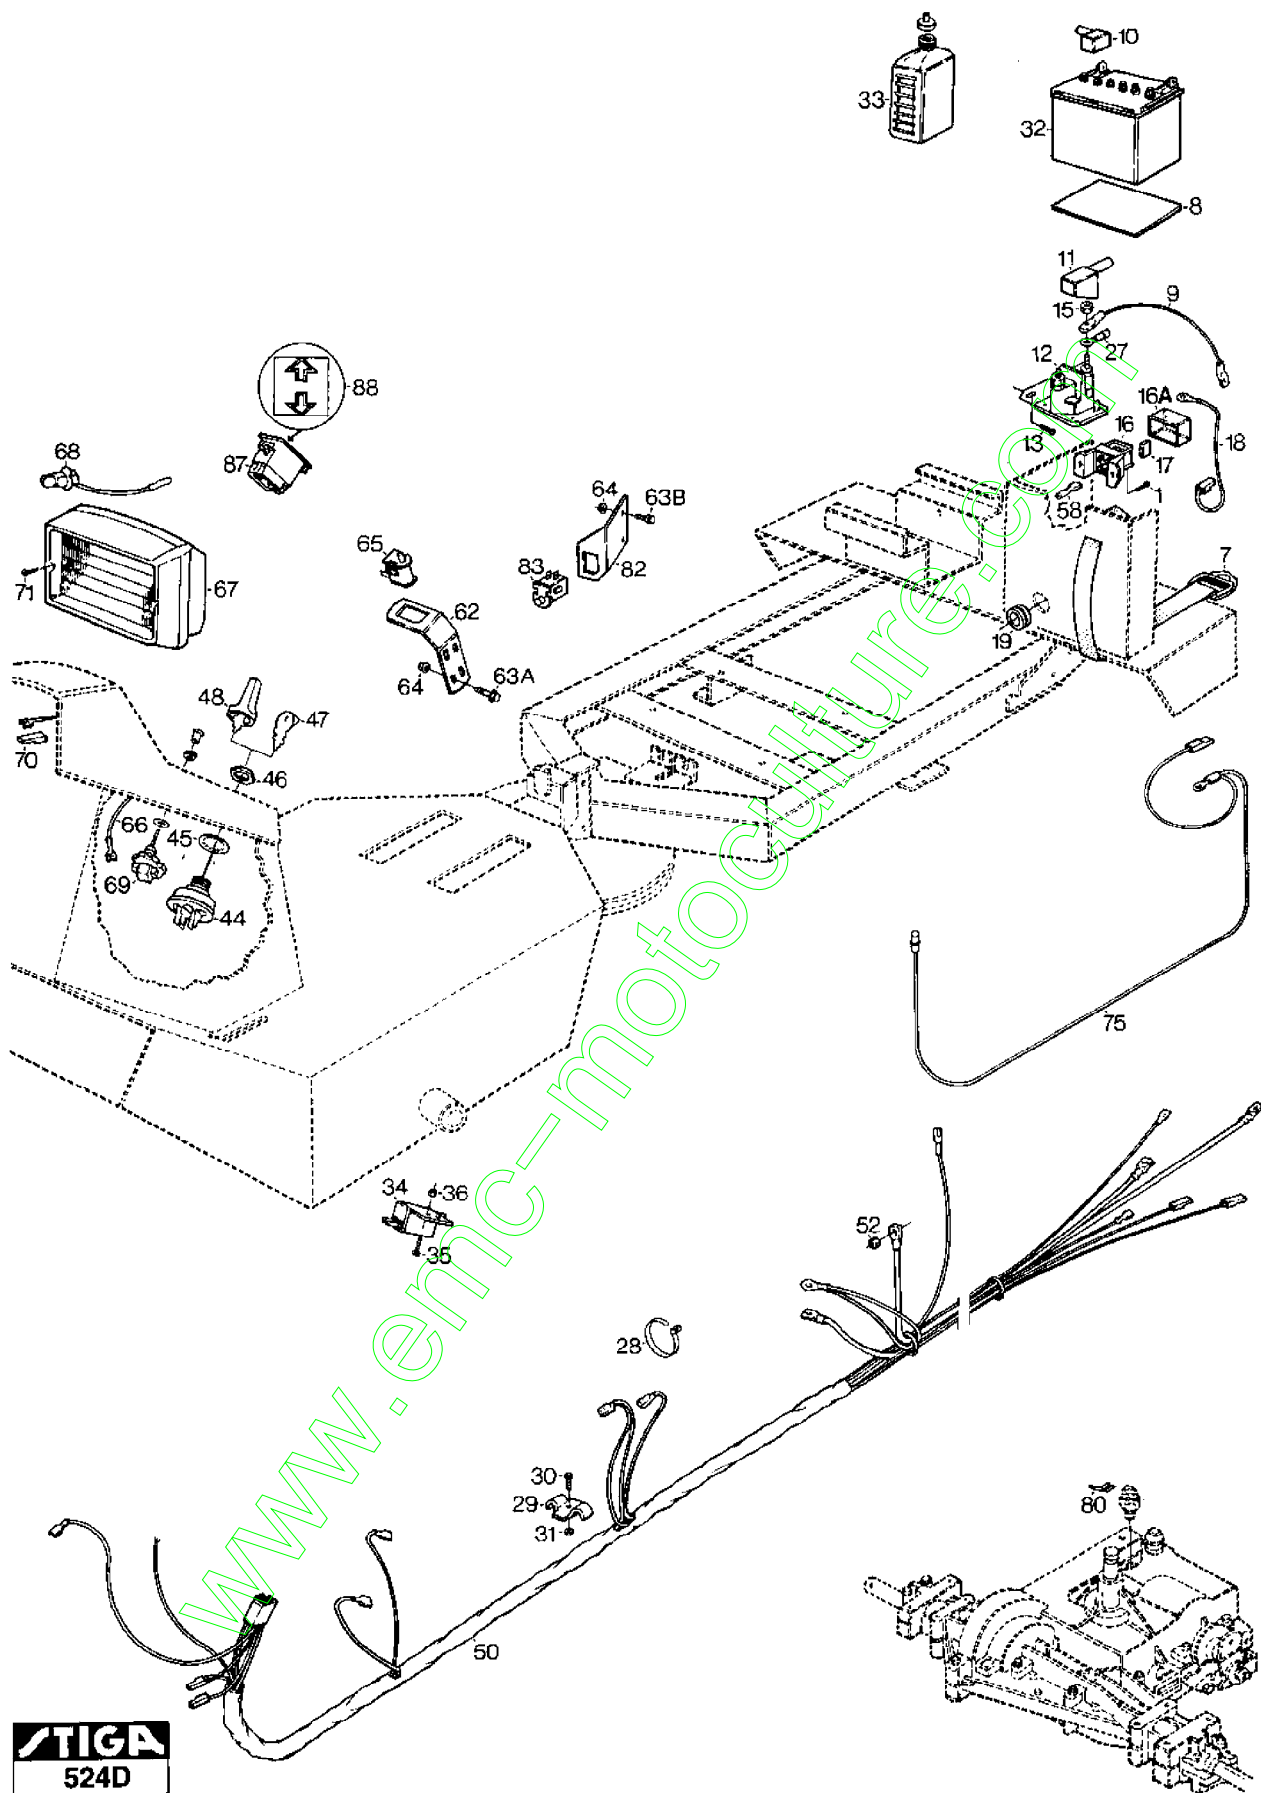


Section: PARK ELECTRICAL SYSTEM

Pos.	Quantity		Spare part No	Description	Kit	Notes	New
	1258	1358	1458	1818			
	1442	1443	1446	1448			
1	2	2	2	2	9849-8006-16	Screw	
7	1	1	1	1	9400-0064-02	Battery holder	
8	1	1	1	1	1134-2333-02	Battery pad	
9	1	1	1	1	1134-0234-01	Battery cable (+)	
10	1	1	1	1	1134-2310-01	Guard cap	
11	1	1	1	1	1134-2948-01	Guard cap	
12	1	1	1	1	1134-2962-01	Solenoid assy	Inkl pos 15
13	2	2	2	2	9849-8009-16	Screw	
15	2	2	2	2	9794-5131-02	.Nut	
16	1	1	1	1	1134-3491-01	Fuse holder	
16A	1	1	1	1	1134-3631-01	Cover-fuse holder	
17	2	2			1134-3496-01	Fuse	10A
17			1	1	1134-3496-02	Fuse-spade type	25A
18	1	1			1134-3874-01	Cable	
19	1	1	1	1	1134-3203-05	Grommet	
27	1	1			9400-0223-00	Cable fitting	
28	9	8	10	10	9579-0003-00	Cable holder	
29	1	1	1	1	1134-2782-01	Clamp	
30	1	1	1	1	9997-0520-16	Screw	
31	1	1	1	1	9739-0531-22	Nut	
32	1	1	1	1	1134-2892-01	Battery w/o acid	
33	1	1	1	1	1134-3300-01	Battery acid	2 x 0.85 liter
34			1	1	1134-3399-01	Switch	
34	1	1			1134-3399-02	Switch	
35	2	2	2	2	9997-0520-16	Screw	
36	2	2	2	2	9747-0531-02	Nut	
44	1	1	1	1	1134-1814-01	Starter switch assy	
45	1	1	1	1	1134-2853-01	.Washer	
46	1	1	1	1	1134-2852-01	.Nut	
47	1	1	1	1	1134-2848-01	.Ignition key	
48	1	1	1	1	1134-3368-01	Ignition key w. gua	
50		1			1134-3489-01	Harness	1358
50		1			1134-3492-01	Harness	1443
50			1		1134-3644-01	Harness	1458
50			1		1134-3645-01	Harness	1446
50				1	1134-3689-01	Harness	1818,1448
50	1				1134-3697-01	Harness	1258
50	1				1134-3718-01	Harness	1442
52	1	1	1	1	9795-3531-02	Nut	
58		1			9400-0238-00	Cable connection	
62	1				1134-3251-01	Bracket	
62			1	1	1134-3251-02	Bracket	
63A	2	2	2	2	9959-0612-16	Screw	12 mm
63B	2		2		9959-0616-16	Screw	16 mm (1442,1446)
64	2	2	2	2	9739-0631-22	Nut	
65			1	1	1134-3156-02	Switch	
65	1				1134-3156-01	Seat switch	
66		1	1	1	1134-3732-01	Cable	
67		1	1	1	1134-1466-01	Headlamp assy.	
68		1	1	1	9400-0075-00	.Glow lamp	
69		1	1	1	9400-0063-00	Switch	
70			2	2	1134-3733-01	Isolation bushing	
71		2	2	2	9847-7919-16	Screw	
75			1	1	1134-3875-01	Cable	
80	2				9400-0171-00	Cable connection	
82	1	1	1		1134-3551-01	Attachment	1442,1443,1446
83	1	1	1		1134-3156-01	Seat switch	1442,1443,1446
87				1	1134-2857-01	Switch	Baklyft/rear lift
88				1	1134-3329-03	Symbol plate-blue	


PARK 12

PARK 13HST, 16HST, 18HST

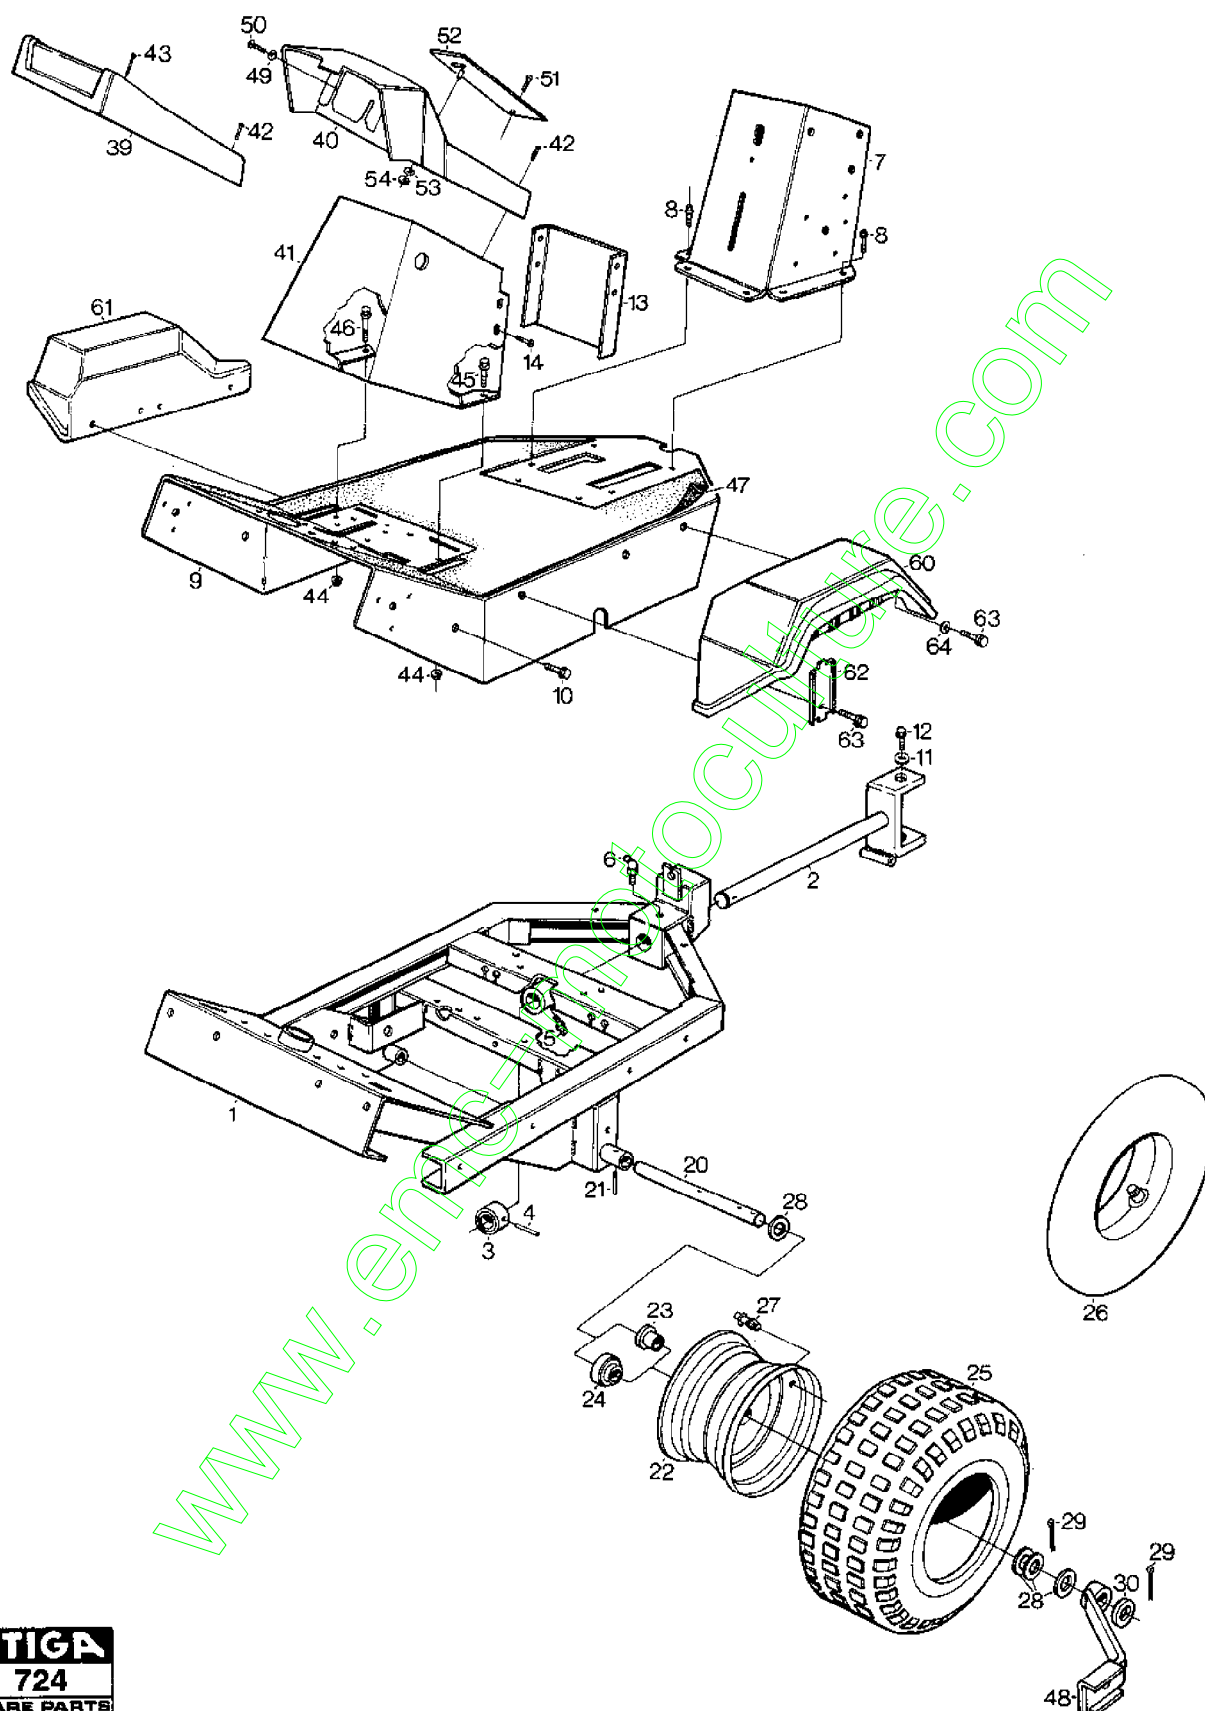


Section: PARK FRONT FRAME

Pos.	Quantity		Spare part No	Description	Kit	Notes	New
	1258	1358	1458	1818			
	1442	1443	1446	1448			
1	1	1	1	1	1134-3411-03	Front frame	
2	1	1	1	1	1134-1757-07	.Clevis	
3	1	1	1	1	1134-0031-00	.Pivot shaft stop	
4	1	1	1	1	9595-0262-00	.Locating pin	
5	1	1	1	1	9501-0500-00	Grease joint	
6	1	1	1	1	9501-0502-00	Grease joint	
7	1	1	1	1	1134-3800-01	Seat bracket-yellow	
8	6	6	6	6	9942-0816-16	Screw	
9	1	1	1	1	1134-1192-22	Floor plate	
10	4	4	4	4	9942-0816-16	Screw	
11	1	1	1	1	9699-0035-02	Flat washer	
12	1	1	1	1	9959-1020-16	Screw	
13			1	1	1134-3363-01	Cover	
14			4	4	9849-8013-16	Screw	
20	2	2	2	2	1134-0075-01	Front axle	
21	2	2	2	2	9595-0258-00	Locating pin	
22	2	2			1134-2668-02	Rim w.bearings	
22			2	2	1134-2888-02	Rim w.ball bearings	
23	1	1			1134-9026-01	.Bearing bush kit	Sats 4 st/kit of 4
24			2	2	9549-0036-00	.Ball bearing	
25	2	2	2	2	9545-0116-00	Tyre	16 x 7.50 - 8
26					9545-0203-00	Inner tube	Reservdel/spare par
27	2	2	2	2	9545-0500-00	Valve	
28	8	8	8	8	1134-0341-01	Washer	
29	4	4	4	4	9599-0080-02	Cotter pin	
30	2	2	2	2	9699-0042-02	Flat washer	
39	1				1134-3370-01	Panel	
40			1	1	1134-3371-05	Panel	
40		1			1134-3761-01	Panel	
41	1	1	1	1	1134-2833-10	Front trim plate	
42	2	1	1	1	9849-8013-16	Screw	
43	2				9849-8032-16	Screw	
44	6	6	6	6	9739-0831-22	Nut	
45	2	2	2	2	9959-0816-16	Screw	L = 16 mm
46	4	4	4	4	9959-0820-16	Screw	L = 20 mm
47		1	1	1	1134-3546-01	Floor mat	
47	1				1134-3535-01	Floor mat	
48	2	2	2	2	1134-3710-01	Attachment	
49		2	2	2	9699-0099-02	Washer	
50		2	2	2	9849-8013-16	Screw	
51		1	1	1	9849-8032-16	Screw	
52		1			1134-3755-01	Cover	
52			1	1	1134-3758-01	Cover	
53		1			9699-0062-02	Flat washer	
54		1			9675-0012-02	Locking washer	
60	1	1	1	1	1134-2174-01	Mudguard-L.H.	
61	1	1	1	1	1134-2174-02	Mudguard-R.H.	
62	4	4	4	4	1134-0225-00	Support plate	
63	6	6	6	6	9942-0816-16	Screw	
64	2	2	2	2	9699-0056-02	Flat washer	

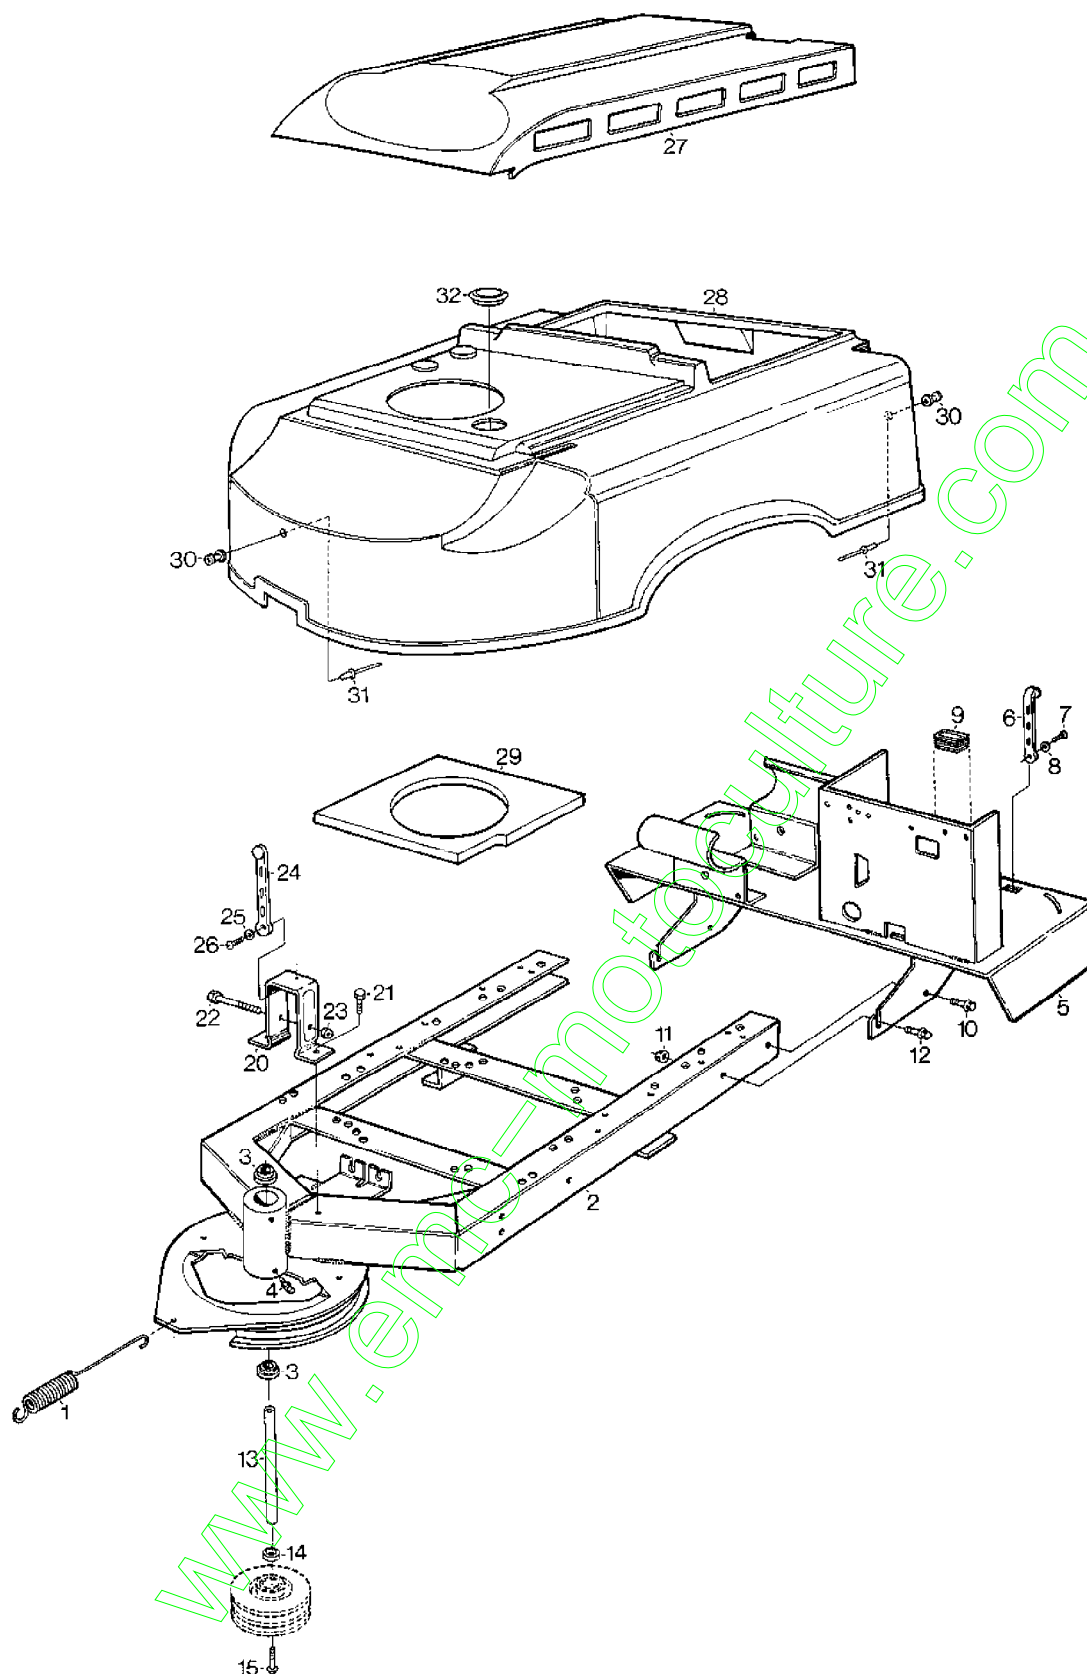

Section: PARK REAR FRAME

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	1258 1358 1458 1818					
	1442 1443 1446 1448					
1	1	1	1	1	1134-2171-01 Spring	
2	1	1	1	1	1134-3412-01 Rear frame assy	
3	2	2	2	2	9547-0001-00 .Bearing	
4	2	2	2	2	9501-0500-00 Grease joint	
5	1	1	1	1	1134-2899-03 Bumper-rear	
6	1	1	1	1	1134-9028-01 Rubber strap kit	Sats 3 st/kit of 3
7	2	2	2	2	9849-8013-16 Screw	
8	2	2	2	2	9699-0087-02 Flat washer	
9	3	3	3	3	1134-3540-01 Plastic plug	1442,1443,1446,1448
10	2	2	2	2	9942-0816-16 Screw	
11	2	2	2	2	9739-0831-22 Nut	
12	2	2	2	2	9959-0820-16 Screw	
13	1	1	1	1	1134-0057-00 Centre shaft	
14	1	1	1	1	1134-0052-00 Bearing spacer	
15	1	1	1	1	9959-1025-16 Screw	
20	1	1	1	1	1134-2951-01 Engine cover suppor	
21	2	2	2	2	9942-0612-16 Screw	
22	1	1	1	1	9997-0670-12 Screw	
23	1	1	1	1	9747-0631-02 Lock nut	
24	1	1	1	1	1134-9028-01 Rubber strap kit	Sats 3 st/kit of 3
25	1	1	1	1	9699-0087-02 Flat washer	
26	1	1	1	1	9849-8013-16 Screw	
27	1	1	1	1	1134-2215-01 Engine cover	
28	1	1	1	1	1134-3215-01 Engine hood	
29	1	1			1134-2053-01 Foam pad	H = 15 mm
29			1		1134-2053-02 Foam pad	H = 10 mm
29			1		1134-2053-04 Foam pad	H = 5 mm
30	3	3	3	3	9405-0029-00 Knob	
31	3	3	3	3	9632-0516-00 Pop rivet	
32			1	1	1134-2944-01 Cover	

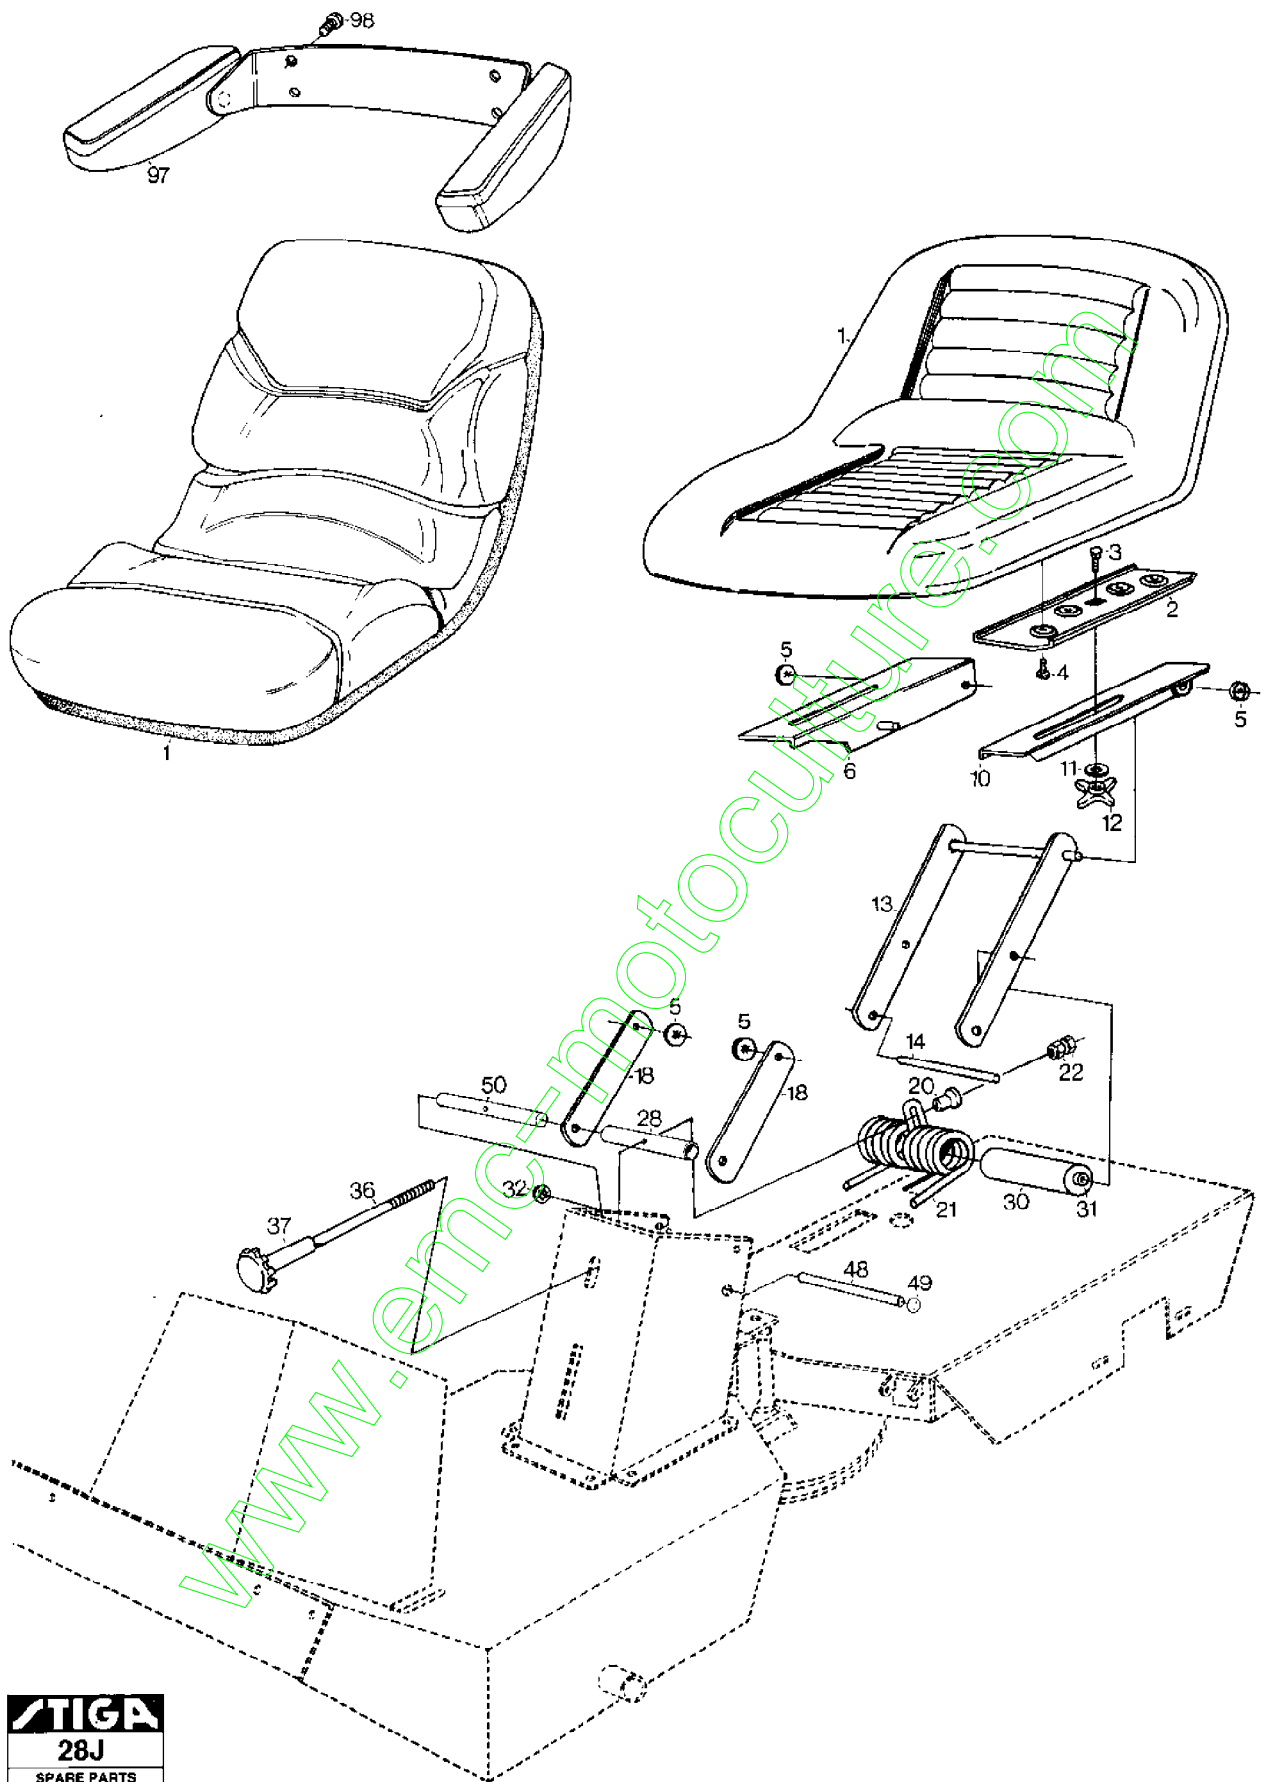


Section: PARK SEAT

Pos.	Quantity				Spare part No	Description	Kit	Notes	New
	1258	1358	1458	1818					
	1442	1443	1446	1448					
1	1	1	1		1134-2541-01	Seat		1258,1358,1443,1446	
1			1	1	1134-3286-01	Seat		1448,1458,1818	
1	1				1134-0800-06	Seat		1442	
2	2	2	2	2	1134-2961-01	Seat adapter			
3	2	2	2	2	9898-0820-16	Screw			
4	4	4	4	4	9988-3616-16	Screw			
5	4	4	4	4	9675-0017-02	Lock washer			
6	1	1	1	1	1134-3618-01	Seat bracket-R.H.			
10	1	1	1	1	1134-3618-02	Seat bracket-L.H.			
11	2	2	2	2	9699-0062-02	Flat washer			
12	2	2	2	2	1134-1711-01	Knob			
13	1	1	1	1	1134-1652-01	Spring shackle			
14	1	1	1	1	1134-0050-00	Seat rod			
18	2	2	2	2	1134-1650-01	Tie bar			
20	1	1	1	1	1134-0493-00	Spring nut			
21	1	1	1	1	1134-0015-00	Seat spring			
22	2	2	2	2	9799-0831-02	Nut			
28	1	1	1	1	1134-2846-01	Tube			
30	1	1	1	1	1134-1883-01	Axle			
31	1	1	1	1	1134-0022-00	Control rod			
32	2	2	2	2	9672-0004-02	Lock washer			
36	1	1	1	1	1134-2163-01	Rod			
37	1	1	1	1	1134-2166-01	Spacer			
48	1	1	1	1	1134-2454-01	Shaft			
49	2	2	2	2	9672-0006-02	Lock washer			
50	1	1	1	1	1134-2847-01	Shaft			
97				1	..13-1962-11	Arm rest			
98				2	9988-3719-16	.Screw		3/8"	


www.emc-motoculture.com

PARK 16HST, 18HST

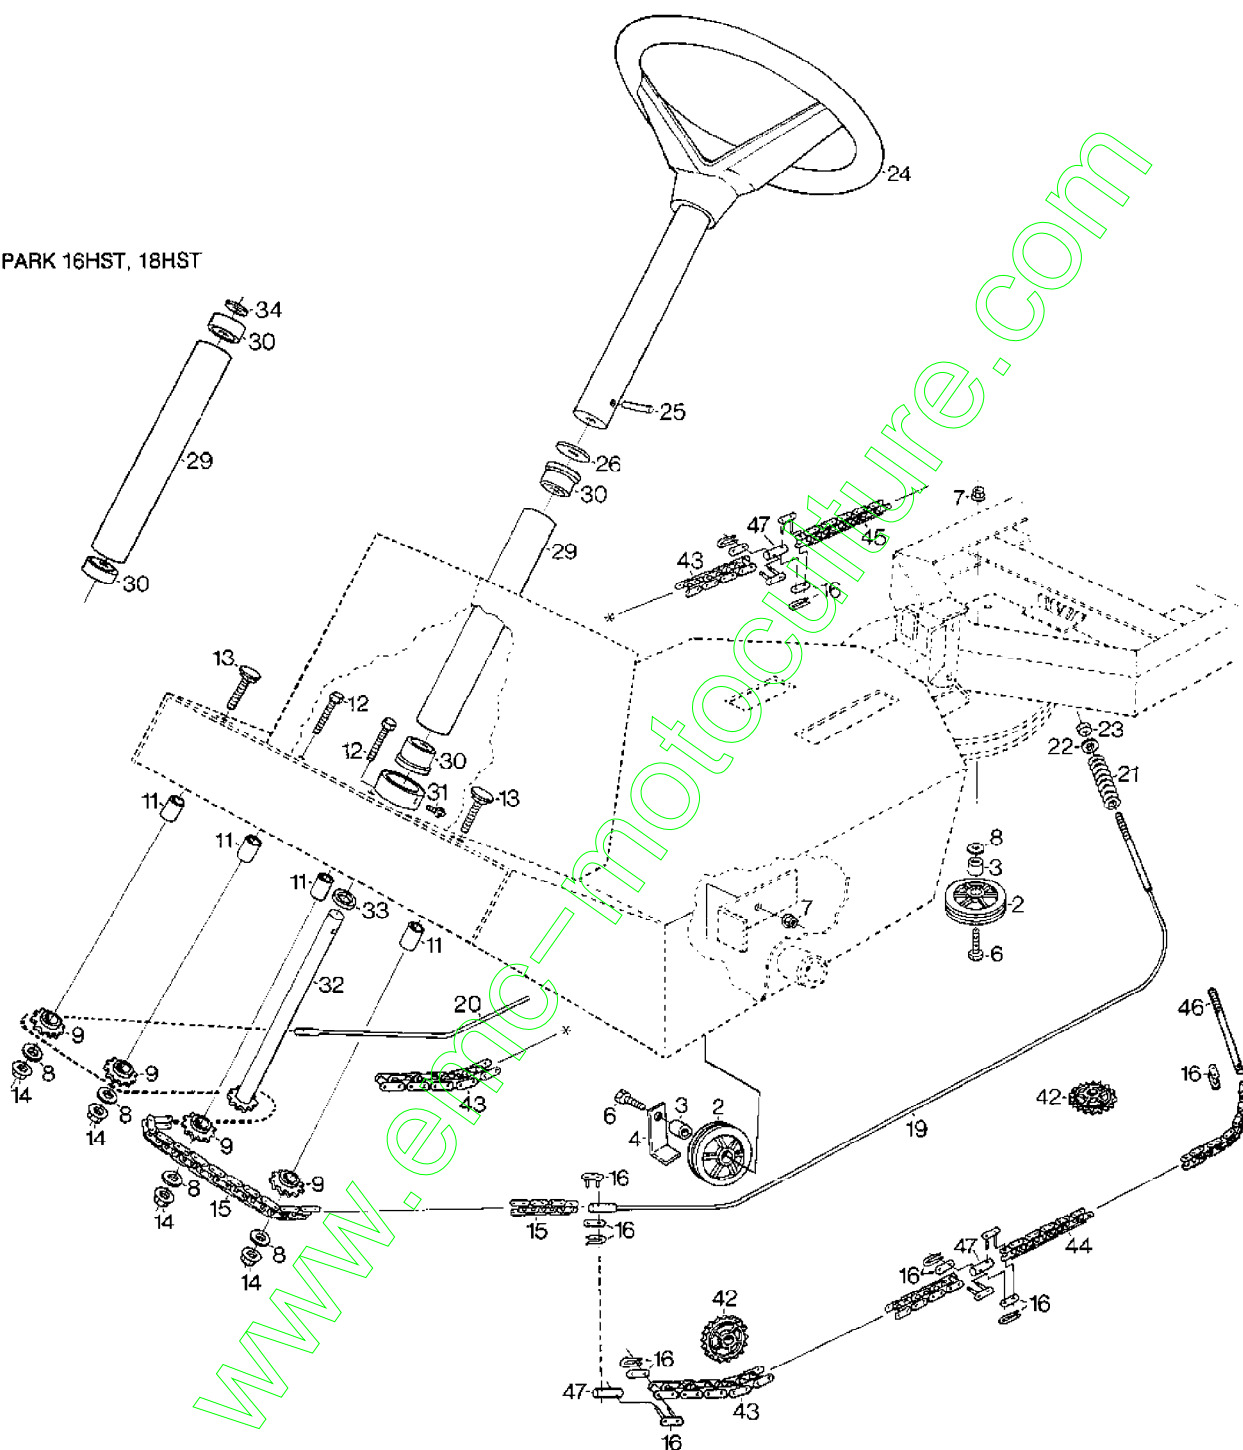


Section: PARK STEERING

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
1258	1358	1458	1818			
1442	1443	1446	1448			
2	2	2	1134-9025-01	Steering pulley-kit	Sats 2 st/kit of 2	
3	3	3	1134-0041-01	Bushing		
4	2	2	1134-3022-01	Cable holder		
6	3	3	9997-1030-16	Screw		
7	3	3	9739-1031-22	Nut		
8	5	5	9699-0035-02	Flat washer		
9	4	4	1134-2816-01	Sprocket		
11	4	4	1134-0041-02	Idler wheel bush		
12	2	2	9997-1040-12	Screw		
13	2	2	9897-1040-12	Screw		
14	4	4	9739-1031-22	Nut		
15	1	1	1134-2820-01	Chain w/o lock		
16	2	2	1134-2824-01	Chain lock		
19	1	1	1134-2817-01	Steering cable-LH	L = 939 mm	
20	1	1	1134-2817-02	Steering cable-RH	L = 990 mm	
21	2	2	1134-2818-01	Spring		
22	2	2	9699-0090-02	Flat washer		
23	2	2	9747-0831-02	Lock nut		
24	1	1	1134-1966-03	Steering wheel		
25	1	1	9595-0262-00	Locating pin		
26	1	1	9699-0103-02	Flat washer	0.5 mm	
26	1	1	9699-0114-02	Flat washer	1.0 mm	
29	1	1	1134-1305-03	Steering column-low		
29		1	1134-3085-01	Steering column-low		
30	2	2	1134-1901-01	Bearing		
30		2	9549-0017-00	Ball bearing		
31	2	2	9942-0612-16	Screw		
32	1	1	1134-2821-01	Steering rod		
32		1	1134-3084-01	Steering rod		
33		1	1134-2837-02	Spacer		
33	1	1	1134-2837-01	Spacer		
34		1	9695-0011-00	Washer		
42		3	1134-3547-01	Sprocket		
43		2	1134-2820-02	Chain	41 länk/link	
44		1	1134-2820-02	Chain	41 länk/link	
45		1	1134-2820-04	Chain	45 länk/link	
46		2	1134-3550-01	End nipple		
47		4	1134-3565-01	Connection nipple		

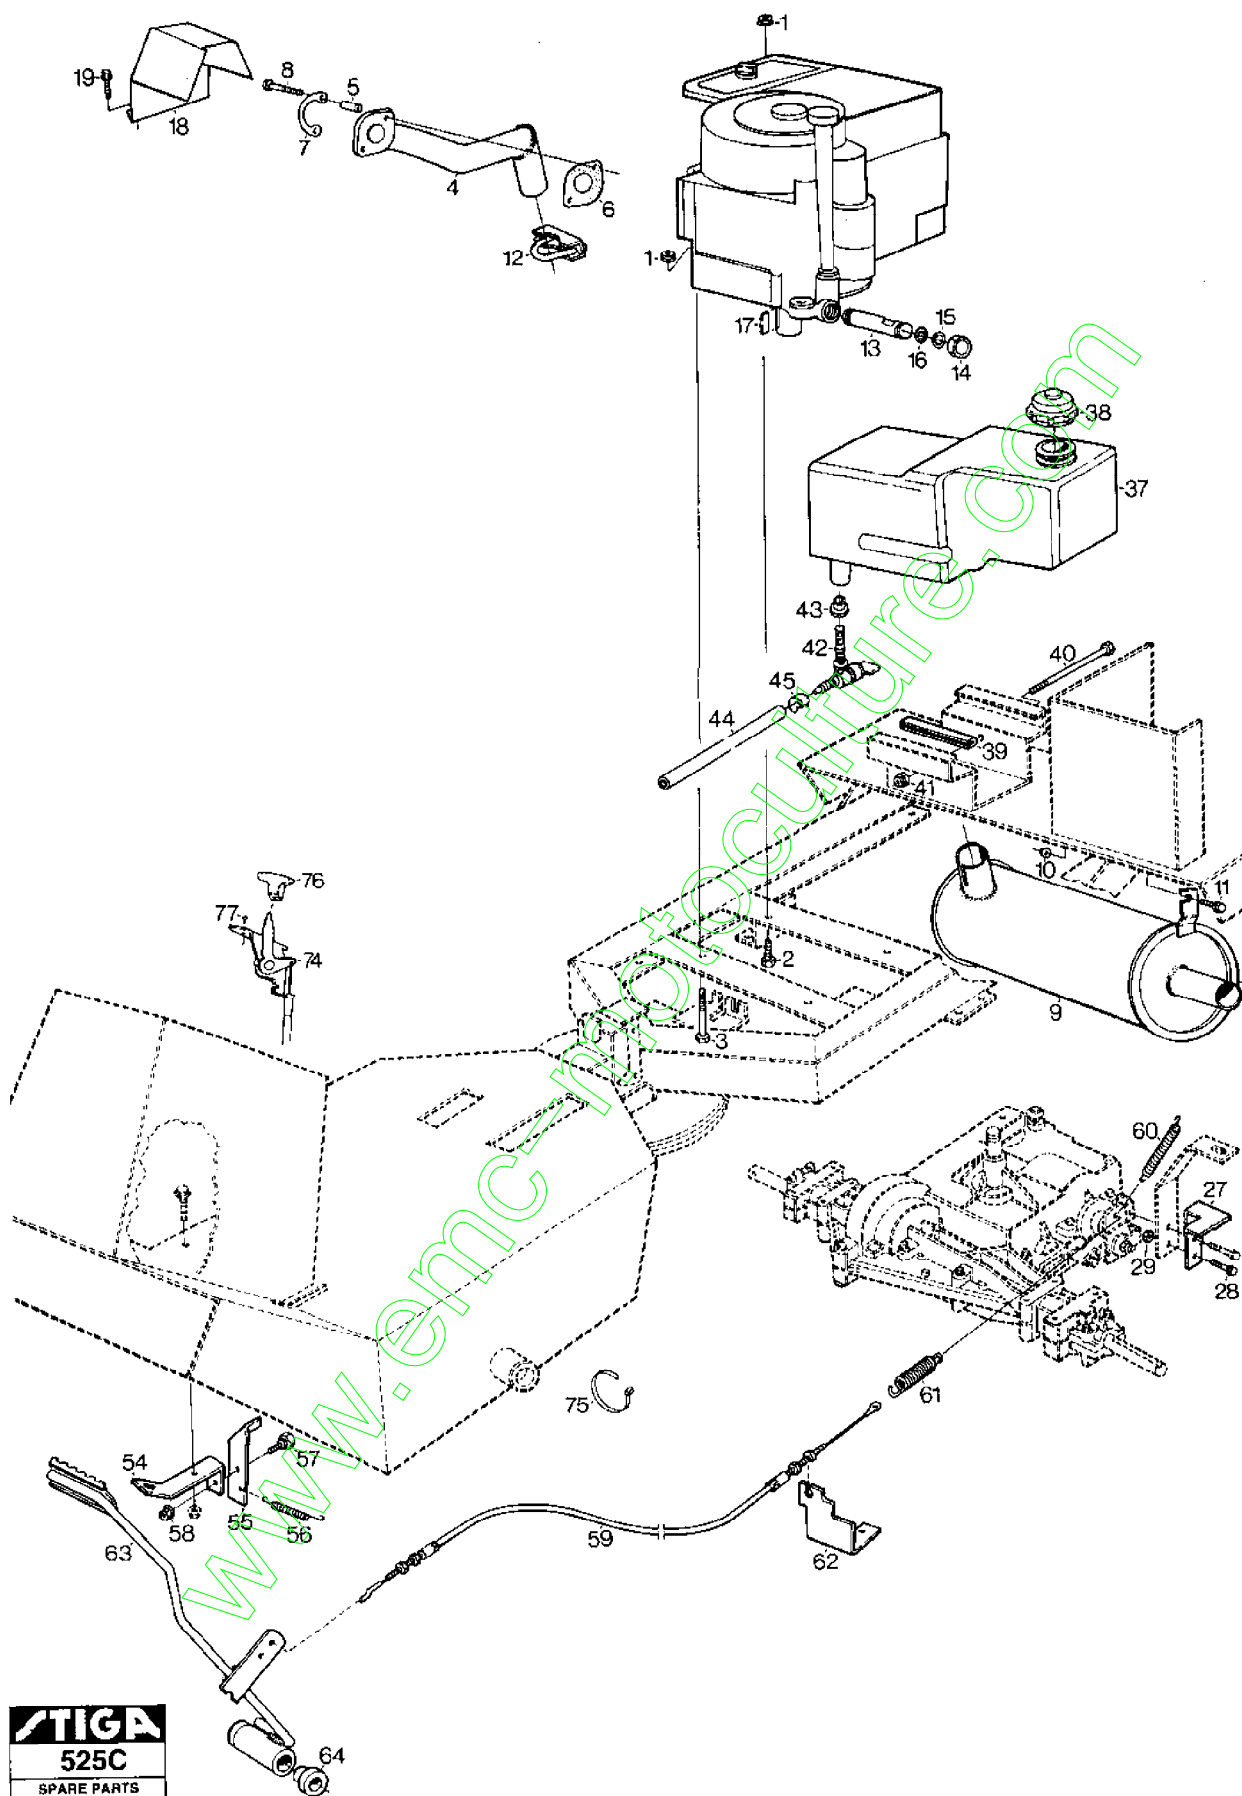

Section: PARK CLASSIC ENGINE BRAKE

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	1258					
	1442					
1	4	9739-0831-22	Nut			
2	3	9997-0840-16	Screw		L = 40 mm	
3	1	9997-0870-16	Screw		L = 70 mm	
4	1	1134-3738-01	Exhaust pipe			
5	2	1134-1565-01	Spacer			
6	1	1134-0433-00	Muffler gasket			
7	1	1134-2462-01	Lock			
8	2	9988-3651-12	Screw			
9	1	1134-3244-01	Silencer			
10	1	9739-0831-22	Nut			
11	1	9959-0816-16	Screw			
12	1	9578-0011-00	Clamp			
13	1	1134-2212-01	Oil drain pipe assy			
14	1	1134-0995-01	.Plug			
15	1	9404-0020-00	.O-ring			
16	1	1134-0997-01	.Fibre gasket			
17	1	9600-0250-00	Key			
18	1	1134-2733-01	Heat protection			
19	2	9942-0612-16	Screw			
27	1	1134-2045-01	Brake stop			
28	1	9959-0816-16	Screw			
29	1	9739-0831-22	Nut			
37	1	1134-3593-01	Fuel tank			
38	1	1134-2877-02	Fuel tank cap			
39	2	1134-2941-01	Protection strip			
40	1	9997-0812-02	Screw			
41	1	9747-0831-02	Lock nut			
42	1	1134-3224-01	Fuel shut-off valve			
43	1	1134-3225-01	Grommet			
44	1	1134-2975-06	Fuel hose			
45	2	1134-3499-01	Hose clamp			
54	1	1134-1184-02	Bracket			
55	1	1134-2151-01	Stop			
56	1	1131-1497-01	Spring			
57	1	1134-0245-00	Shoulder screw			
58	1	9739-0831-22	Nut			
59	1	1134-3410-02	Brake cable			
60	1	1131-1506-00	Spring			
61	1	1134-3280-01	Spring			
62	1	1134-3403-01	Wire holder			
63	1	1134-2170-03	Pedal assy			
64	1	1134-9024-01	.Bearing kit		Sats 4 st/kit of 4	
74	1	1134-1975-11	Gas control			
75	1	9579-0008-00	Cable holder			
76	1	9403-0035-10	Handle			
77	2	9849-8013-16	Screw			

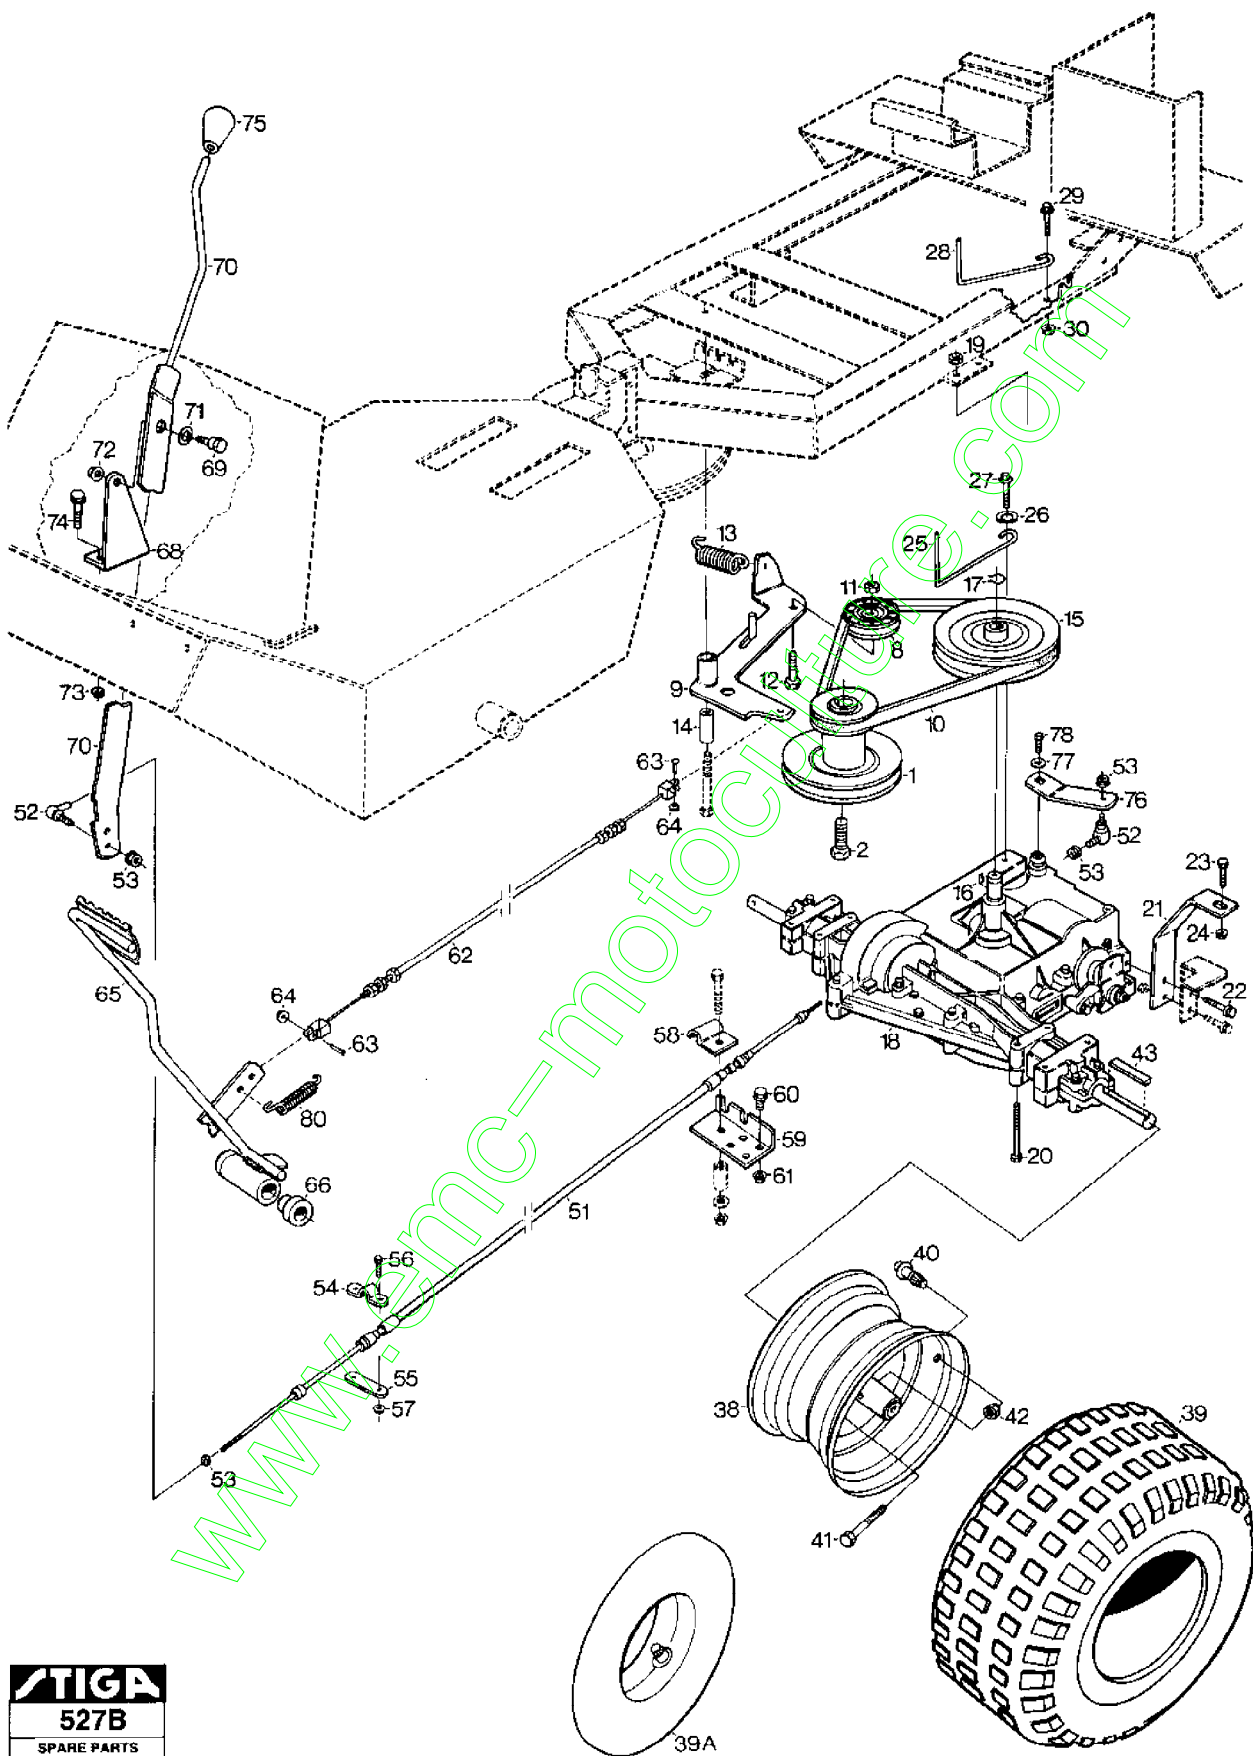


Section: PARK CLASSIC TRANSMISSION

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
1258 1442						
1	1	1	1134-2020-01	Engine pulley		
2	1	1	9987-5338-12	Screw		
8	1	1	1134-9027-01	Tension roller		
9	1	1	1134-2015-03	Tension arm		
10	1	1	1134-9035-01	V-belt	= 9585-0078-00	
11	1	1	9799-1031-02	Nut		
12	1	1	9997-1030-16	Screw		
13	1	1	1134-0645-00	Spring		
14	1	1	1134-1565-01	Spacer		
15	1	1	1134-1849-01	Belt pulley		
16	1	1	9600-0050-00	Key		
17	1	1	9650-0016-04	Lock ring		
18	1	1	1134-3716-01	Transaxle assy	Peerless MST205-529	
18		1	1134-3716-02	Transaxle assy		
19	4	4	9739-0831-22	Nut		
20	4	4	9997-0870-16	Screw		
21	1	1	1134-2986-01	Bracket		
22	1	1	9942-0820-16	Screw		
23	1	1	9959-0820-16	Screw		
24	1	1	9739-0831-22	Nut		
25	1	1	1134-3289-01	Belt guide		
26	1	1	9699-0056-02	Flat washer		
27	1	1	9942-0820-16	Screw		
28	1	1	1134-3289-01	Belt guide		
29	1	1	9959-0820-16	Screw		
30	1	1	9739-0831-22	Nut		
38	2	2	1134-3175-02	Rim-rear		
39	2	2	9545-0116-00	Tyre	16 x 7.50 - 8	
39A			9545-0203-00	Inner tube	Reservdel/spare par	
40	2	2	9545-0500-00	Valve		
41	2	2	9997-0840-16	Screw		
42	2	2	9747-0831-02	Lock nut		
43	2	2	1134-2471-01	Key		
51	1	1	1134-2031-02	Gear shifter cable		
52	2	2	9570-0001-00	Elbow link		
53	4	4	9739-0531-22	Nut		
54	1	1	1134-0266-00	Attaching clamp		
55	1	1	1134-0267-00	Clamp plate		
56	2	2	9997-0520-16	Screw		
57	2	2	9739-0531-22	Nut		
58	1	1	1134-2021-01	Clamp		
59	1	1	1134-3400-01	Angle plate		
60	2	2	9959-0816-16	Screw		
61	2	2	9739-0831-22	Nut		
62	1	1	1134-2030-04	Clutch cable		
63	2	2	9646-0036-22	Rivet		
64	2	2	9675-0008-02	Locking washer		
65	1	1	1134-3450-02	Pedal assy		
66	1	1	1134-9024-01	.Bearing kit	Sats 4 st/kit of 4	
68	1	1	1134-0220-01	Gear shifter bracke		
69	1	1	1134-0240-00	Shoulder screw		
70	1	1	1134-2328-01	Gear lever		
71	1	1	9696-0013-01	Bowed washer		
72	1	1	9739-0831-22	Nut		
73	2	2	9739-0831-22	Nut		
74	2	2	9959-0816-16	Screw		
75	1	1	1134-2551-01	Knob		
76	1	1	1134-3279-01	Gear shifter arm		
77	1	1	9699-0060-02	Flat washer		
78	1	1	9987-5016-16	Screw		
80	1	1	1131-1506-00	Spring		

Section: PARK CLASSIC- PRESIDENT-PRO 16 MANUAL LIFTING DEVICE


Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	1258 1358 1458					
	1442 1443 1446					
0	1	1	1	1134-0410-08	Lifting device assy	
1	1	1	1	9403-0110-01	.Handle	
2	1	1	1	1134-0859-03	.Lift lever	
3	1	1	1	1134-0858-00	.Push rod	
4	1	1	1	1134-1889-01	.Eyebolt	
5	1	1	1	1111-0053-00	.Compression spring	
6	2	2	2	9739-0631-22	.Nut	
7	1	1	1	1134-0583-00	.Plastic knob	
8	2	2	2	9595-0258-00	.Locating pin	
9	1	1	1	1134-1884-01	.Lifting shaft	
10	1	1	1	1134-2911-01	.Locking pawl	
11	1	1	1	9675-0008-02	.Locking washer	
12	1	1	1	9675-0012-02	.Locking washer	
13	2	2	2	1134-2684-01	.Bearing	
14	1	1	1	1134-0536-00	.Lift quadrant	
15	1	1	1	1134-0857-00	.Trippet	
16	2	2	2	9739-1031-22	Nut	
19	2	2	2	9959-1020-16	.Screw	
20	2	2	2	9699-0025-02	.Washer	
21	1	1	1	9646-0099-22	.Rivet	

www.emc-motoculture.com

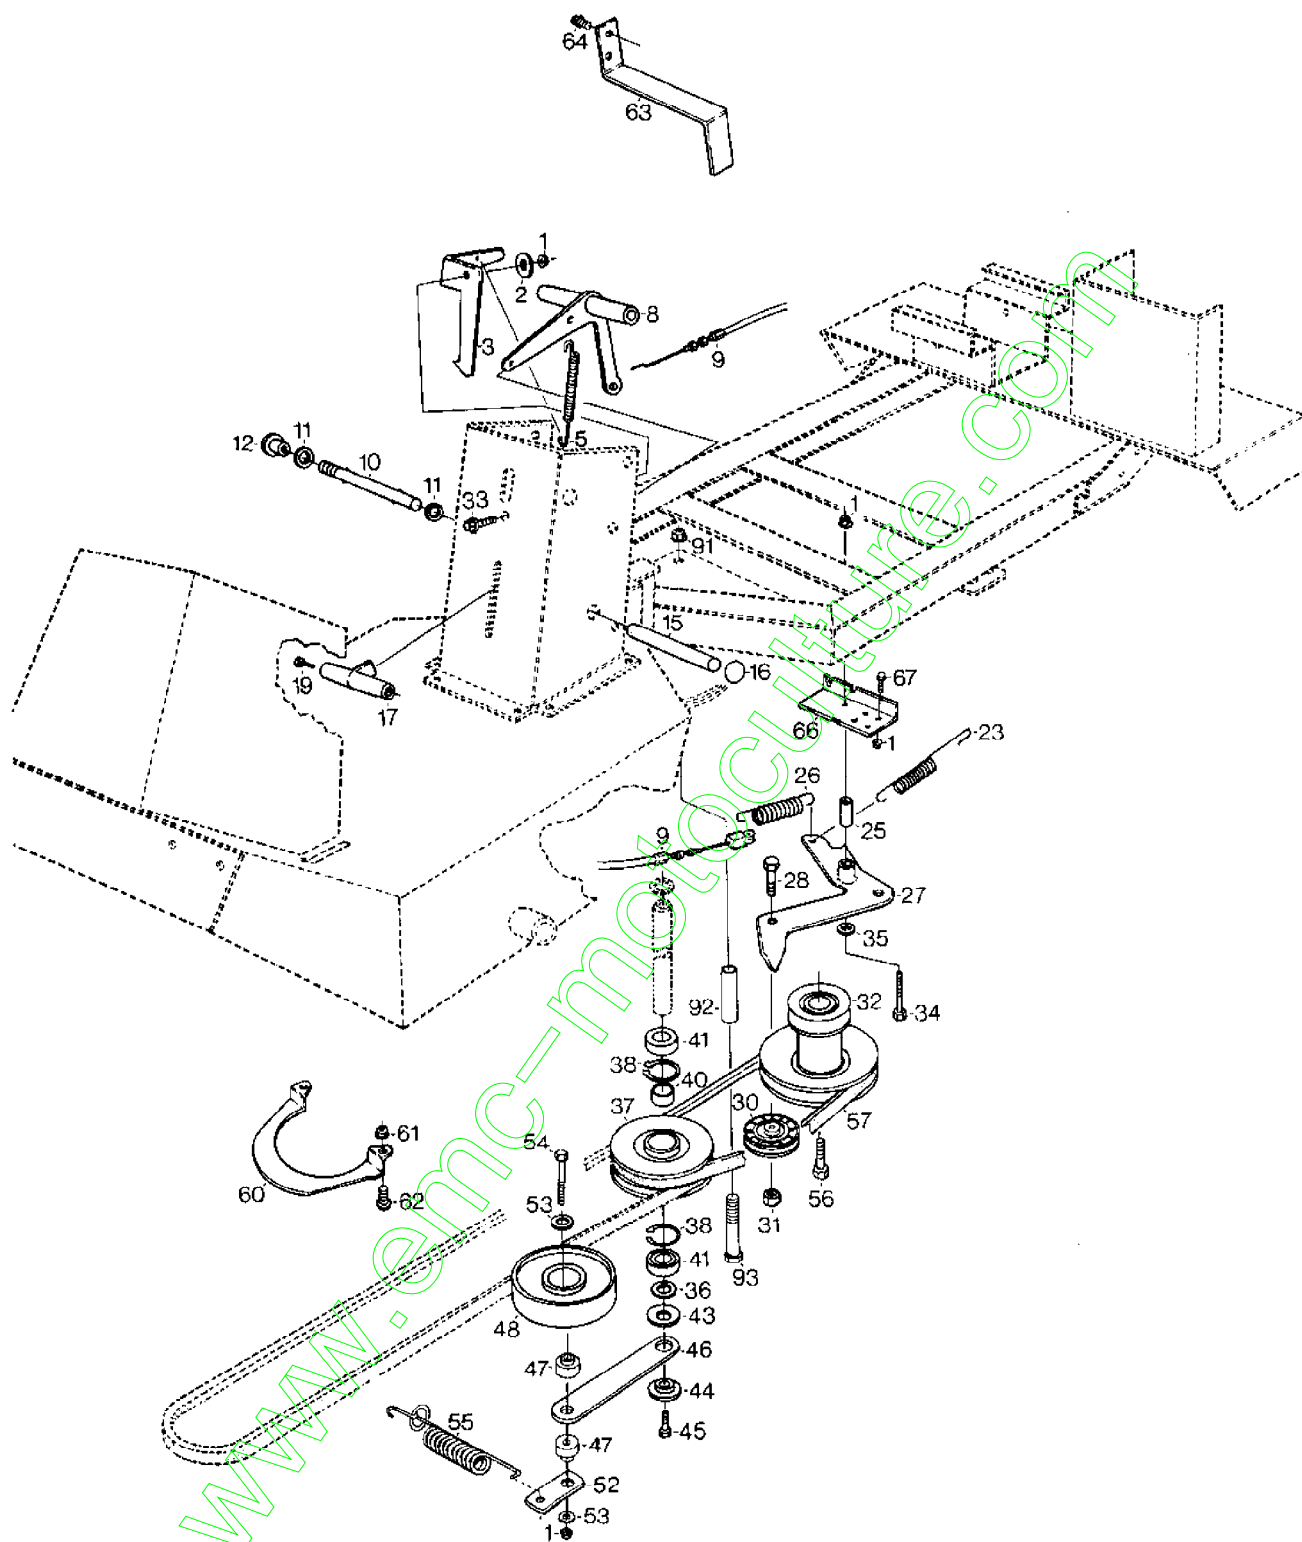

Section: PARK CLASSIC- PRESIDENT-PRO 16 POWER TAKE-OFF

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	1258 1358 1458					
	1442 1443 1446					
1	3	5	3	9739-0831-22	Nut	
2	1	1	1	1134-0143-00	Stop washer	
3	1	1	1	1134-2453-01	Locking pawl	
5	1	1	1	1131-1497-01	Spring	
8	1	1	1	1134-0027-01	Control lever	
8	1	1	1	1134-1396-02	Control lever	1442,1443,1446
9	1	1	1	1134-3573-01	Pto cable	
10	1	1	1	1134-1972-01	Disengaging lever	
11	2	2	2	9699-0025-02	Washer	
12	1	1	1	1134-0583-00	Plastic knob	
15	1	1	1	1134-0022-00	Control rod	
16	2	2	2	9672-0004-02	Lock washer	
17	1	1	1	1134-0153-00	Handle	
19	1	1	1	9847-8016-16	Screw	
23	1	1	1	1131-1506-00	Spring	
25	1	1	1	1134-1565-01	Spacer	
26	1	1	1	1134-1242-02	Spring	
27	1	1	1	1134-2018-01	Tensioning arm	
28	1	1	1	9997-1030-16	Screw	
30	1	1	1	1134-9027-01	Tension roller	
31	1	1	1	9799-1031-02	Nut	
32	1	1		1134-2020-01	Engine pulley	
32			1	1134-3394-01	Engine pulley	
32A	1	1	1	9997-1450-16	Puller-belt pulley	Tillbehör/accessory
33	1	1	1	9959-0820-16	Screw	
34	1	1	1	9997-0850-16	Screw	
35	1	1	1	9699-0056-02	Flat washer	
36	1	1	1	1134-0052-00	Bearing spacer	
37	1	1	1	1134-1769-02	Belt pulley assy	
38	2	2	2	9651-0040-04	.Retaining ring	
40	1	1	1	1134-0051-09	.Spacer	
41	2	2	2	9549-0019-00	.Ball bearing	
43	1	1	1	9699-0109-02	Flat washer	
44	1	1	1	1134-0222-00	Washer	
45	1	1	1	9959-1025-16	Screw	
46	1	1	1	1134-1730-01	Tension wheel arm	
47	2	2	2	1134-1888-01	Spacer	
48	1	1	1	1134-1770-01	Tension roller	
52	1	1	1	1134-1893-01	Spring attachment	
53	2	2	2	9699-0062-02	Flat washer	
54	1	1	1	9997-0865-12	Screw	
55	1	1	1	1134-1322-01	Spring	
56	1	1	1	9987-5338-12	Screw	
57	1	1	1	1134-9012-01	V-belt	= 9585-0056-00
60	1	1	1	1134-3654-01	Finger guard	
61	2	2	2	9739-0631-22	Nut	
62	2	2	2	9959-0612-16	Screw	
63	1	1	1	1134-2381-01	Belt guide	
64	2	2	2	9942-0816-16	Screw	
66		1		1134-3400-01	Angle plate	
67		2		9959-0816-16	Screw	
91	1	1	1	9739-1031-22	Nut	
92	1	1	1	1134-0041-03	Collar	
93	1	1	1	9997-1070-12	Screw	

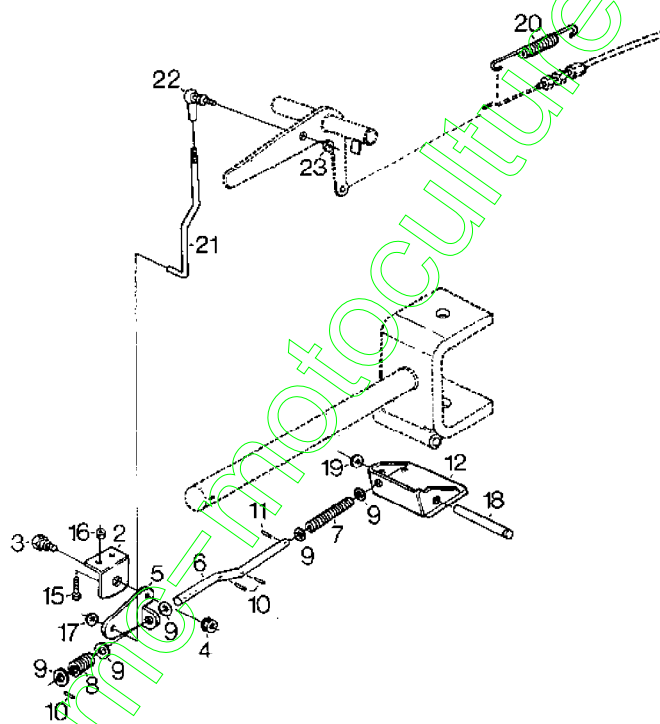

Section: PARK CLASSIC- PRESIDENT-PRO 16 PTO-BRAKE

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
------	----------	---------------	-------------	-----	-------	-----

1258	1358	1458				
1442	1443	1446				

2	1	1	1	1134-2518-01	Console	
3	1	1	1	1134-0245-00	Shoulder screw	
4	1	1	1	9747-0831-02	Lock nut	
5	1	1	1	1134-2522-01	Plate	
6	1	1	1	1134-2520-02	Stay	
7	1	1	1	1134-2663-01	Compression spring	
8	1	1	1	1134-2529-01	Compression spring	
9	5	5	5	9699-0025-02	Washer	
10	3	3	3	9595-0110-00	Locating pin	
11	1	1	1	9595-0153-00	Locating pin	
12	1	1	1	1134-2524-01	Brake	
15	2	2	2	9959-0612-16	Screw	
16	2	2	2	9739-0631-22	Nut	
17	1	1	1	9675-0009-02	Starlock	
18	1	1	1	1134-2521-01	Shaft	
19	2	2	2	9675-0009-02	Starlock	
20	1	1	1	1134-3633-01	Spring	
21	1	1	1	1134-2519-03	Stay	
22	1	1	1	9570-0004-00	Elbow link	
23	1	1	1	9799-0631-02	Nut	