 
 
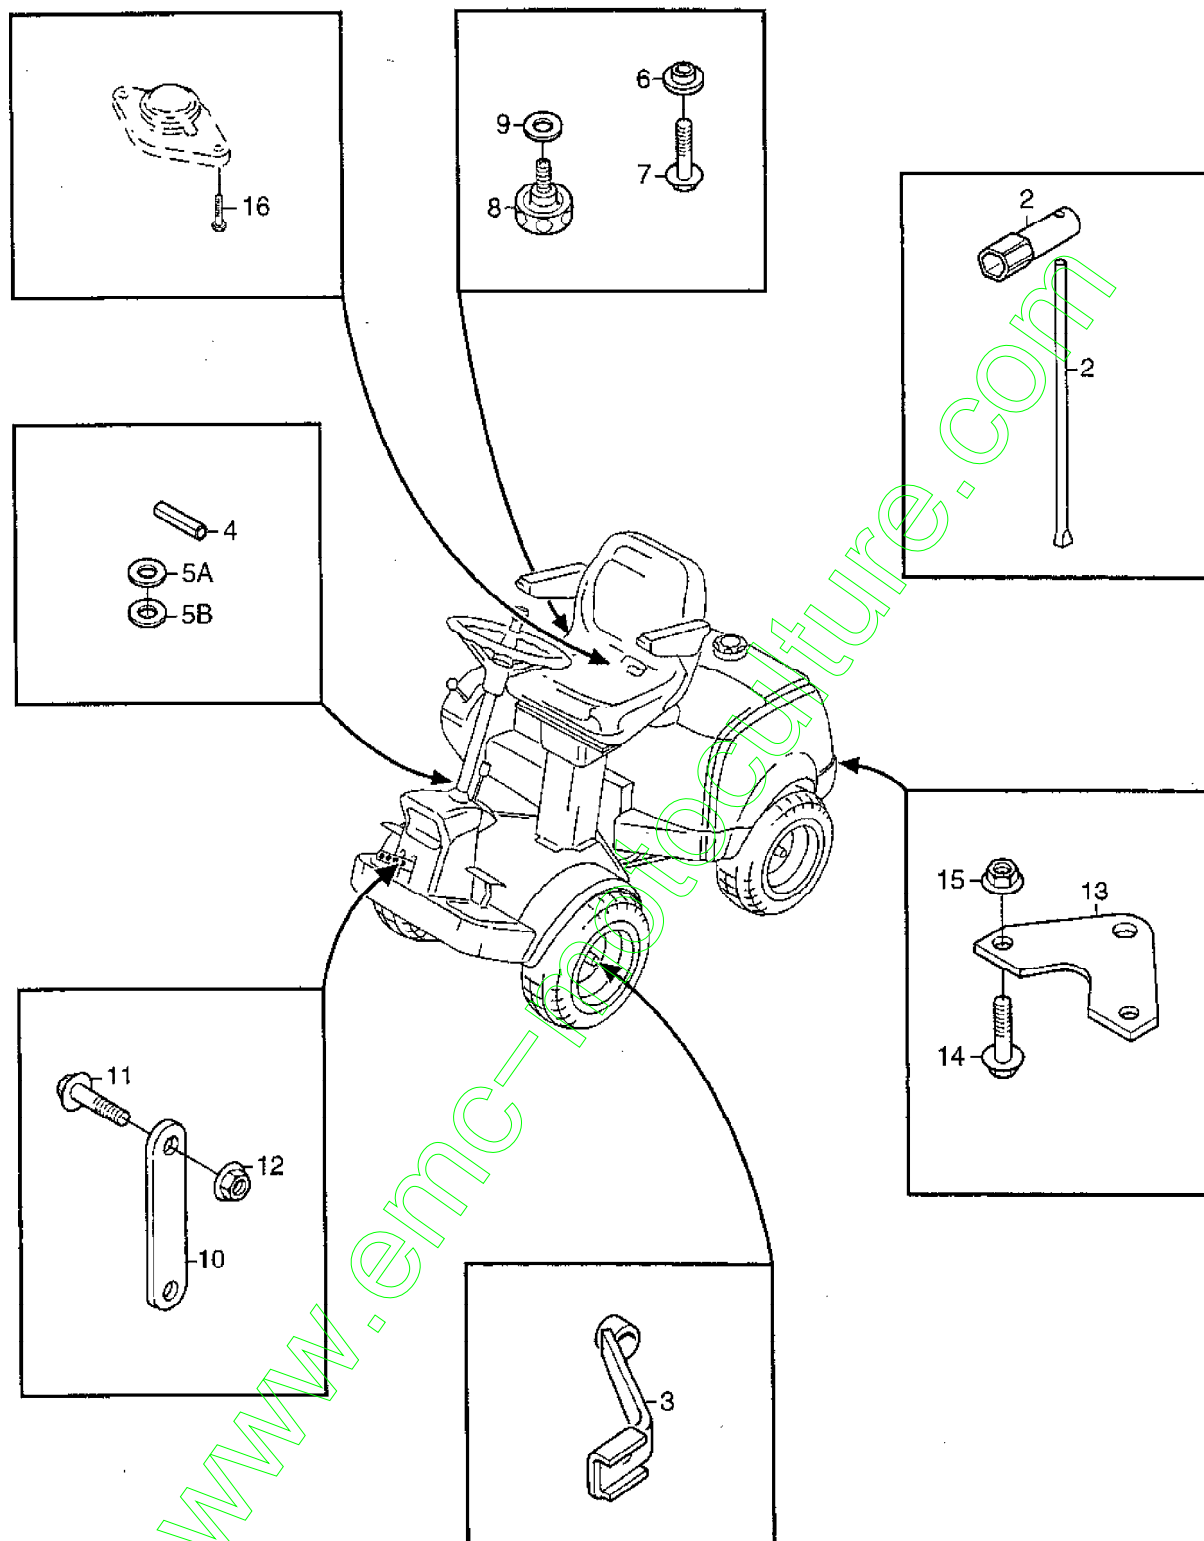 
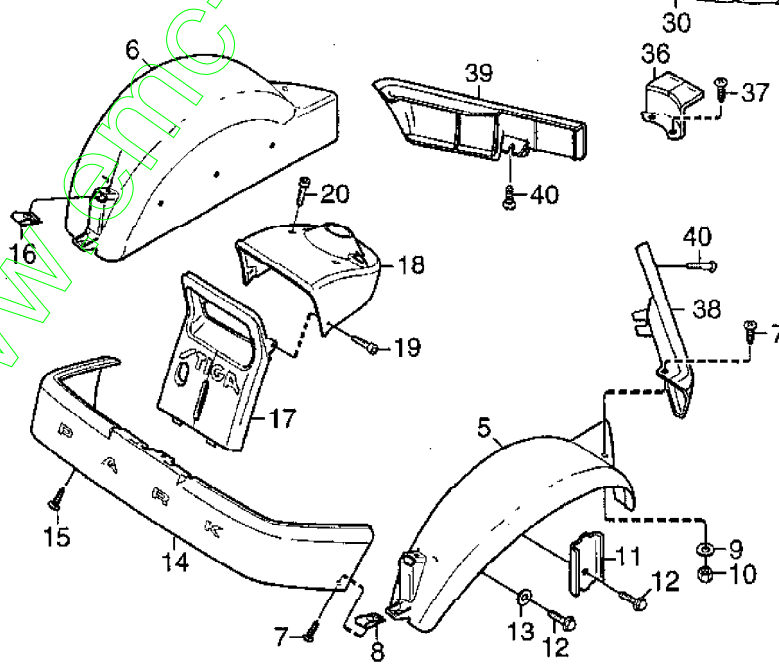 
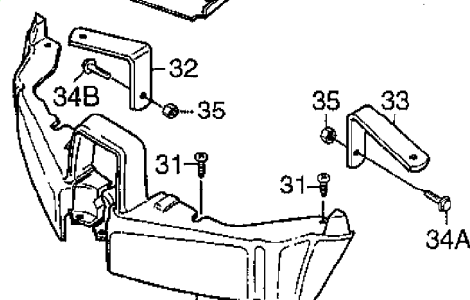 
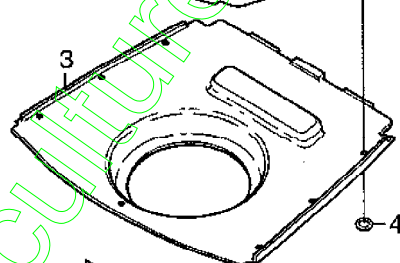 
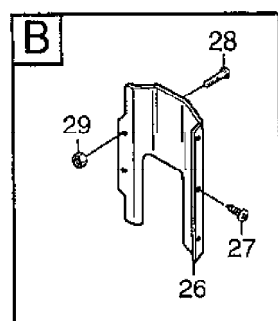 
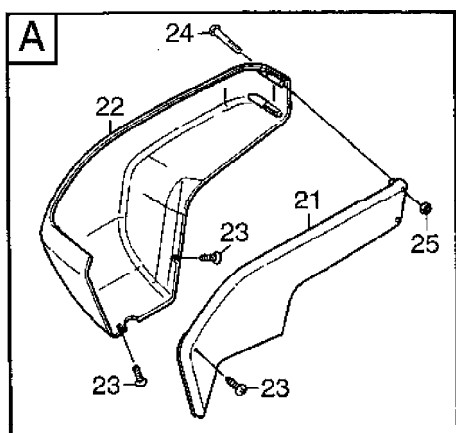 


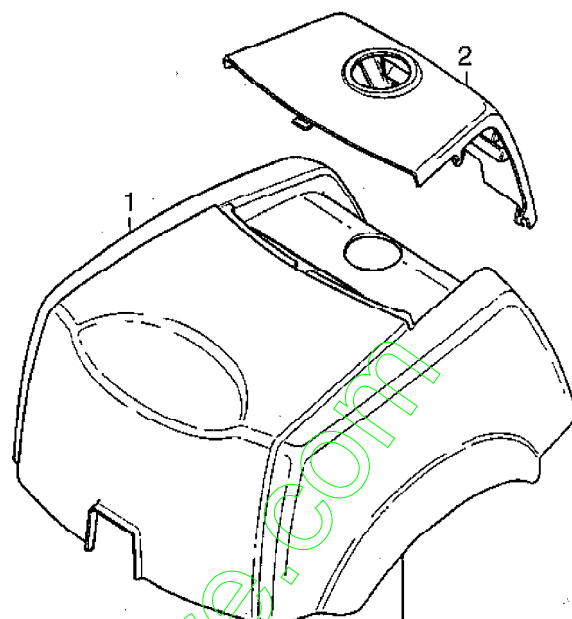

Section: PARK ACCESSORY BAG








Pos.	Quantity	Spare part No	Description	Kit	Notes	New
6112	6114	6218				
6113	6216	6221				
0	1		1134-4249-02	Accessory bag		
0	1	1	1134-4249-01	Assembly parts		
2	1	1	1111-9029-02	.Spark plug wrench	5/8"	
2	1		1111-9029-01	.Spark plug wrench	21 mm	
3	2	2	1134-3710-01	.Tool attachment		
4	1	1	9595-0262-00	.Locating pin		
5A	1	1	9699-0103-02	.Flat washer	0.5 mm	
5B	1	1	9699-0114-02	.Flat washer	1.0 mm	
6	2	2	1134-4185-01	.Flange washer		
7	2	2	9959-0820-16	.Screw		
8	2	2	1134-2609-01	.Knob		
9	2	2	9699-0062-02	.Flat washer		
10	1	1	1134-4035-01	.Extension bar		
11	1	1	9959-1025-16	.Screw		
12	1	1	9747-1031-02	.Lock nut		
13	1	1	1134-4003-01	.Towing plate		
14	2	2	9959-0820-16	.Screw		
15	2	2	9739-0831-22	.Nut		
16	2		9837-8914-12	.Screw		

www.emc-motoculture.com

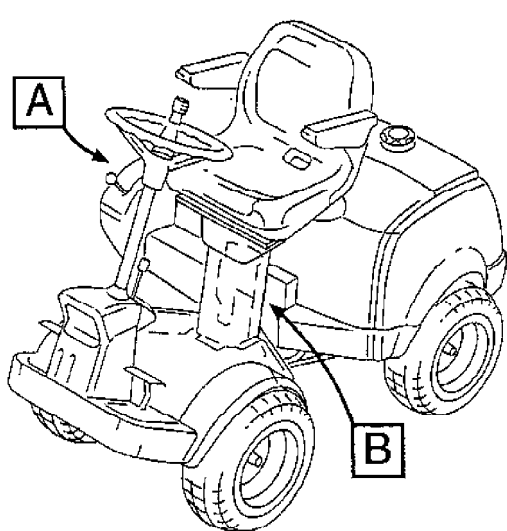


Section: PARK BODY WORK

Pos.	Quantity				Spare part No	Description	Kit	Notes	New
	6112			6218					
	6113	6114	6216	6221					
1	1	1	1	1	1134-3942-01	Engine hood			
2	1	1			1134-3971-02	Engine cover-black			
2			1	1	1134-3971-01	Engine cover-grey			
3	1		1	1	1134-3978-01	Air duct plate-deep			
3		1			1134-3978-02	Air duct plate-shal			
4	7	7	7	7	9675-0008-02	Locking washer			
5	1	1	1	1	1134-3943-01	Mud guard-LH, yell.			
6	1	1	1	1	1134-3943-02	Mud guard-RH, yell.			
7	4	4	4	4	9893-0616-16	Screw			
8	2	2	2	2	1134-4176-01	Clips			
9	2	2	2	2	9699-0025-02	Washer			
10	2	2	2	2	9747-0631-02	Lock nut			
11	2	2	2	2	1134-0225-00	Support plate			
12	6	6	6	6	9945-0816-16	Screw			
13	4	4	4	4	9699-0056-02	Flat washer			
14	1	1			1134-3944-02	Bumper-yellow			
14			1	1	1134-4220-02	Bumper-grey			
15	2	2	2	2	9893-0616-16	Screw			
16	2	2	2	2	1134-4176-01	Clips			
17	1	1			1134-4216-03	Front plate-black			
17			1		1134-4216-01	Front plate-grey			
17				1	1134-4216-02	Front plate-grey		Med hål/with hole	
18	1	1			1134-3984-02	Front plate upper-b			
18			1	1	1134-3984-01	Front plate upper-g			
19	2	2	2	2	9840-8009-16	Screw			
20	2	2	2	2	9946-0525-16	Screw			
21	1	1	1	1	1134-4360-01	Cover-inner			
22	1	1	1	1	1134-3979-01	Cover-outer			
23	5	5	5	5	9946-0525-16	Screw			
24	2	2	2	2	9950-0570-12	Screw			
25	2	2	2	2	9747-0531-02	Nut			
26	1	1	1	1	1134-4152-01	Cover			
27	3	3	3	3	9893-0616-16	Screw			
28	2	2	2	2	9893-0616-16	Screw			
29	2	2	2	2	9739-0631-22	Nut			
30	1	1			1134-3969-02	Spoiler-black			
30			1	1	1134-3969-01	Spoiler-grey			
31	4	4	4	4	9893-0616-16	Screw			
32	1	1	1	1	1134-4012-01	Support-right			
33	1	1	1	1	1134-4012-02	Support-left			
34A	2	2	2		9959-0816-16	Screw		L = 16 mm	
34A				1	9959-0820-16	Screw		L = 20 mm	
34B				1	9959-0830-16	Screw		L = 30 mm	
35	2	2	2	2	9739-0831-22	Nut			
36	1	1	1	1	1134-3985-01	Cover			
37	2	2	2	2	9893-0616-16	Screw			
38		1			1134-3970-03	Moulding left-black			
38			1	1	1134-3970-01	Moulding left-grey			
39		1			1134-3970-04	Moulding-RH, black			
39			1	1	1134-3970-02	Moulding-RH, grey			
40		4	4	4	9893-0616-16	Screw			

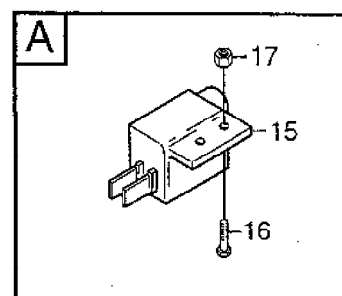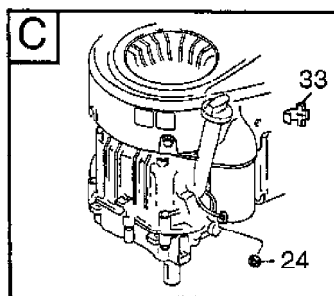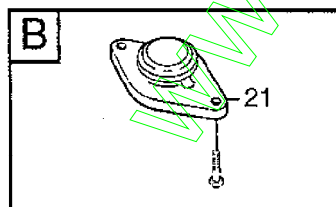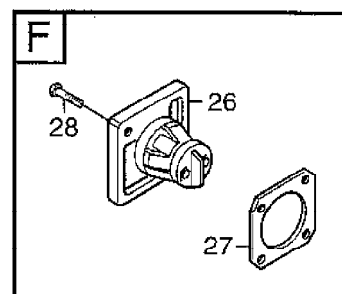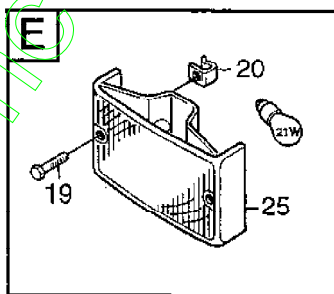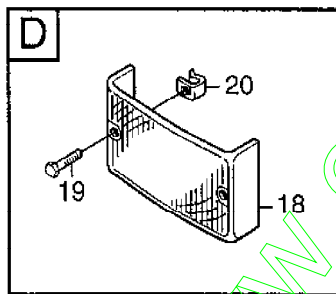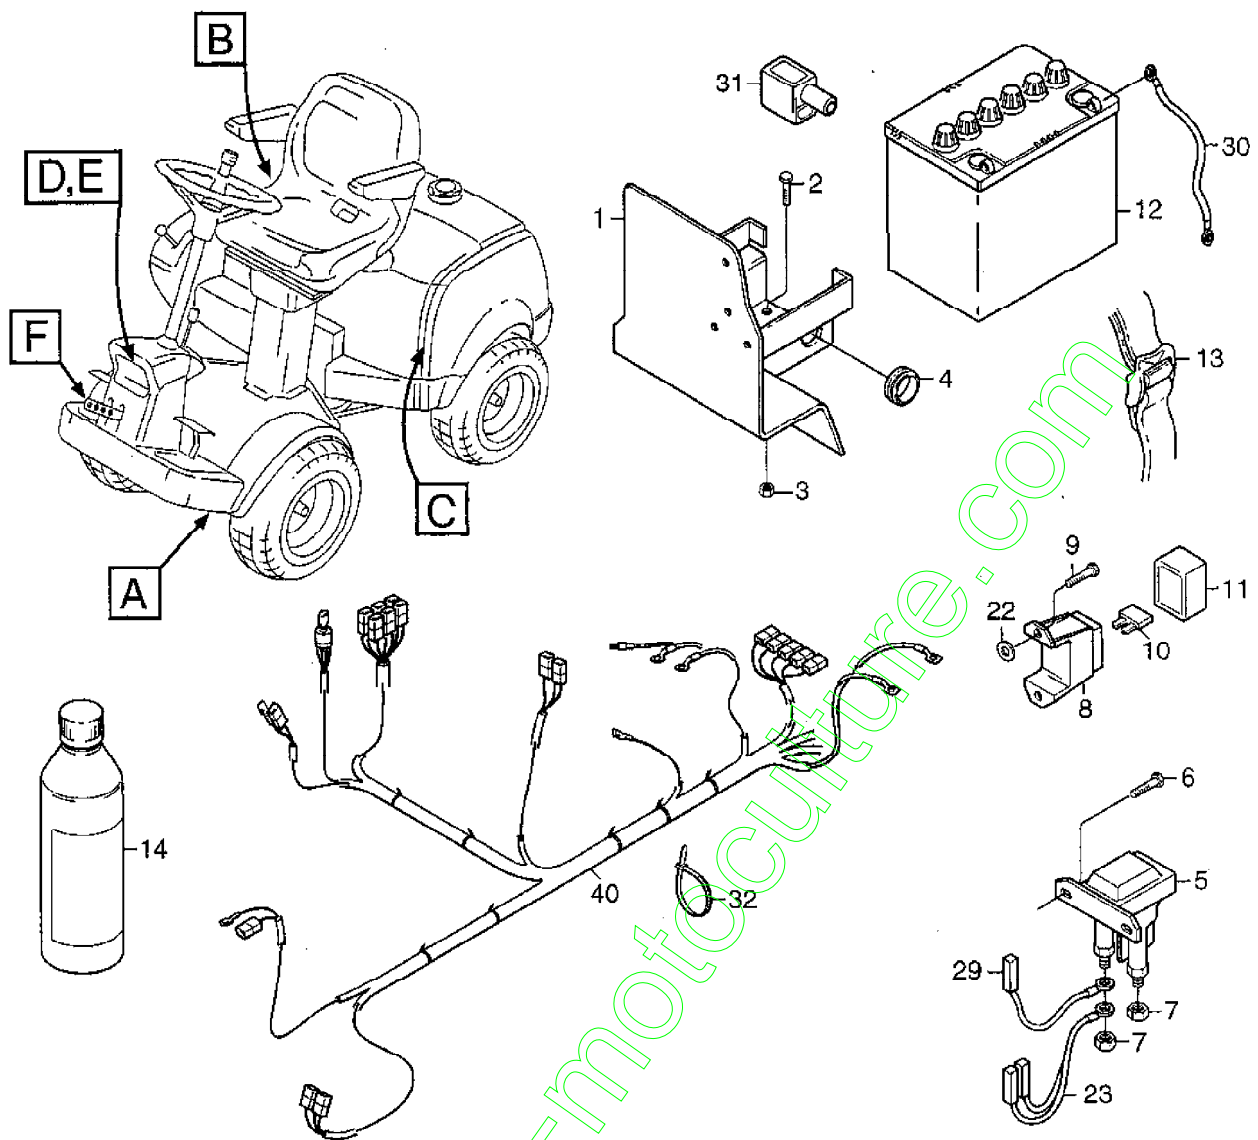       


Section: PARK EL. EQUIPMENT

Pos.	Quantity				Spare part No	Description	Kit	Notes	New
					6216				
					6218				
	6112	6113	6114	6221					
1	1	1	1	1	1134-4025-01	Battery shelf			
2	2	2	2	2	9959-0616-16	Screw			
3	2	2	2	2	9739-0631-22	Nut			
4	2	2	2	2	1134-3203-01	Grommet			
5	1	1	1	1	1134-2962-01	Solenoid assy			
6	2	2	2	2	9849-8006-16	Screw			
7	2	2	2	2	9794-5131-02	.Nut			
8	1	1	1	1	1134-3491-01	Fuse holder			
9	2	2	2	2	9849-8013-16	Screw			
10	2	3	4	2	1134-3496-01	Fuse		10A	
10				2	1134-3496-05	Fuse		15A	
11	1	1	1	1	1134-3631-01	Cover-fuse holder			
12	1	1	1	1	1134-2892-01	Battery w/o acid			
13	1	1	1	1	9400-0064-02	Battery holder			
14	1	1	1	1	1134-3300-01	Battery acid			
15	1	1			1134-3399-02	Switch			
15			1	1	1134-3399-01	Switch			
16	2	2	2	2	9997-0520-16	Screw			
17	2	2	2	2	9747-0531-02	Nut			
18	1				1134-4173-01	Cover			
19	2	2	2	2	9849-7819-16	Screw			
20	2	2	2	2	1134-4177-01	Clips			
21	1	1			1134-4194-01	Seat switch			
22	2	2	2	2	1134-3144-01	Plastic spacer			
23	1	1	1	1	1134-4267-01	Lead			
24	1	1	1	1	9795-3531-02	Nut			
25		1	1	1	1134-4172-01	Headlamp assy			
26				1	1134-4056-01	Female terminal			
27				1	1134-4052-01	Support washer			
28				2	9840-7716-16	Screw			
29				1	1134-4268-01	Lead			
30	1	1	1	1	1134-0234-02	Battery cable (+)			
31	1	1	1	1	1134-2310-01	Guard cap			
32	10	10	10	10	9579-0003-00	Cable holder			
33				2	9400-0231-00	Splicer			
40	1				1134-4205-01	Harness			
40		1			1134-4206-01	Harness			
40			1		1134-4207-01	Harness			
40				1	1134-4208-01	Harness		13-6216	
40				1	1134-4266-01	Harness		13-6218, 13-6221	

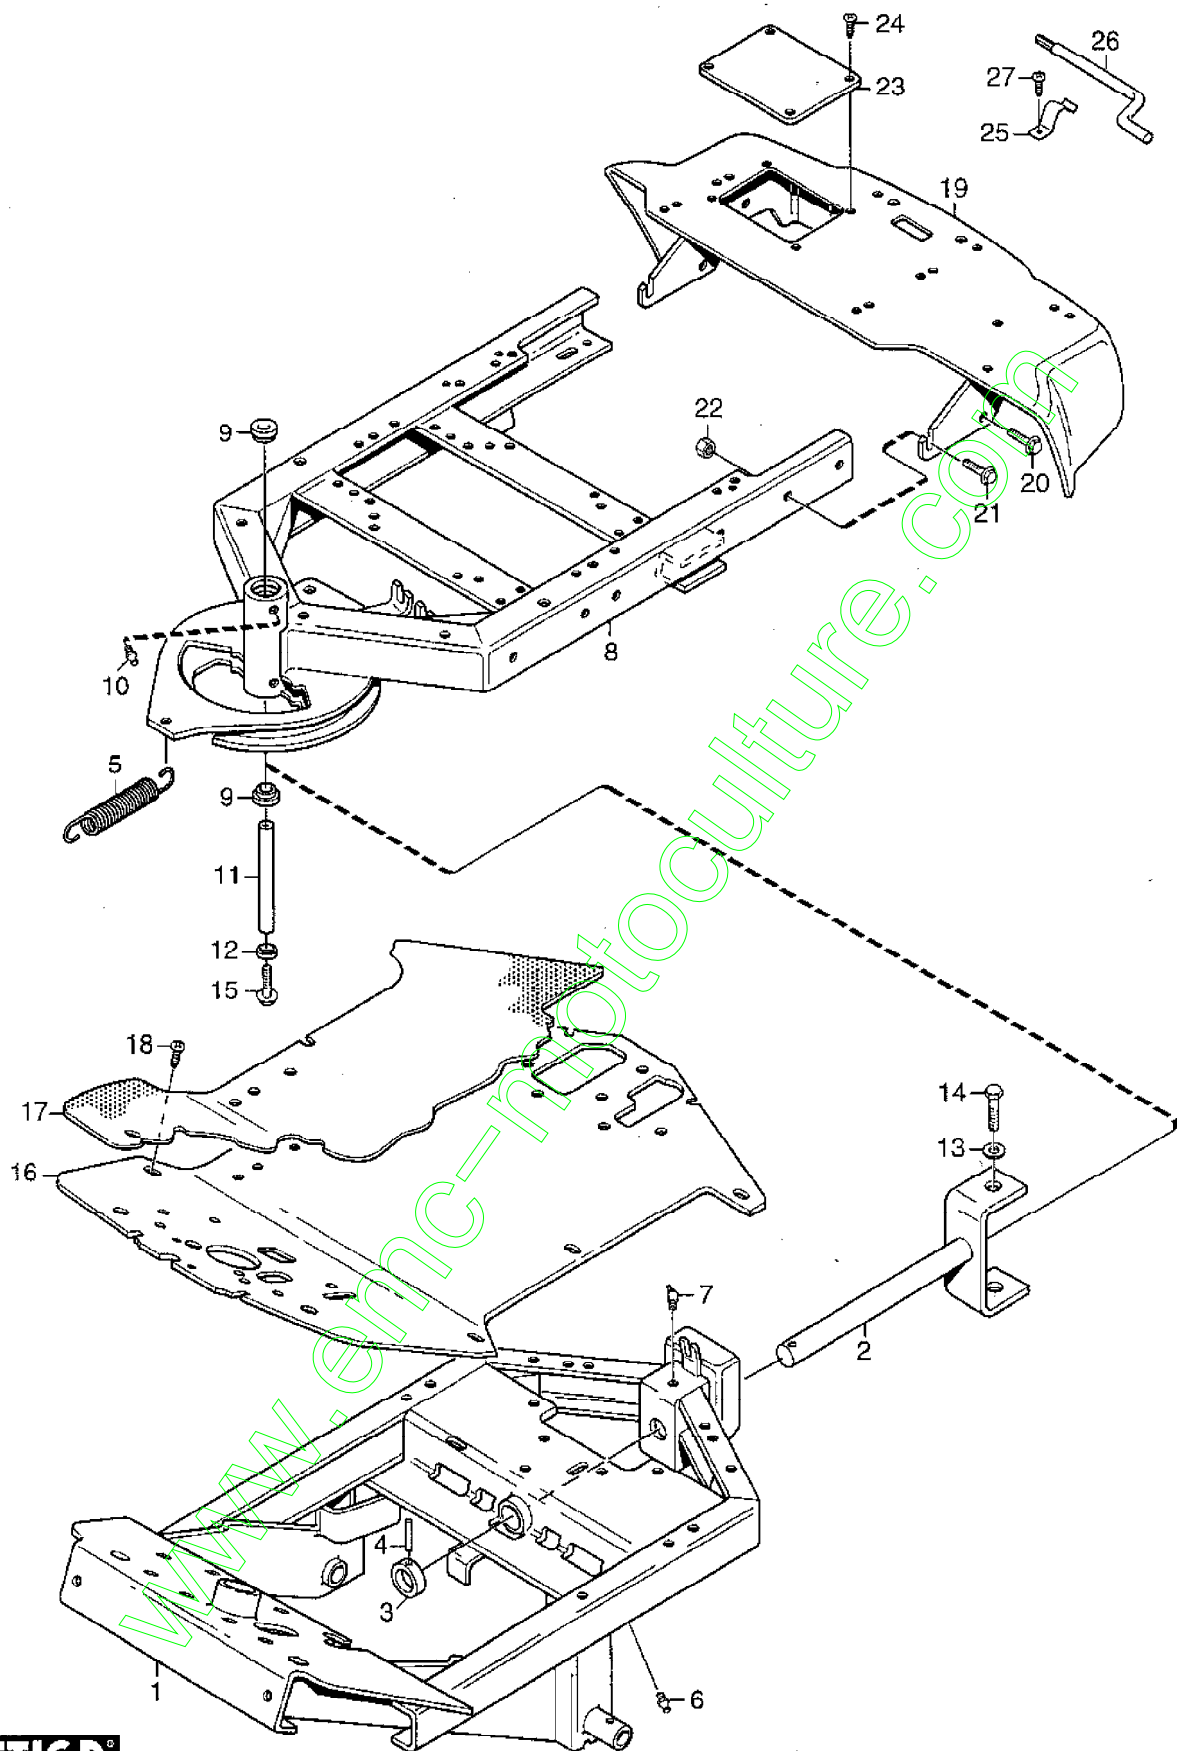 


Section: PARK FRAME

Pos.	Quantity	Spare part No				Description	Kit	Notes	New
		6113		6218					
	6112	6114	6216	6221					
1	1	1	1	1	1134-3919-01	Frame-front			
2	1	1	1	1	1134-3963-02	.Clevis			
3	1	1	1	1	1134-0031-00	.Pivot shaft stop			
4	1	1	1	1	9595-0262-00	.Locating pin			
5	1	1	1	1	1134-2171-01	Spring			
6	1	1	1	1	9501-0500-00	Grease joint			
7	1	1	1	1	9501-0502-00	Grease joint			
8	1	1	1	1	1134-3966-01	Frame-rear			
9	2	2	2	2	9547-0001-00	.Bearing			
10	2	2	2	2	9501-0500-00	Grease joint			
11	1	1	1	1	1134-3968-01	Centre shaft			
12	1	1	1	1	1134-0052-00	Bearing spacer			
13	1	1	1	1	9699-0035-02	Flat washer			
14	1	1	1	1	9959-1020-16	Screw			
15	1	1	1	1	9959-1025-16	Screw			
16	1	1	1	1	1134-3965-01	Floor plate			
17	1				1134-4062-01	Floor mat			
17		1	1	1	1134-4061-01	Floor mat			
18	2	2	2	2	9893-0616-16	Screw			
19	1	1			1134-4060-02	Bumper-black			
19			1	1	1134-4060-01	Bumper-grey			
20	2	2	2	2	9945-0816-16	Screw			
21	2	2	2	2	9959-0820-16	Screw			
22	2	2	2	2	9739-0831-22	Nut			
23	1	1	1	1	1134-4167-01	Cover			
24	4	4	4	4	9840-8009-16	Screw			
25				2	1134-4457-01	Clips			
26				1	1134-4215-01	Hex wrench			
27				2	9840-8009-16	Screw			

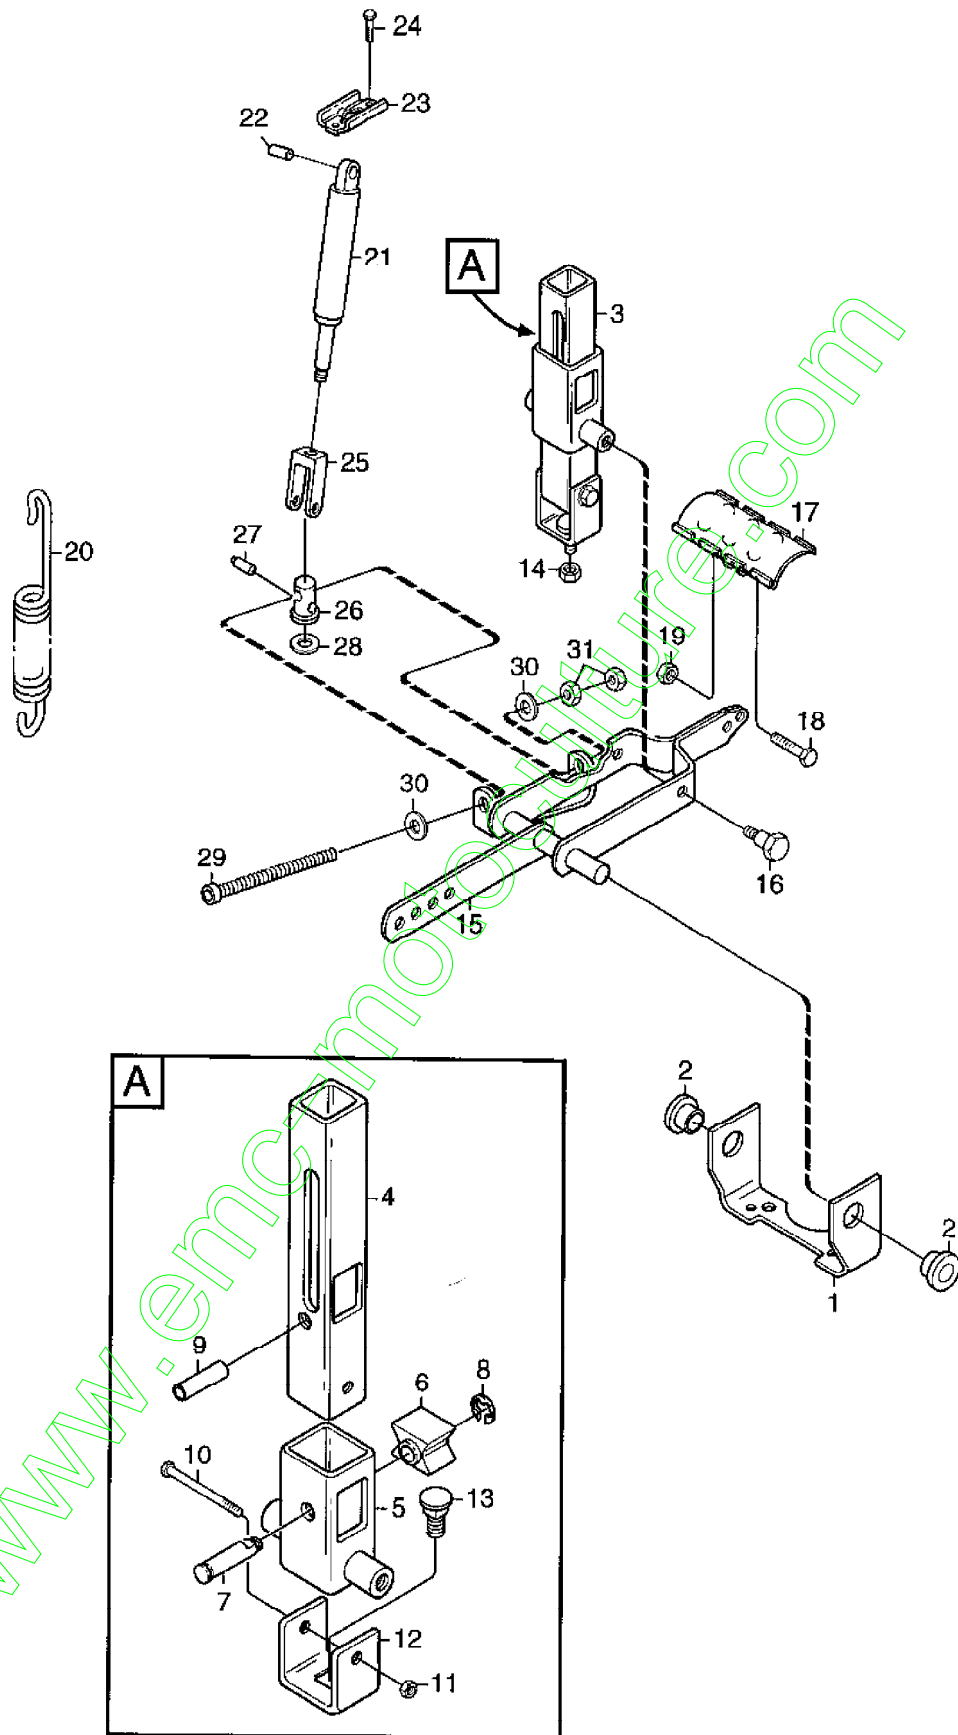 


Section: PARK LIFTING DEVICE

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	6112					
	6113					
	6114	6218				
	6216	6221				
1	1	1	1134-4117-01	Bracket		
2	2	2	1134-2684-01	Bearing		
3	1	1	1134-4184-01	Lift catch assy		
4	1	1	1134-4040-01	.Sliding tube-inner		
5	1	1	1134-4037-01	.Sliding tube-outer		
6	1	1	1134-4089-01	.Star		
7	1	1	1134-4090-01	.Pin		
8	1	1	9652-0007-04	.Circlip		
9	1	1	9595-0276-01	.Locating pin		
10	1	1	9997-0640-12	.Screw		
11	1	1	9747-0631-02	.Lock nut		
12	1	1	1134-4036-01	.Bracket		
13	1	1	9897-0820-16	.Screw		
14	1	1	9747-0831-02	Lock nut		
15	1	1	1134-4033-01	Lift fork		
16	2	2	1134-0240-00	Shoulder screw		
17	1	1	1134-4098-01	Lift pedal		
18	2	2	9997-0620-16	Screw		
19	2	2	9739-0631-22	Nut		
20	1		4231-0013-00	Spring		
21		1	1134-4151-01	Gas spring		
22		1	9591-0030-00	Pin		
23		1	1134-4088-01	Bracket		
24		2	9893-0616-16	Screw		
25		1	1134-4121-01	Fork		
26		1	1134-4122-01	Joint pin		
27		1	1134-4124-01	Pivot pin		
28		1	1134-4139-01	Bronze washer		
29		1	9939-1014-06	Screw		
30		2	1134-4140-01	Plastic washer		
31		2	9787-1031-32	Nut		

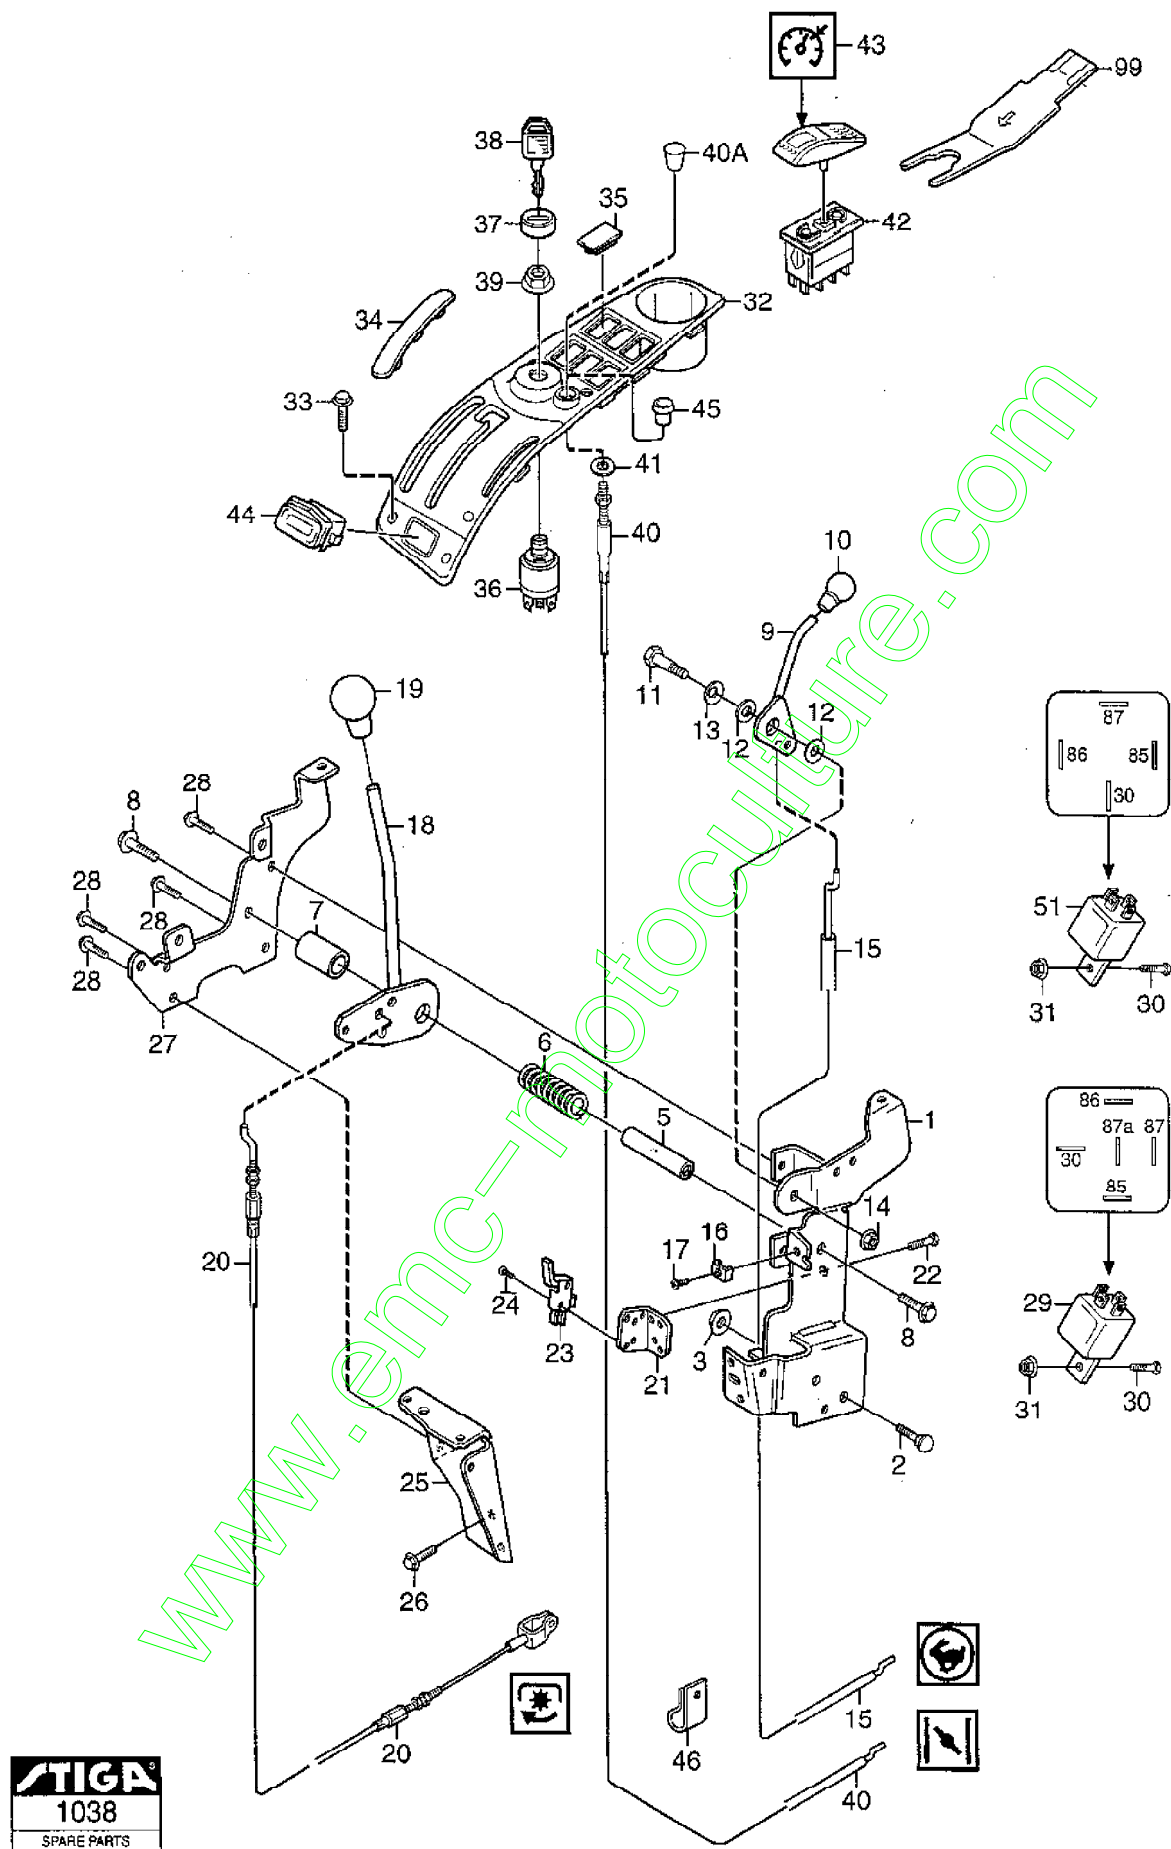 


Section: PARK PRESIDENT-ROYAL HAND CONTROLS

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
6113 6114						
1	1	1	1134-4156-01		Panel bracket-inner	
2	2	2	9897-0820-16		Screw	
3	2	2	9739-0831-22		Nut	
5	1	1	1134-4065-01		Control shaft	
6	1	1	1134-4079-01		Spring	
7	1	1	1134-4080-03		Control sleeve	
8	2	2	9959-0820-16		Screw	
9	1	1	1134-4077-01		Throttle control	
10	1	1	1134-4078-01		Knob	
11	1	1	1134-0240-00		Shoulder screw	
12	2	2	1134-4242-01		Spacer washer	
13	1	1	9694-0001-00		Washer	
14	1	1	9739-0831-22		Nut	
15	1		1134-4197-01		Throttle cable	
15		1	1134-4195-02		Throttle cable	
16	1	1	1134-3240-01		Wire clamp	
17	1	1	9943-0516-16		Screw	
18	1	1	1134-4072-01		Control lever	
19	1	1	1134-2551-01		Knob	
20	1	1	1134-3573-03		PTO cable	
21	1	1	1134-4217-01		Switch bracket	
22	2	2	9893-0616-16		Screw	
23	1	1	9400-0285-01		Switch	
24	2	2	9840-7716-16		Screw	
25	1	1	1134-4066-01		Panel bracket-front	
26	2	2	9893-0616-16		Screw	
27	1	1	1134-3986-01		Front plate	
28	4	4	9893-0616-16		Screw	
29		2	1134-2871-03		Relay	
30		3	9997-0520-16		Screw	
31		3	9739-0531-22		Nut	
32	1		1134-3981-05		Dashboard	
32		1	1134-3981-02		Dashboard	
33	4	4	9946-0525-16		Screw	
34	1	1	1134-4154-01		Cover	
35	6	5	1134-4129-01		Cover	
36	1	1	1134-4093-01		Ignition switch	
37	1	1	1134-4097-01		Cap	
38	2	2	1134-4096-01		Ignition key	
39	1	1	1134-4095-01		Nut	
40		1	1134-2872-03		Choke control	
40A		1	1134-4338-01		.Control knob	
41		2	9699-0028-02		Flat washer	
42		1	9400-0282-01		Switch w.diode	
43		1	9400-0280-02		Cover-cruise contro	
44	1	1	1134-4179-01		Hour meter	
45	1		1134-4100-01		Plug	
46		1	1134-0994-01		Tube clamp	
51		1	1134-2871-01		Relay	
99		1	9400-0290-01		Tool for cover	Tillbehör/Accessory

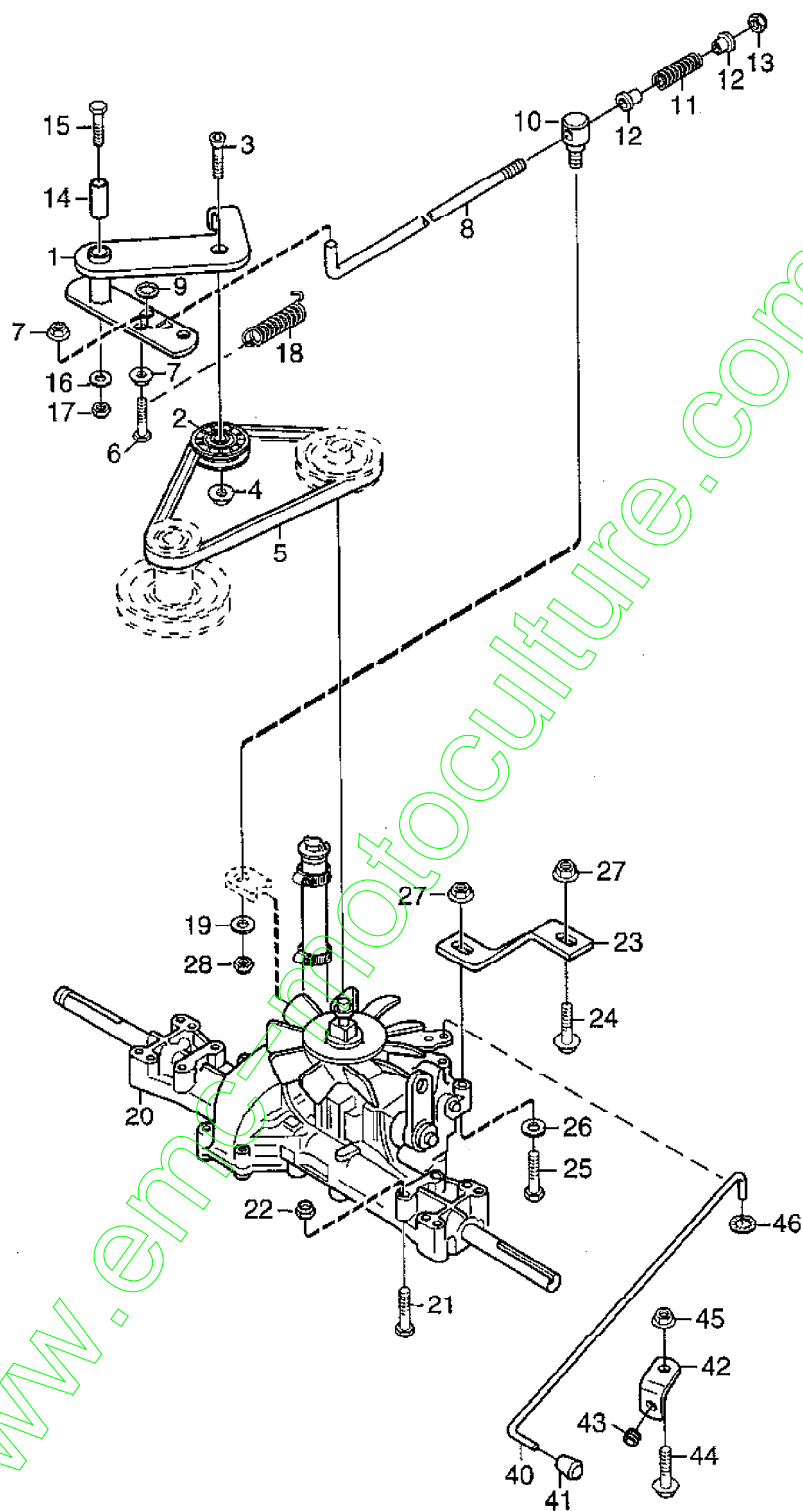 


Section: PARK PRESIDENT-ROYAL TRANSMISSION

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	6113					
	6114					
1	1	1134-4000-02	Tension arm			
2	1	1134-3459-01	Tension roller			
3	1	9924-1035-16	Screw			
4	1	9799-1031-02	Nut			
5	1	1134-9058-01	V-belt		= 9585-0091-01	
6	1	9997-0630-12	Screw			
7	2	9739-0631-22	Nut			
8	1	1134-3377-02	Control rod			
9	1	9675-0008-02	Locking washer			
10	1	1134-4171-01	Pivot pin			
11	1	1134-4183-01	Compression spring			
12	2	1134-3456-01	Bushing			
13	1	9747-0631-02	Lock nut			
14	1	1134-1565-08	Spacer			
15	1	9997-0870-16	Screw			
16	1	9699-0056-02	Flat washer			
17	1	9747-0831-02	Lock nut			
18	1	1134-1949-01	Spring			
19	1	9699-0060-02	Flat washer			
20	1	1134-3993-01	Transaxle		Kanzaki K46G	
21	4	9997-0865-12	Screw			
22	4	9747-0831-02	Lock nut			
23	1	1134-3913-01	Strut			
24	1	9959-0820-16	Screw			
25	1	9997-0845-12	Screw			
26	1	9699-0028-02	Flat washer			
27	2	9739-0831-22	Nut			
28	1	9747-0631-02	Lock nut			
40	1	1134-4015-01	Pull rod			
41	1	1134-4014-01	Plastic button			
42	1	1134-2789-01	Bracket			
43	1	1134-2790-01	Rubber grommet			
44	1	9959-0816-16	Screw			
45	1	9739-0831-22	Nut			
46	1	9675-0009-02	Starlock			

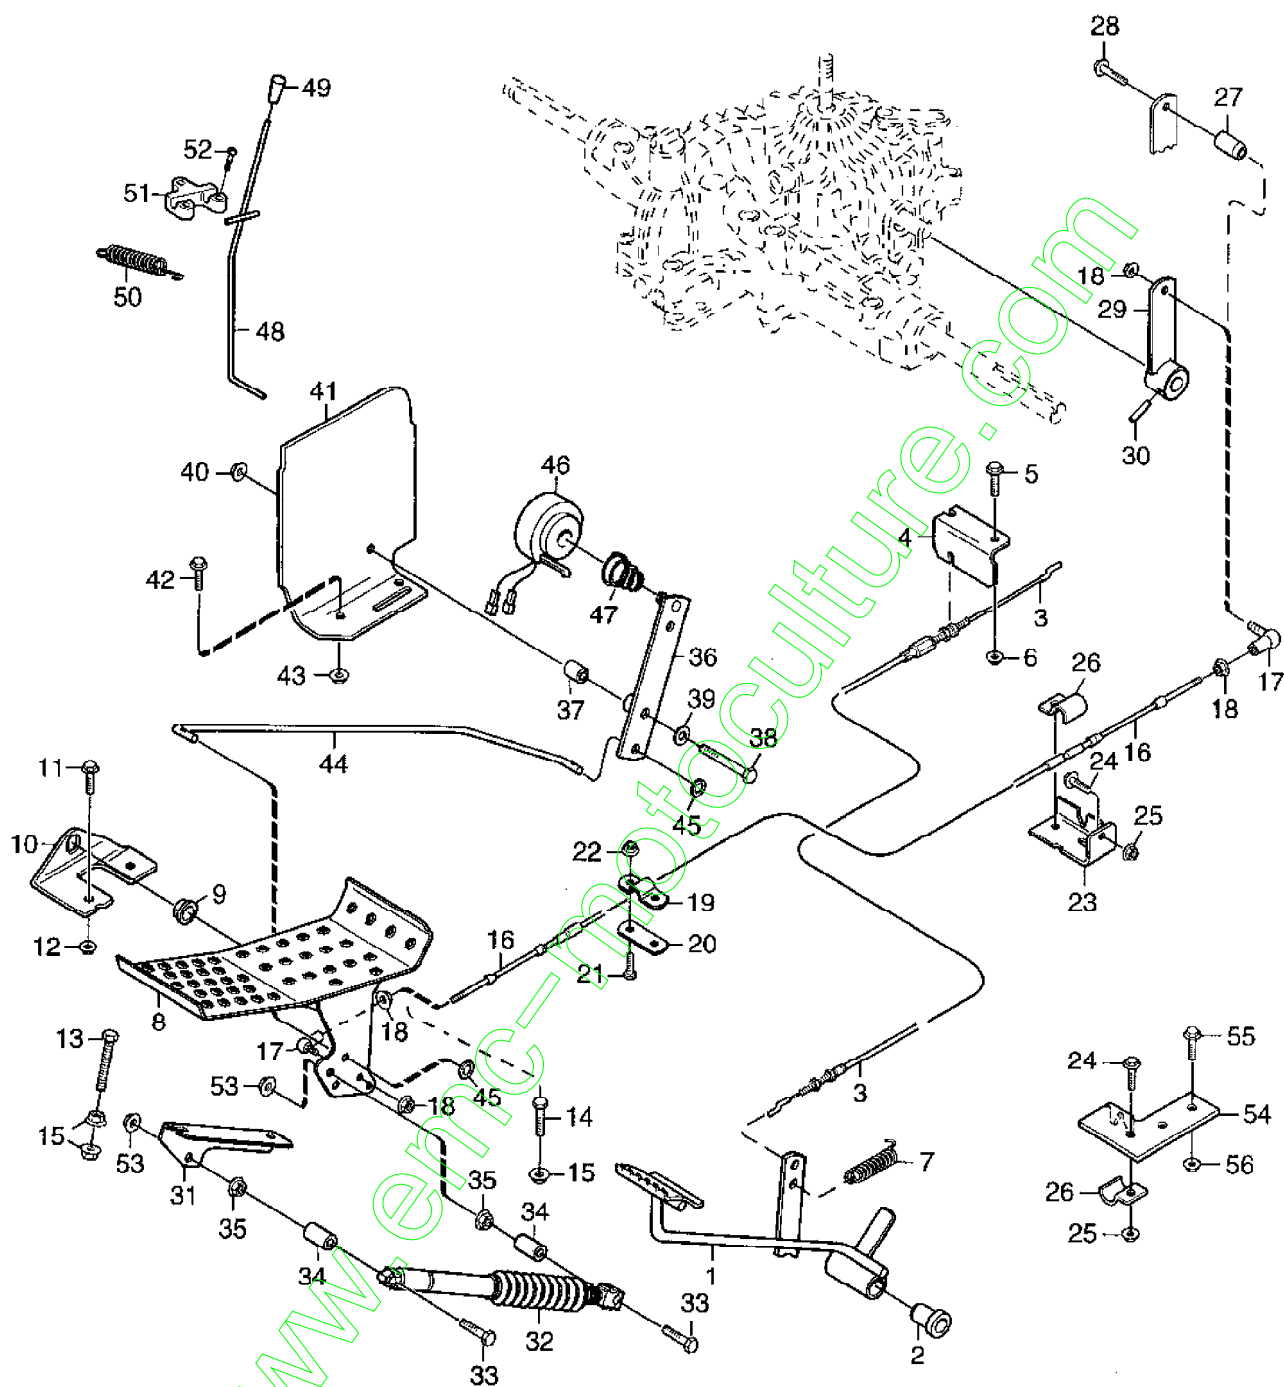 


Section: PARK PRESIDENT-ROYAL- PRO 16-PRO 18-PRO 20 CONTROLS

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
		6216				
		6218				
6113	6114	6221				
1	1	1	1134-4247-01	Brake/clutch pedal		
2	1	1	1134-9024-01	.Bearing	Sats 4 st/kit of 4	
3	1	1	1134-3584-03	Brake/clutch cable		
3		1	1134-3584-02	Brake/clutch cable		
4	1	1	1134-3906-01	Cable holder		
5	2	2	9959-0816-16	Screw		
6	2	2	9739-0831-22	Nut		
7	1	1	1134-3974-01	Spring		
8	1	1	1134-4008-01	Drive pedal		
9	2	2	1134-2780-01	Bearing		
10	2	2	1134-2700-01	Bracket		
11	2	2	9959-0820-16	Screw		
12	2	2	9739-0831-22	Nut		
13	1	1	9997-0870-16	Screw		
14	1	1	9959-0816-16	Screw		
15	3	3	9739-0831-22	Nut		
16	1	1	1134-2766-05	Speed control cable		
16		1	1134-2766-04	Speed control cable		
17	2	2	9570-0001-00	Elbow link		
18	3	3	9739-0531-22	Nut		
19	1	1	1134-0266-00	Attaching clamp		
20	1	1	1134-0267-00	Clamp plate		
21	2	2	9997-0520-16	Screw		
22	2	2	9739-0531-22	Nut		
23	1	1	1134-3395-01	Attachment		
24	2	2	9959-0820-16	Screw		
25	2	2	9739-0831-22	Nut		
26	1	1	1134-2021-01	Clamp		
27	1	1	1134-4013-01	Spacer		
28	1	1	9959-0820-16	Screw		
29		1	1134-4042-01	Control lever		
30		1	9595-0258-00	Locating pin		
31		1	1134-3996-01	Bracket		
32		1	1134-4187-01	Damper		
33		2	9997-0840-16	Screw		
34		2	1134-1565-09	Spacer		
35		2	9739-0831-22	Nut		
36	1	1	1134-4017-01	Lever-cruise contro		
37	1	1	1134-1565-01	Spacer		
38	1	1	9997-0850-16	Screw		
39	1	1	9699-0056-02	Flat washer		
40	1	1	9739-0831-22	Nut		
41	1	1	1134-4020-01	Plate-cruise contro		
42	2	2	9959-0816-16	Screw		
43	2	2	9739-0831-22	Nut		
44	1	1	1134-4021-01	Rod-cruise control		
45	2	2	9675-0012-02	Locking washer		
46	1	1	1134-2859-01	Magneto assy		
47	1	1	1134-2858-01	Spring		
48	1	1	1134-3953-01	Brake rod		
49	1	1	1134-3808-01	Knob		
50	1	1	1131-1497-01	Spring		
51	1	1	1134-4002-01	Brake rod attachmen		
52	3	3	9836-9512-12	Screw		
53		2	9747-0831-02	Lock nut		
54		1	1134-3910-01	Cable holder		
55		2	9959-0816-16	Screw		
56		2	9739-0831-22	Nut		

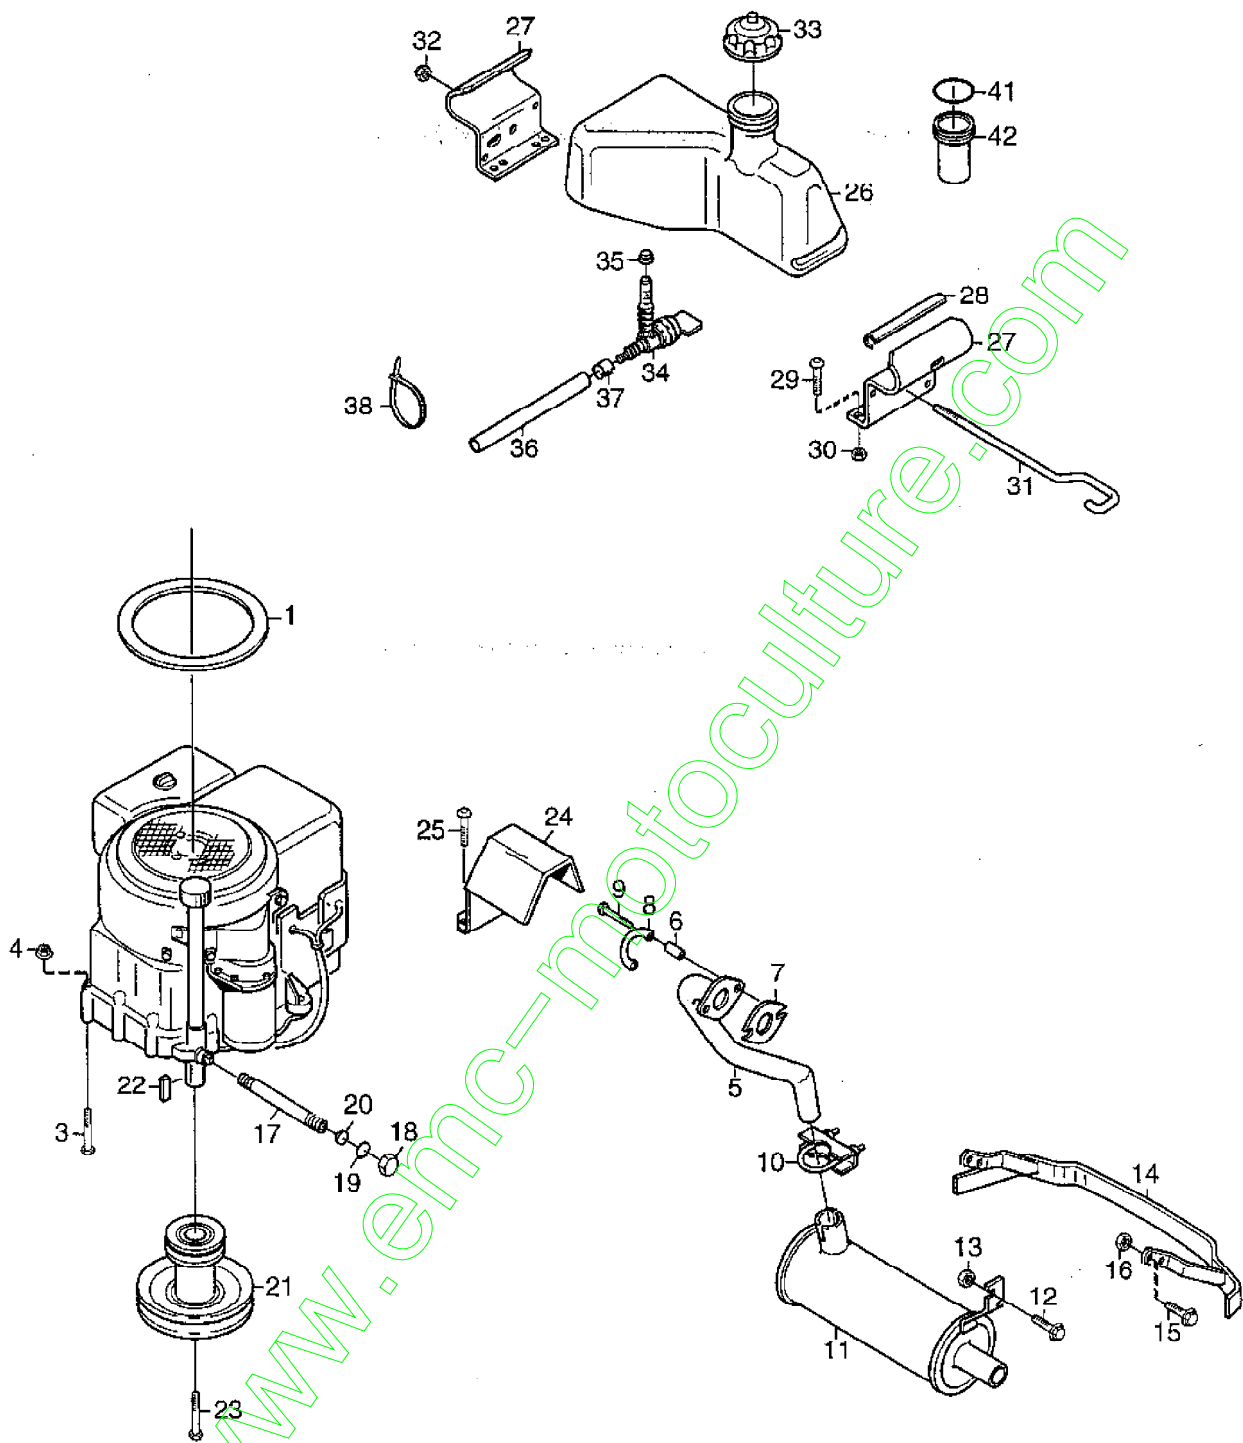 


Section: PARK SENATOR-PRESIDENT ENGINE

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	6112					
	6113					
1	1	1134-4222-02	Seal ring		H = 15 mm	
3A	2	9997-0840-16	Screw		L = 40 mm	
3B	1	9997-0845-12	Screw		L = 45 mm	
3C	1	9997-0870-16	Screw		L = 70 mm	
4	4	9739-0831-22	Nut			
5	1	1134-4110-01	Exhaust pipe			
6	2	1134-1565-01	Spacer			
7	1	1134-0433-00	Muffler gasket			
8	1	1134-2462-01	Lock			
9	2	9988-3651-12	Screw			
10	1	9578-0011-00	Clamp			
11	1	1134-3244-01	Silencer			
12	1	9959-0820-16	Screw			
13	1	9739-0831-22	Nut			
14	1	1134-4046-02	Muffler guard-black			
15	4	9959-0820-16	Screw			
16	4	9739-0831-22	Nut			
17	1	1134-2212-01	Oil drain pipe assy			
18	1	1134-0995-01	.Plug			
19	1	9404-0020-00	.O-ring			
20	1	1134-0997-01	.Fibre gasket			
21	1	1134-4178-01	Engine pulley			
22	1	9600-0250-00	Key			
23	1	9987-5338-12	Screw			
24	1	1134-2733-01	Heat protection			
25	2	9893-0616-16	Screw			
26	1	1134-4030-01	Fuel tank			
27	2	1134-4273-02	Tank bracket			
28	2	1134-2941-01	Protection strip			
29	4	9893-0616-16	Screw			
30	4	9739-0631-22	Nut			
31	1	1134-4356-01	Tank rod			
32	1	9747-0831-02	Lock nut			
33	1	1134-4063-01	Fuel cap			
34	1	1134-3224-01	Fuel shut-off valve			
35	1	1134-3225-01	Grommet			
36	1	1134-2975-07	Fuel hose			
37	2	9578-0023-02	Hose clamp			
38	1	9579-0003-00	Cable holder			
41	1	9404-0025-01	O-ring			
42	1	1134-4411-01	Fuel tank insert			

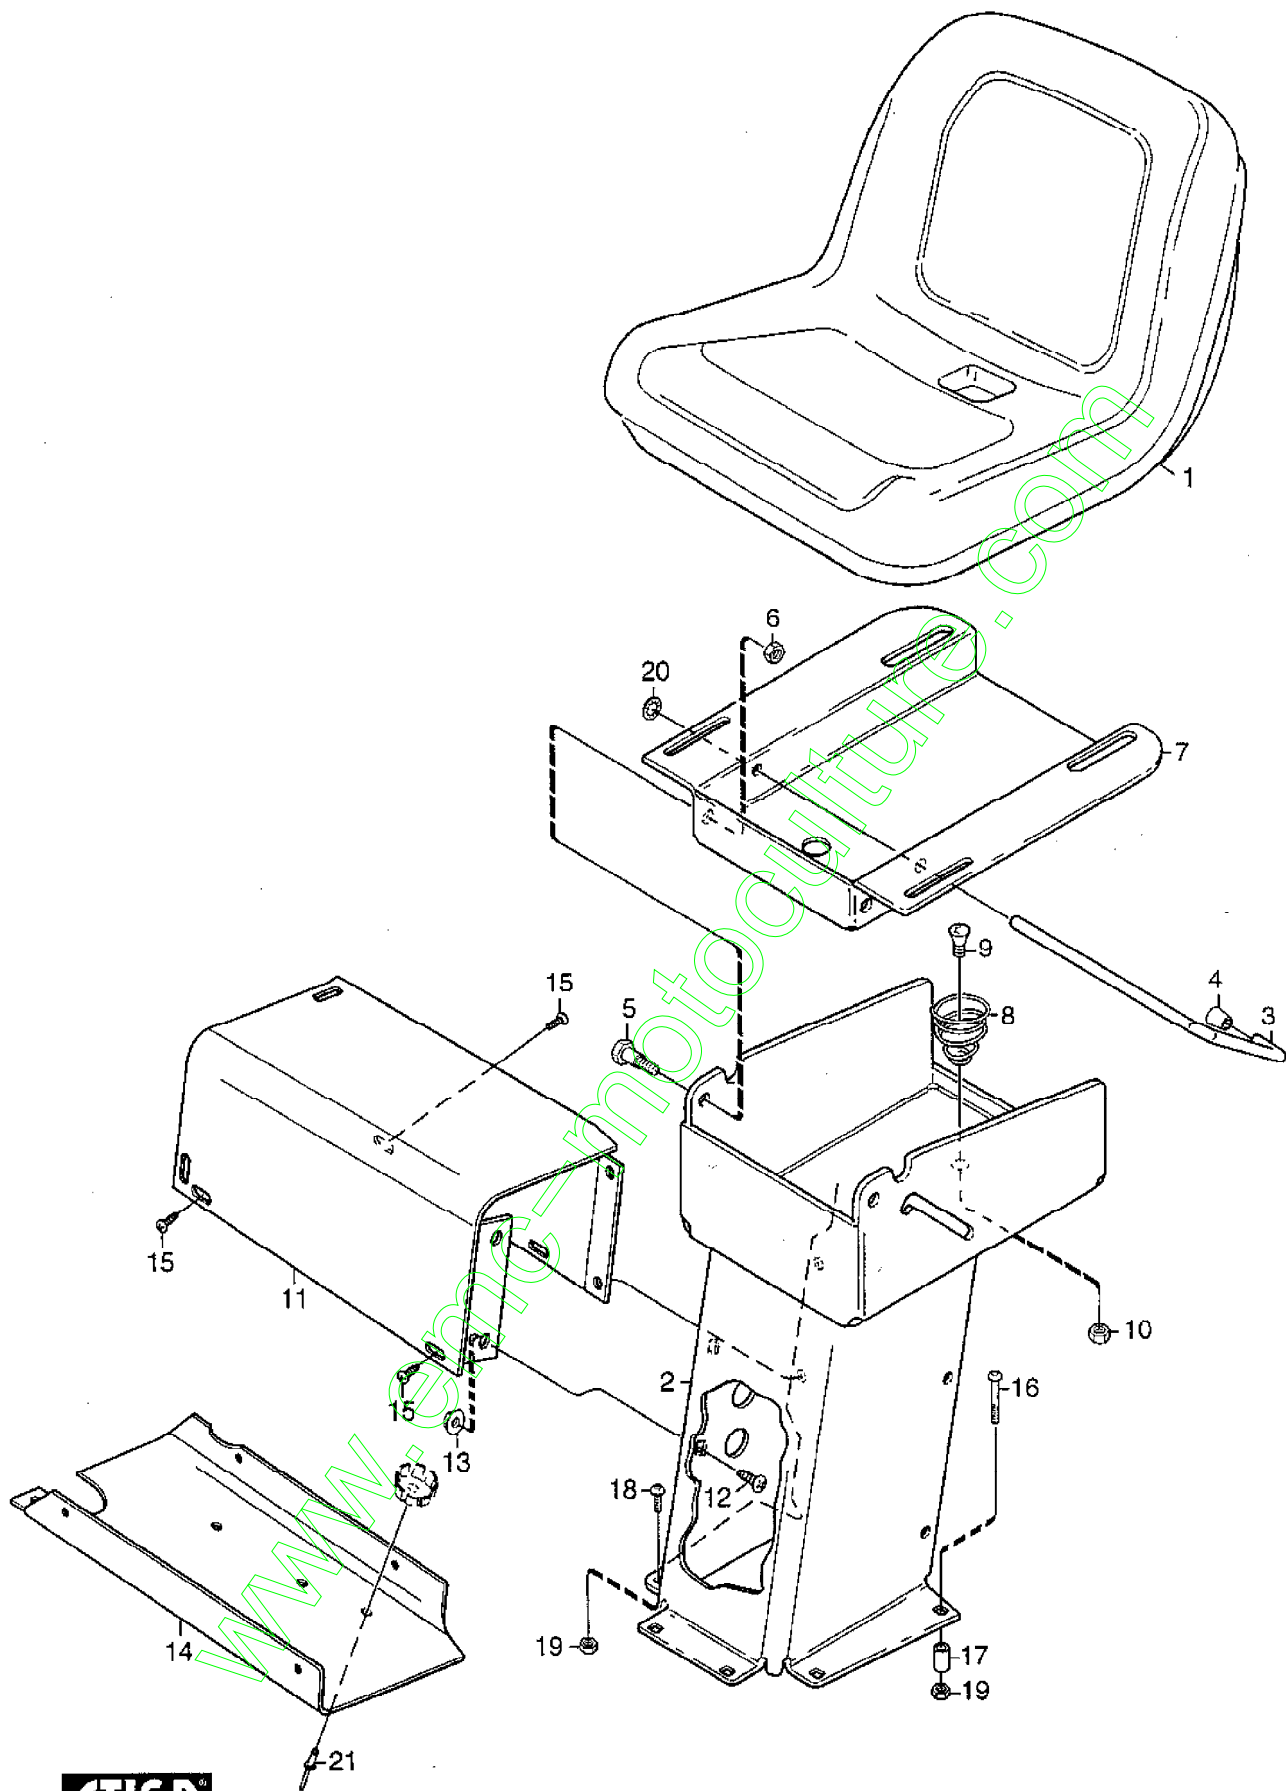 

Section: PARK SENATOR-PRESIDENT SEAT


Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	6112					
	6113					
1	1	1134-4223-01	Seat			
2	1	1134-4211-01	Seat bracket			
3	1	1134-4340-01	Catch			
4	1	1134-4014-01	Plastic button			
5	2	1134-0240-00	Shoulder screw			
6	2	9747-0831-02	Lock nut			
7	1	1134-4210-01	Upper part			
8	1	1134-4256-01	Seat spring			
9	1	9924-1230-19	Screw			
10	1	9747-1231-02	Lock nut			
11	1	1134-3990-01	Attachment-side pan			
12	2	9897-0820-16	Screw			
13	2	9739-0831-22	Nut			
14	1	1134-4130-01	Cover-lower			
15	4	9840-8009-16	Screw			
16	2	9897-0880-12	Screw			
17	2	1134-1565-08	Spacer			
18	4	9897-0820-16	Screw			
19	6	9739-0831-22	Nut			
20	1	9675-0008-02	Locking washer			
21	1	9632-0522-00	Pop rivet			

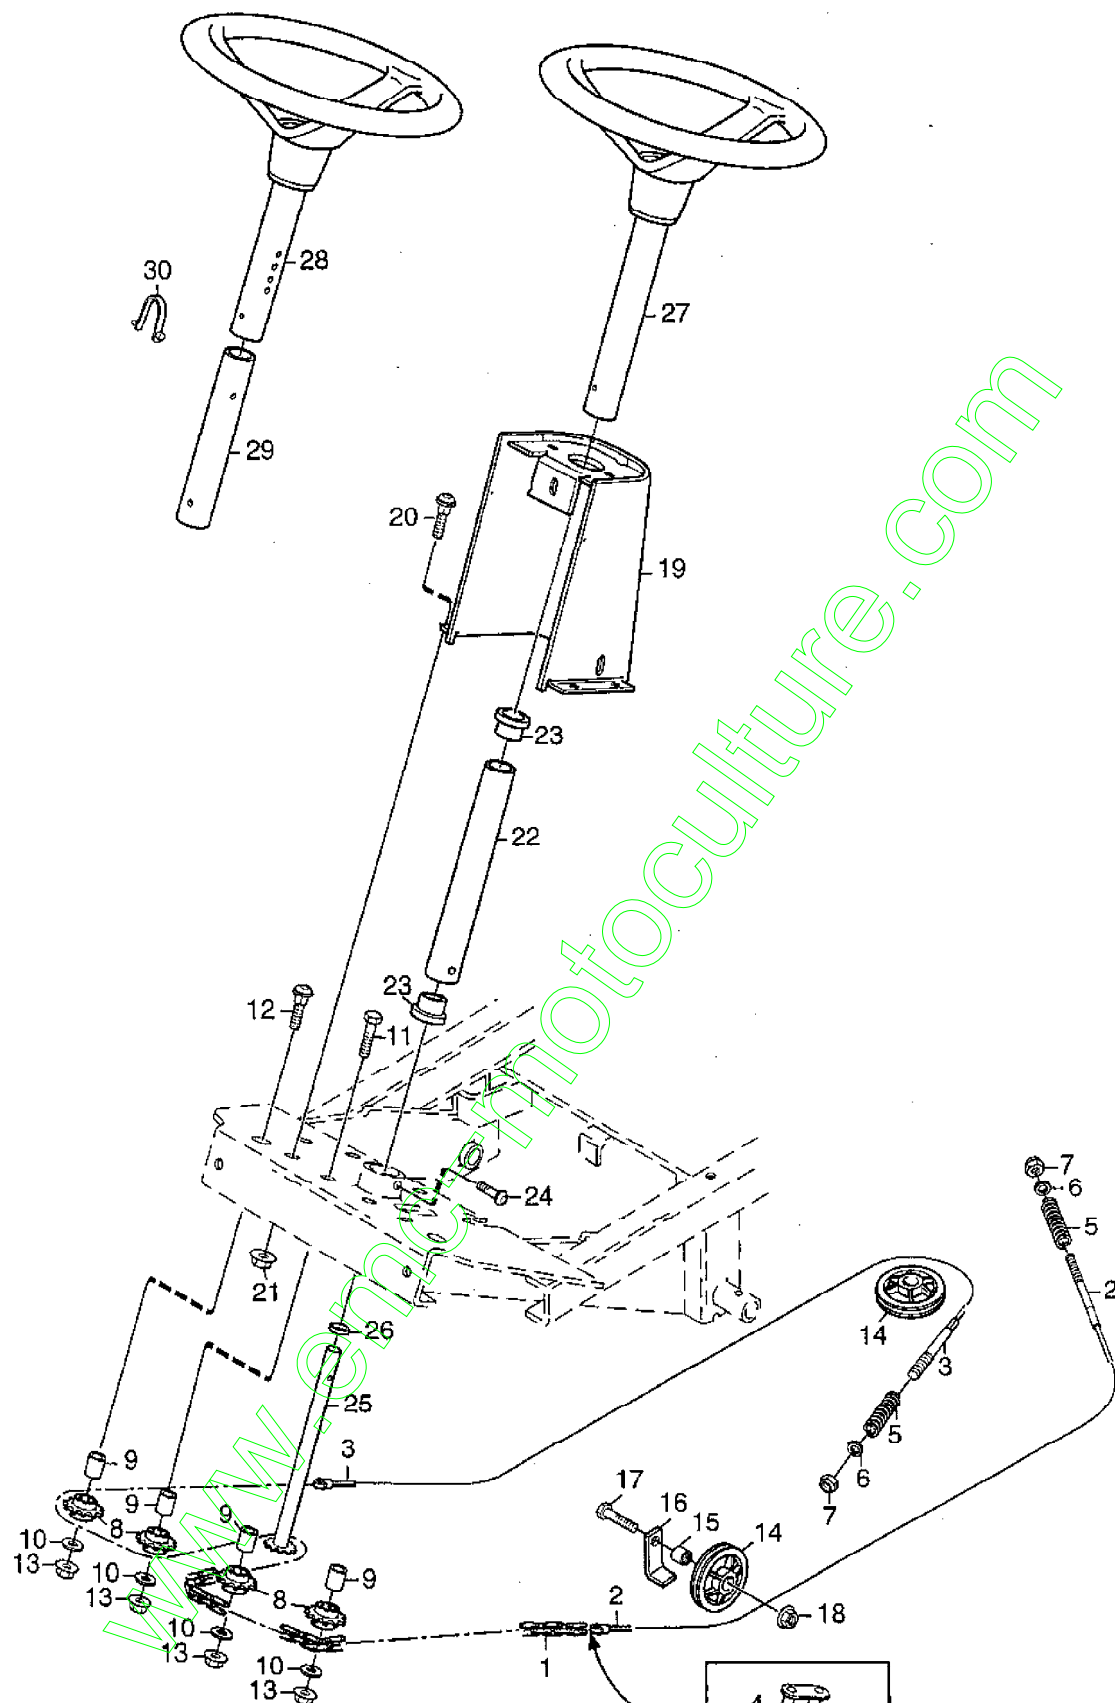 

Section: PARK SENATOR-PRESIDENT- ROYAL STEERING


Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	6113					
	6112	6114				
1	1	1	1134-2820-06	Chain	83 länk	
2	1	1	1134-2817-01	Steering cable-LH		
3	1	1	1134-2817-02	Steering cable-RH		
4	2	2	1134-2824-01	Chain lock		
5	2	2	1134-3817-01	Compression spring		
6	2	2	9699-0090-02	Flat washer		
7	2	2	9747-0831-02	Lock nut		
8	4	4	1134-2816-01	Sprocket		
9	4	4	1134-0041-02	Idler wheel bush		
10	4	4	9699-0035-02	Flat washer		
11	2	2	9997-1050-16	Screw		
12	2	2	9897-1040-12	Screw		
13	4	4	9739-1031-22	Nut		
14	2	2	1134-9025-01	Steering pulley-kit	Sats 2 st/kit of 2	
15	2	2	1134-0041-01	Bushing		
16	2	2	1134-3022-01	Cable holder		
17	2	2	9997-1030-16	Screw		
18	2	2	9739-1031-22	Nut		
19	1	1	1134-4120-01	Steering console		
20	4	4	9897-0820-16	Screw		
21	4	4	9739-0831-22	Nut		
22	1	1	1134-1305-03	Steering column-low		
23	2	2	1134-1901-01	Bearing		
24	2	2	9893-0616-16	Screw		
25	1	1	1134-2821-01	Steering rod		
26	1	1	1134-2837-01	Spacer		
27	1		1134-2390-01	Steering wheel		
28		1	1134-4155-01	Steering wheel		
29		1	1134-4218-01	Steering tube-inner		
30		1	1134-4138-01	.Catch		

 www.emc-motoculture.com

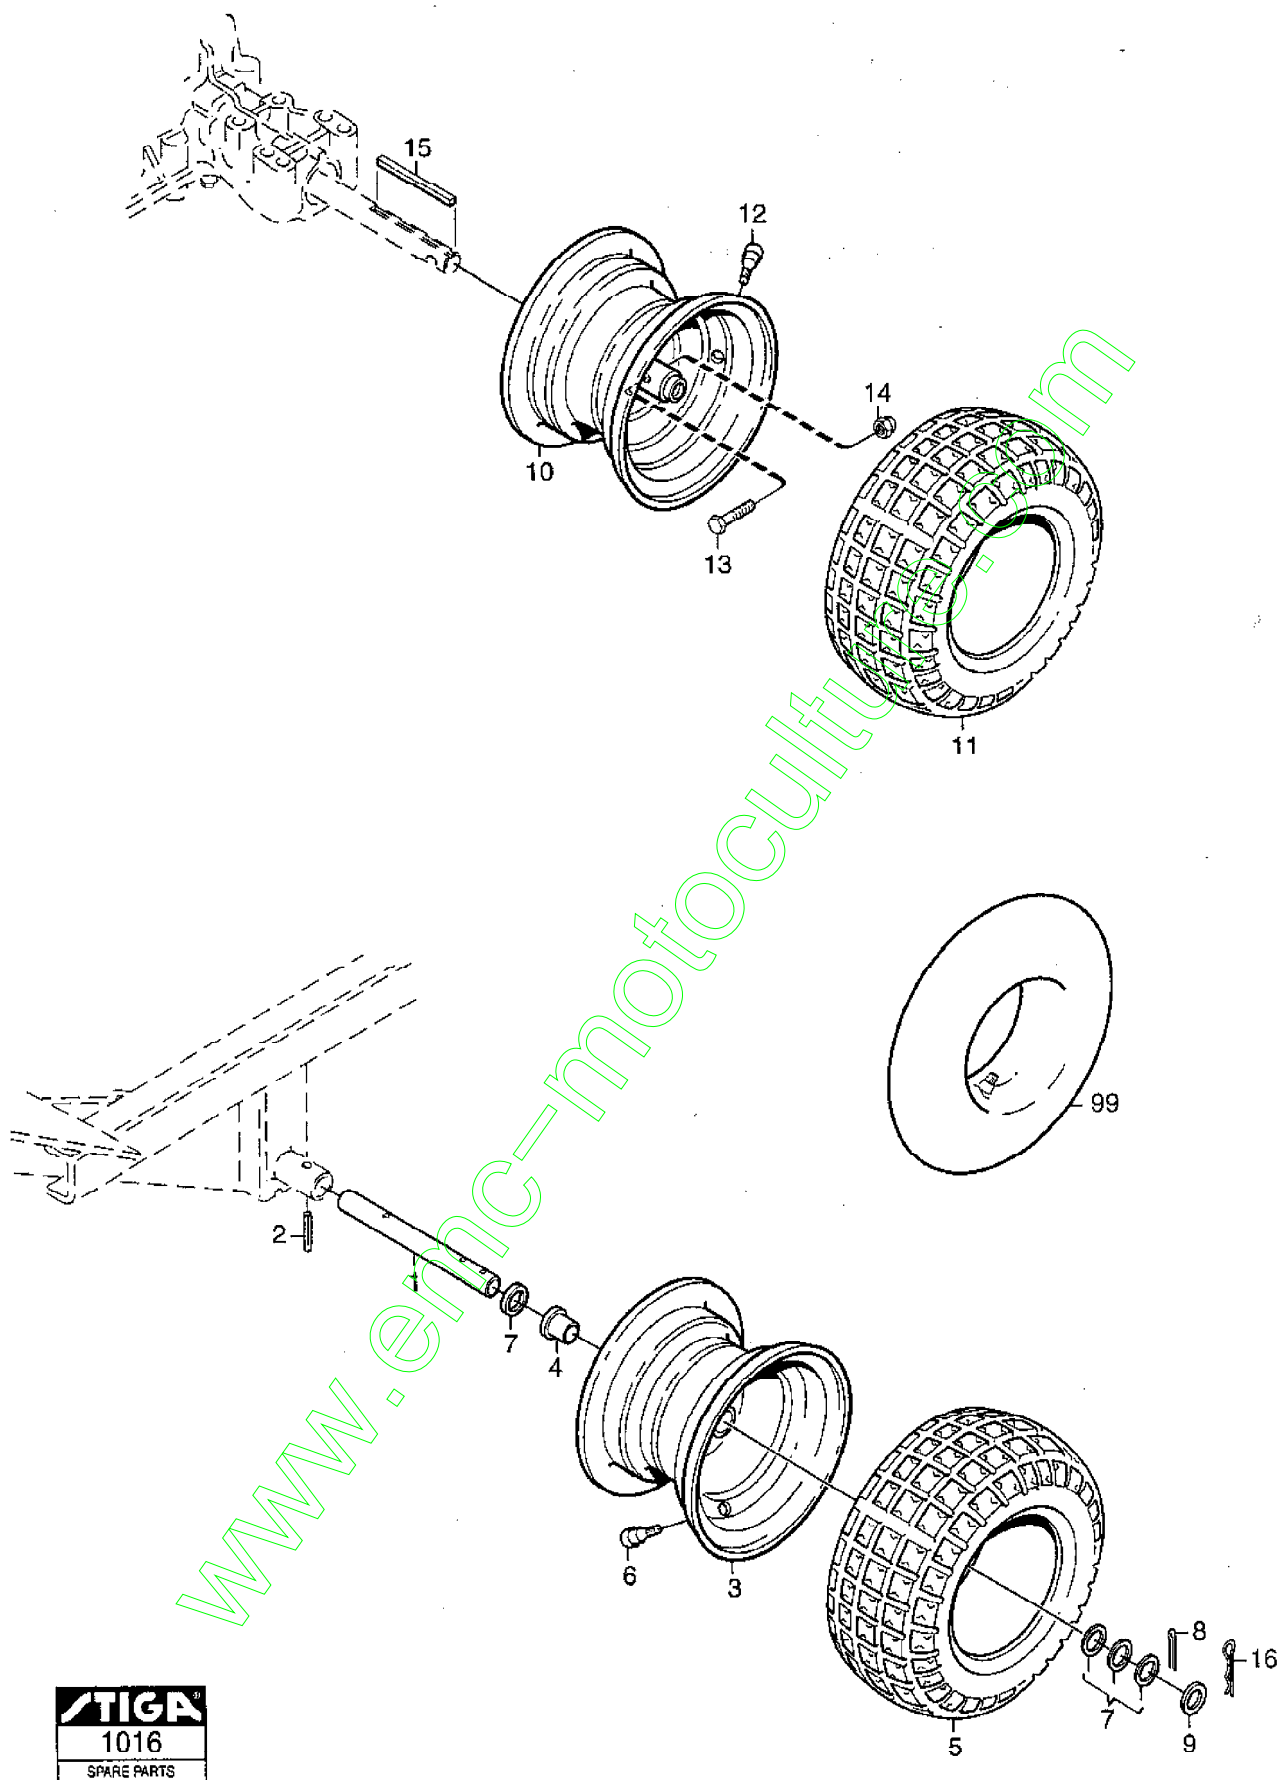


Section: PARK SENATOR-PRESIDENT- ROYAL WHEELS 16"

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	6112					
	6113					
	6114					
1	2	1134-0075-01	Front axle			
2	2	9595-0258-00	Locating pin			
3	2	1134-2668-02	Rim w.bearings			
4	1	1134-9026-01	.Bearing bush kit		Sats 4 st/kit of 4	
5	2	9545-0116-00	Tyre		16 x 7.50 - 8	
6	2	9545-0500-00	Valve			
7	8	1134-0341-01	Washer			
8	2	9599-0080-02	Cotter pin			
9	2	9699-0042-02	Flat washer			
10	2	1134-3175-02	Rim-rear			
11	2	9545-0116-00	Tyre		16 x 7.50 - 8	
12	2	9545-0500-00	Valve			
13	2	9997-0840-16	Screw			
14	2	9747-0831-02	Lock nut			
15	2	1134-2471-01	Key			
16	2	9598-0003-02	Spring pin			
99		9545-0203-00	Inner tube		Reservdel/spare par	

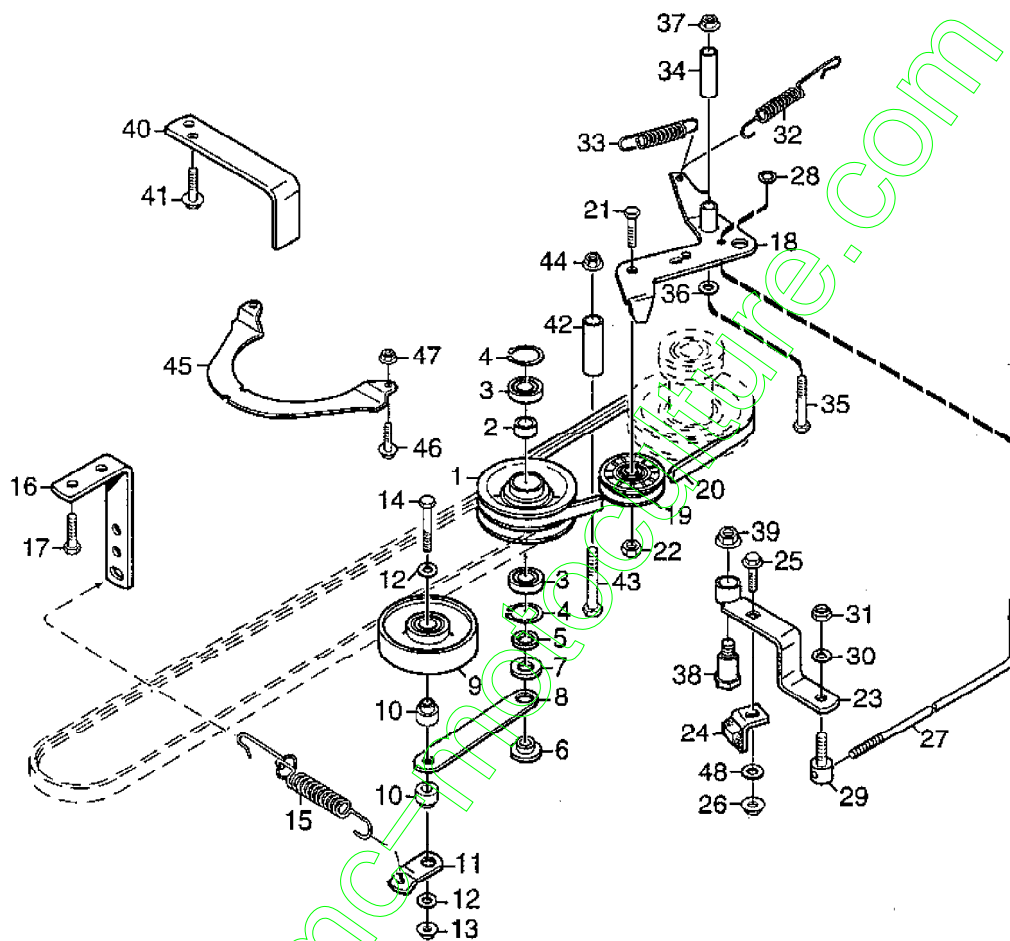 

Section: PARK SENATOR-PRESIDENT- ROYAL-PRO 16 POWER TAKE-OFF

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	6112					
	6113					
	6114					
	6216					
1	1	1134-1769-02	Belt pulley assy			
2	1	1134-0051-09	.Spacer			
3	2	9549-0019-00	.Ball bearing			
4	2	9651-0040-04	.Retaining ring			
5	1	1134-0052-00	Bearing spacer			
6	1	1134-0222-00	Washer			
7	1	9699-0109-02	Flat washer			
8	1	1134-1730-01	Tension wheel arm			
9	1	1134-1770-01	Tension roller			
10	2	1134-1888-01	Spacer			
11	1	1134-1893-01	Spring attachment			
12	2	9699-0062-02	Flat washer			
13	1	9739-0831-22	Nut			
14	1	9997-0865-12	Screw			
15	1	1134-1322-02	Spring			
16	1	1134-3959-01	Spring attachment			
17	2	9945-0816-16	Screw			
18	1	1134-2018-02	Tension arm			
19	1	1134-9027-01	Tension roller			
20	1	1134-9012-01	V-belt		= 9585-0056-00	
21	1	9997-1030-16	Screw			
22	1	9799-1031-02	Nut			
23	1	1134-4111-01	Brake arm			
24	1	1134-4164-01	Brake pad			
25	1	9897-0820-16	Screw			
26	1	9747-0831-02	Lock nut			
27	1	1134-4162-01	Brake rod			
28	1	9675-0008-02	Locking washer			
29	1	1134-4170-01	Nipple			
30	1	9699-0025-02	Washer			
31	1	9747-0631-02	Lock nut			
32	1	4231-0013-00	Spring			
33	1	1134-4231-01	Spring			
34	1	1134-1565-10	Spacer			
35	1	9997-0865-12	Screw			
36	1	9699-0056-02	Flat washer			
37	1	9739-0831-22	Nut			
38	1	1134-4163-01	Shoulder bolt			
39	1	9739-1031-22	Nut			
40	1	1134-3958-01	Belt guide			
41	2	9893-0616-16	Screw			
42	1	1134-0041-03	Collar			
43	1	9997-1070-12	Screw			
44	1	9739-1031-22	Nut			
45	1	1134-3654-01	Finger guard			
46	2	9959-0612-16	Screw			
47	2	9739-0631-22	Nut			
48	1	9699-0090-02	Flat washer			

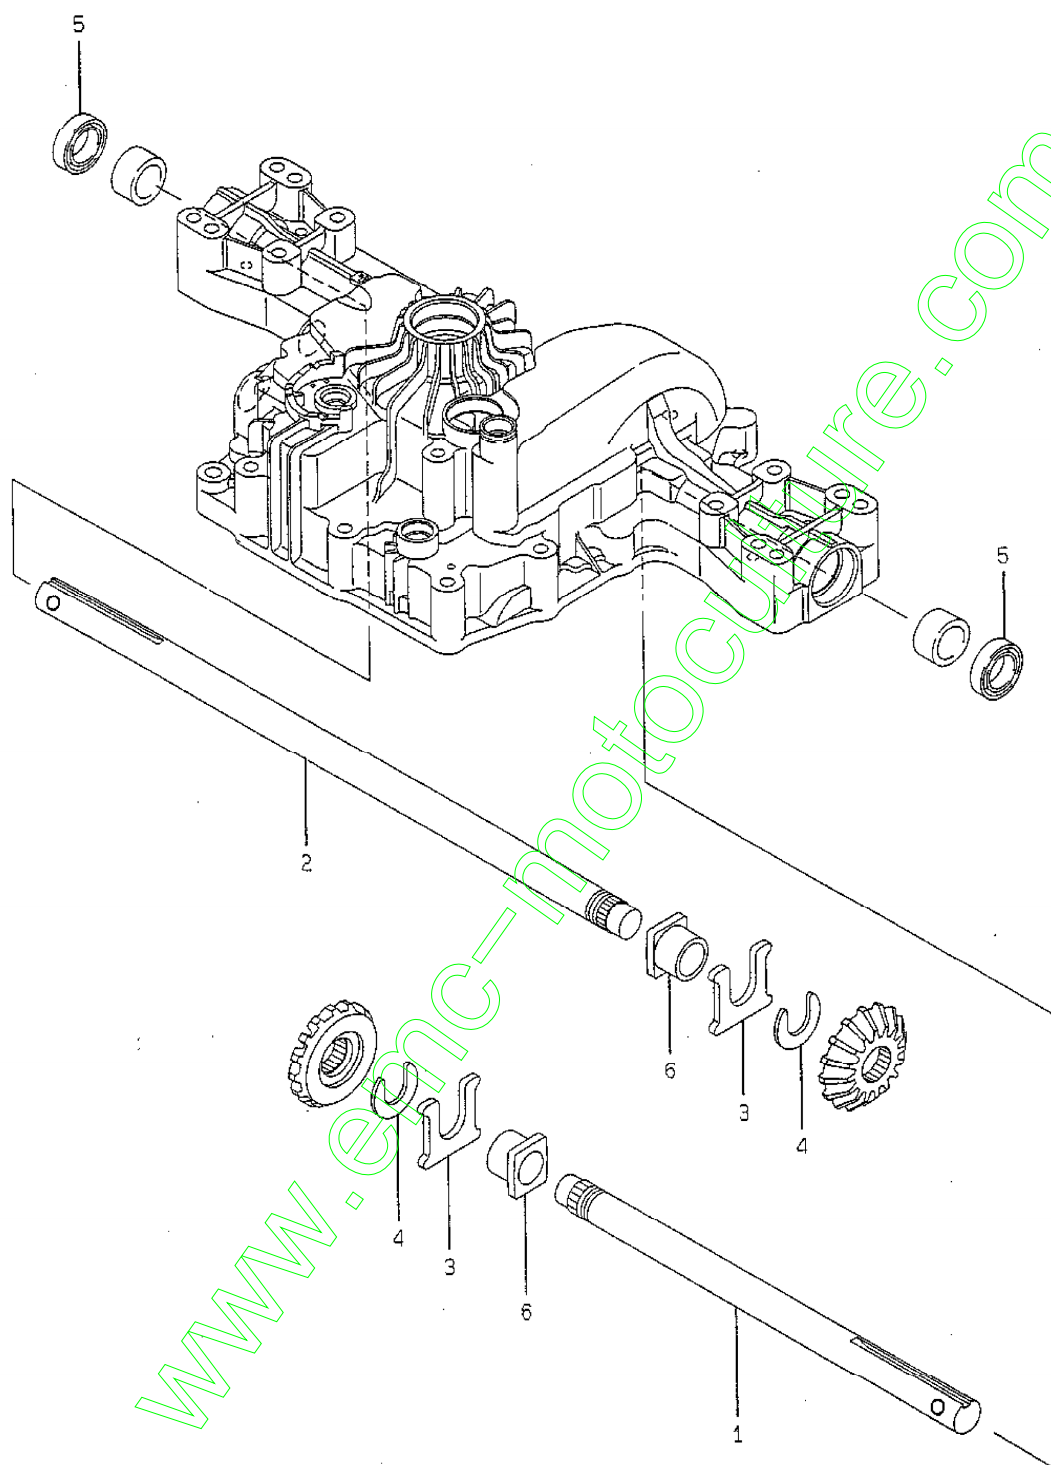 


Section: KANZAKI TRANSAXLE K46G AXLE SHAFT

Pos. Quantity	Spare part No	Description	Kit	Notes	New
---------------	---------------	-------------	-----	-------	-----

K46G					
1	1	1139-1269-01	Axle shaft-left		
2	1	1139-1270-01	Axle shaft-right		
3	2	1139-1078-01	Thrust washer		
4	2	1139-1163-01	Ring		
5	2	1139-1080-01	Seal		
6	2	1139-1164-01	Bushing		

 www.emc-motocultures.com

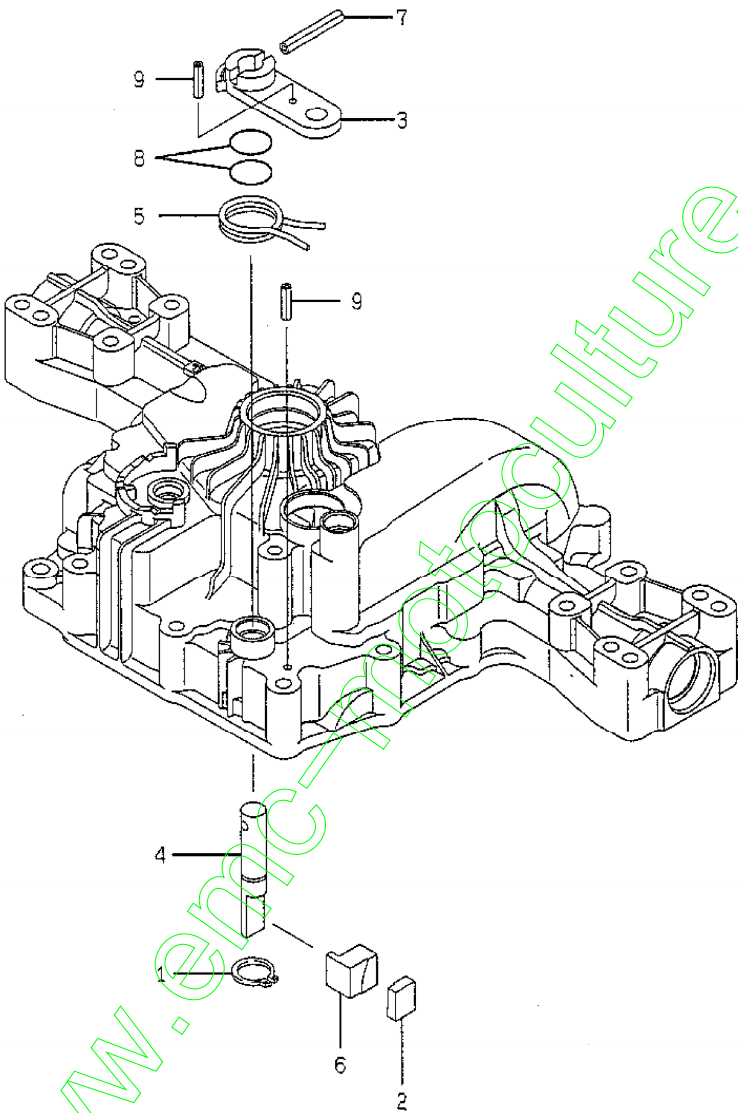


Section: KANZAKI TRANSAXLE K46G BRAKE

Pos. Quantity	Spare part No Description	Kit Notes	New
---------------	---------------------------	-----------	-----

K46G

1	1	1139-1143-01	Ring	
2	1	1139-1260-01	Brake shoe	
3	1	1139-1261-01	Brake arm	
4	1	1139-1262-01	Brake shaft	
5	1	1139-1263-01	Return spring	
6	1	1139-1264-01	Brake actuator	
7	1	1139-1282-01	Pin	
8	2	1139-1114-01	O-ring	
9	2	1139-1281-01	Pin	

 www.emc-motocult.com

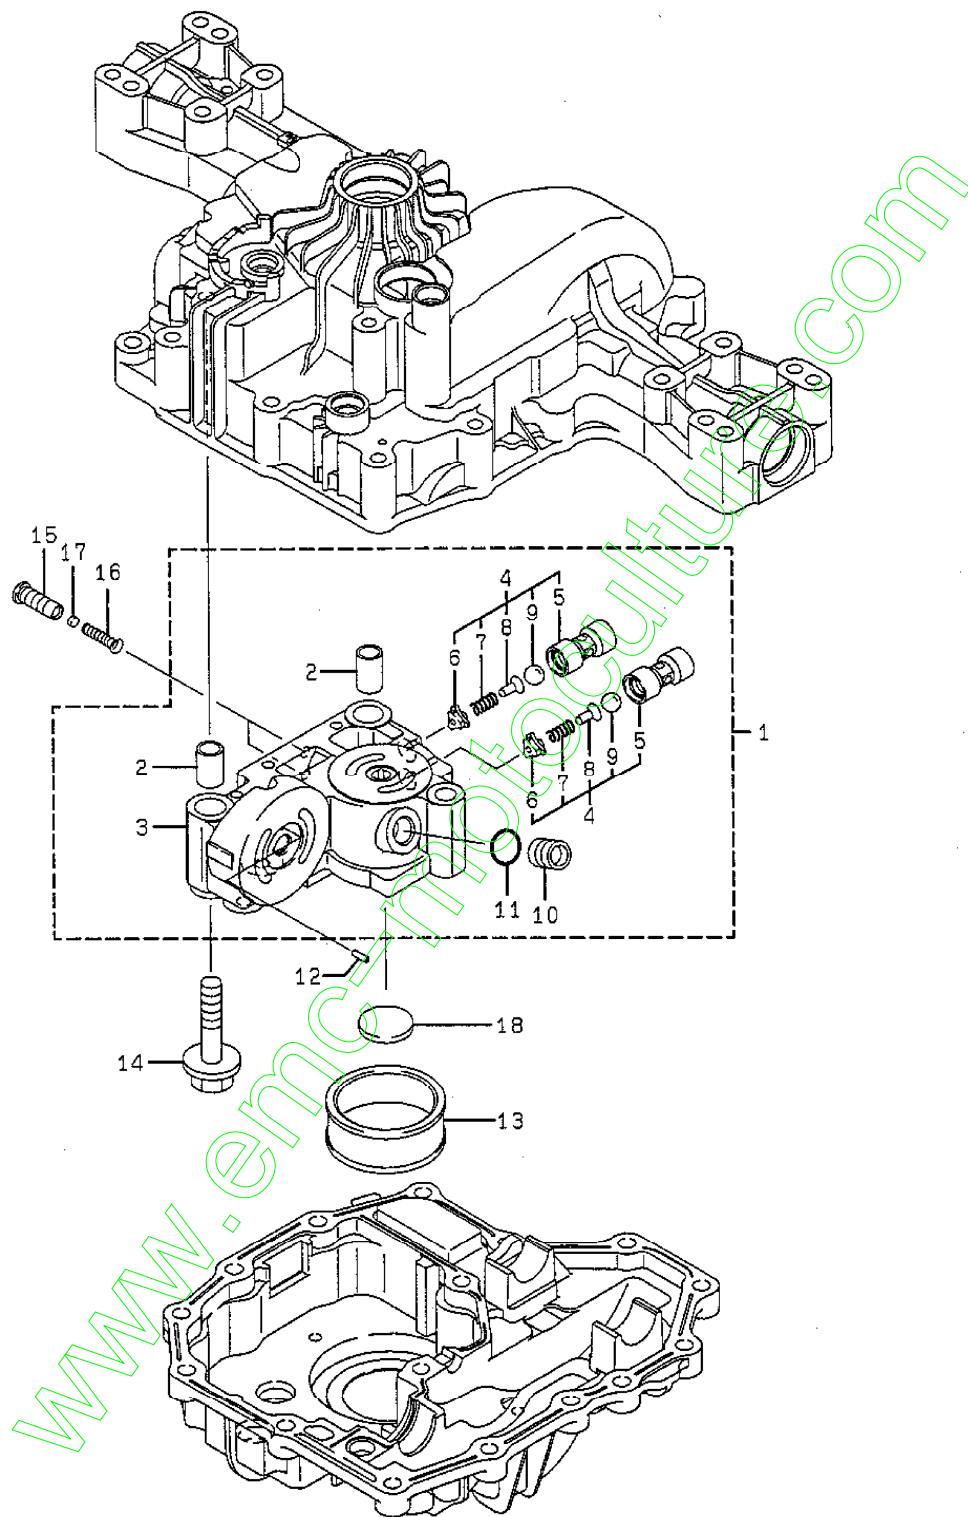


Section: KANZAKI TRANSAXLE K46G CENTER CASE

Pos. Quantity	Spare part No	Description	Kit	Notes	New
---------------	---------------	-------------	-----	-------	-----

K46G					
1	1	1139-1273-01	Center case assy	Inkl. pos 2 - 11	
2	2	1139-1231-01	.Knock pin		
10	1	1139-1177-01	.Plug		
11	1	1139-1117-01	.O-ring		
12	1	1139-1158-01	Pin		
13	1	1139-1063-01	Filter		
14	3	1139-1294-01	Bolt		
15	2	1139-1242-01	Valve		
16	2	1139-1243-01	Spring		
17	2	1139-1244-01	Filter		
18	1	1139-1150-01	Magnet		

 www.emc-motocou-que.com

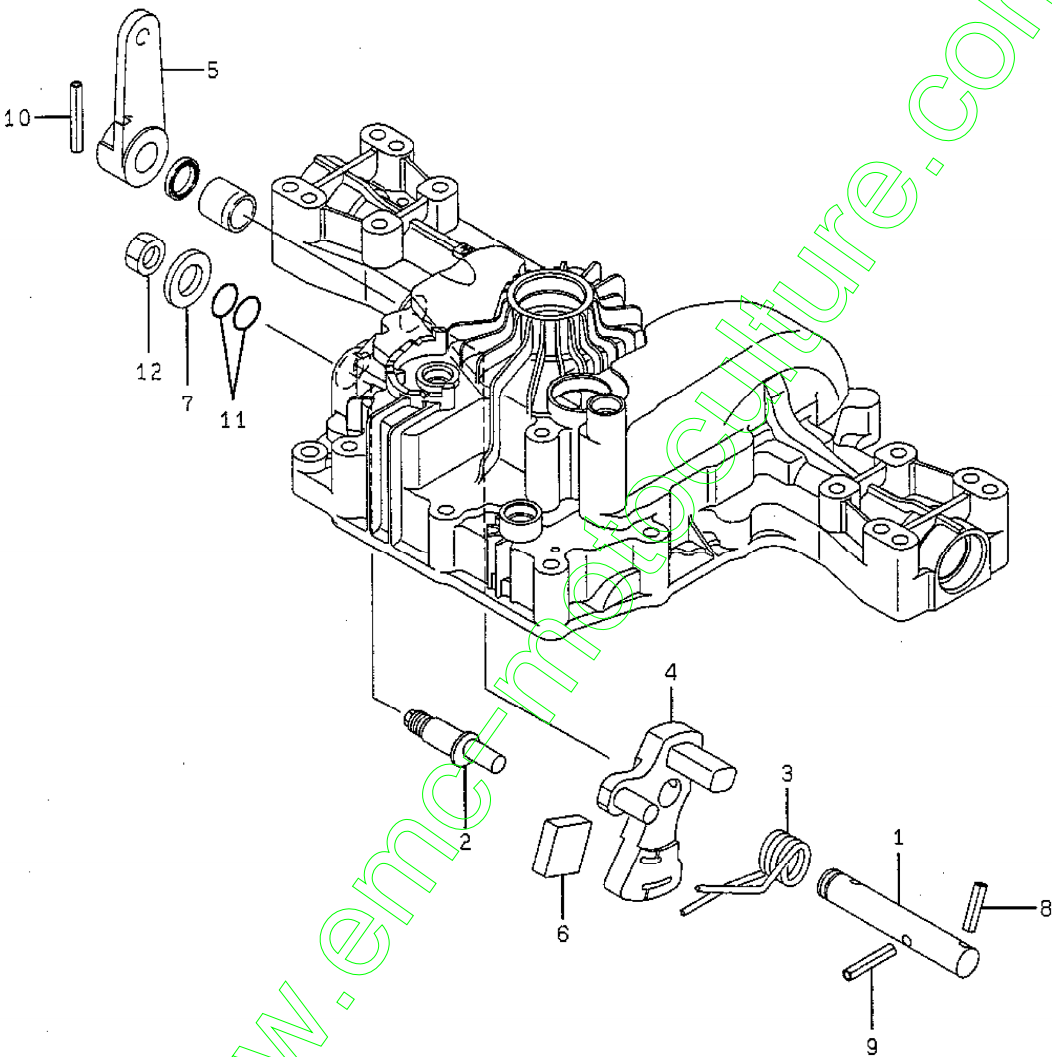


Section: KANZAKI TRANSAXLE K46G CONTROL SHAFT

Pos. Quantity	Spare part No Description	Kit Notes
---------------	---------------------------	-----------

K46G		
1	1	1139-1274-01 Control shaft
2	1	1139-1190-01 Fulcrum
3	1	1139-1252-01 Spring
4	1	1139-1253-01 Control arm
5	1	1139-1254-01 Control lever
6	1	1139-1250-01 Jerky plate
7	1	1139-1102-01 Washer
8	1	1139-1283-01 Pin
9	1	1139-1284-01 Pin
10	1	1139-1285-01 Pin
11	2	1139-1115-01 O-ring
12	1	1139-1127-01 Nut

 www.emc-motoculture.com

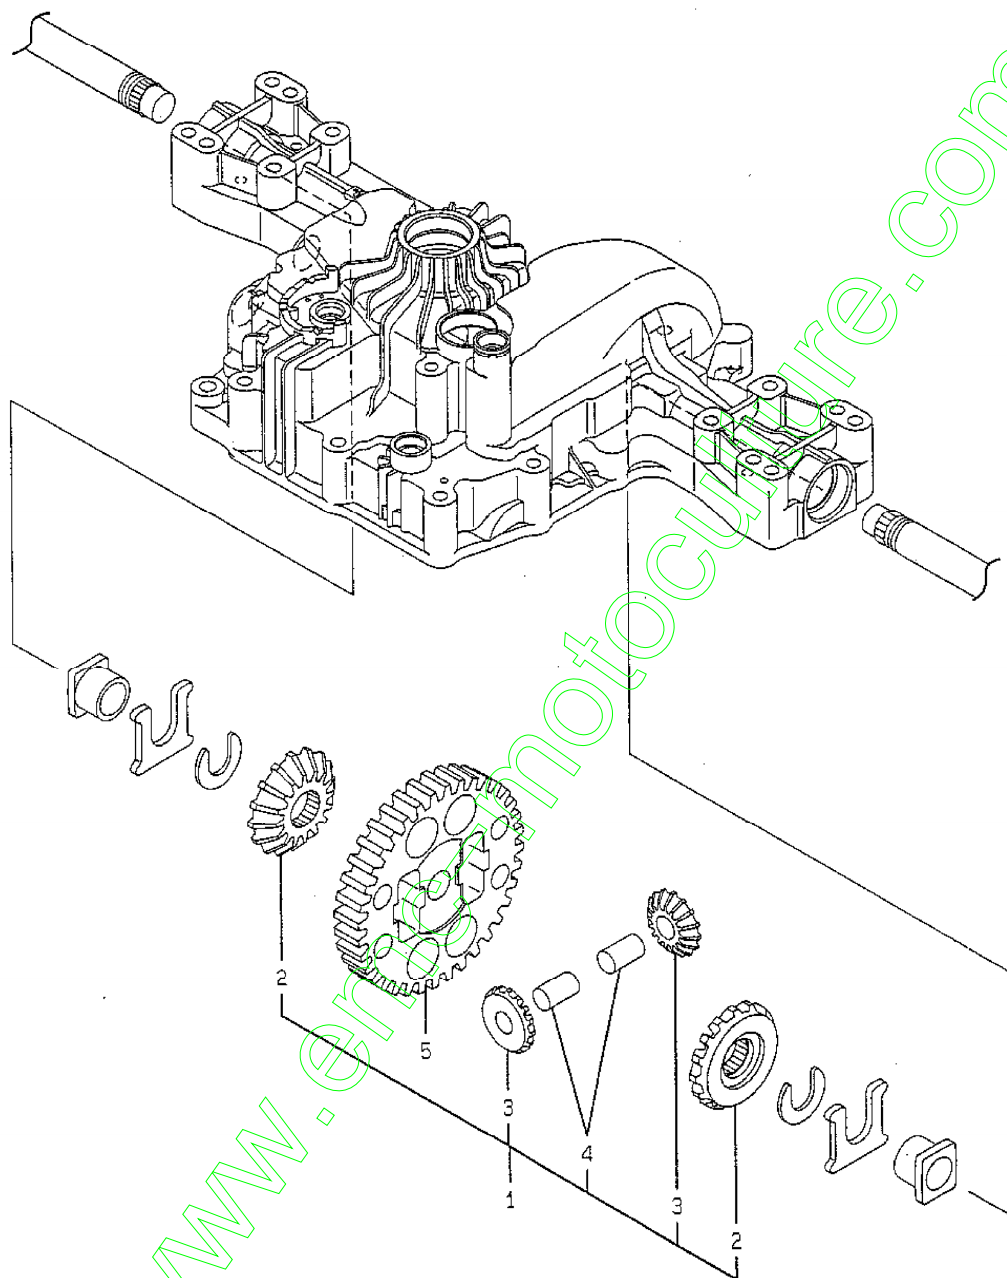


Section: KANZAKI TRANSAXLE K46G DIFFERENTIAL GEAR

Pos. Quantity	Spare part No	Description	Kit	Notes	New
---------------	---------------	-------------	-----	-------	-----

K46G

1	1	1139-1162-01	Differential gear kit	Inkl. pos 2 - 4	
5	1	1139-1258-01	Final gear		

 www.emc-motoculture.com

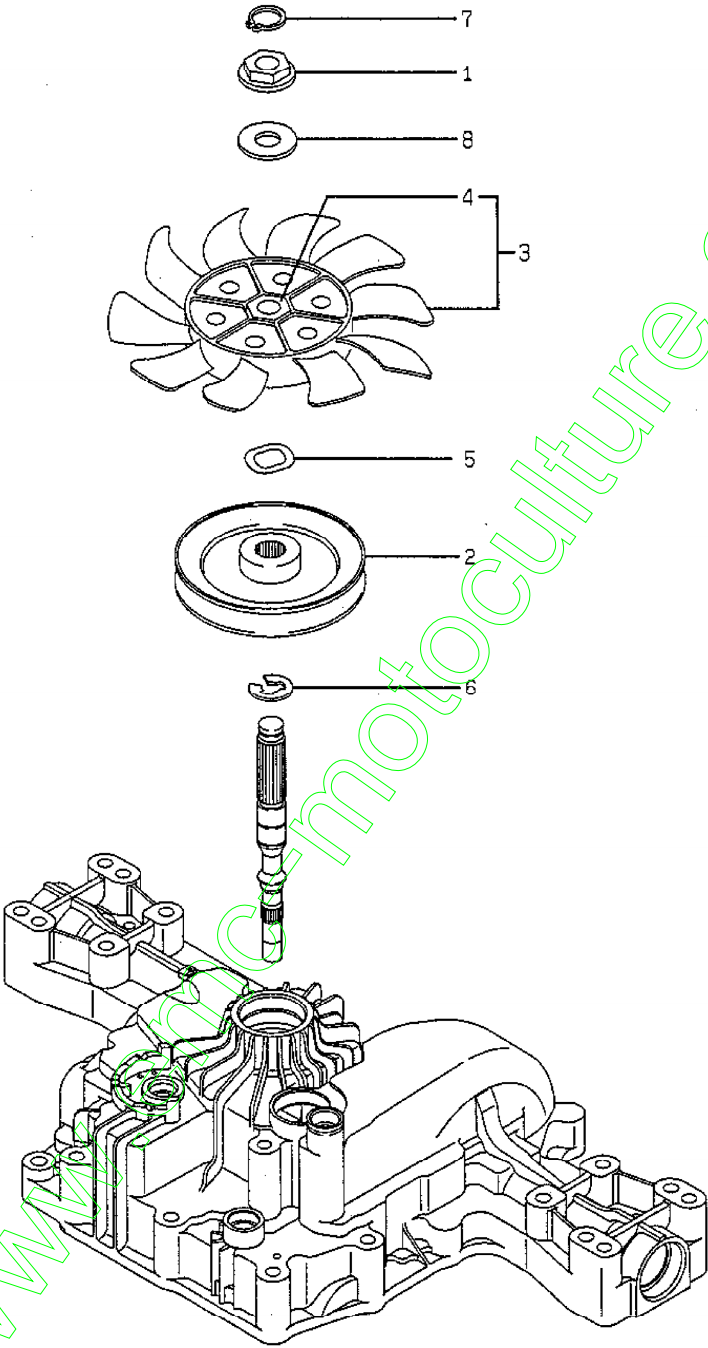


Section: KANZAKI TRANSAXLE K46G FAN

Pos. Quantity	Spare part No Description	Kit Notes	New
---------------	---------------------------	-----------	-----

K46G			
1	1	1139-1248-01 Spline collar	
2	1	1139-1249-01 Pulley	
3	1	1139-1265-01 Fan	Inkl. pos 4
5	1	1139-1266-01 Lock washer	
6	1	1139-1146-01 Ring	
7	1	1139-1149-01 Snap ring	
8	1	1139-1276-01 Collar	

 www.motocult.com

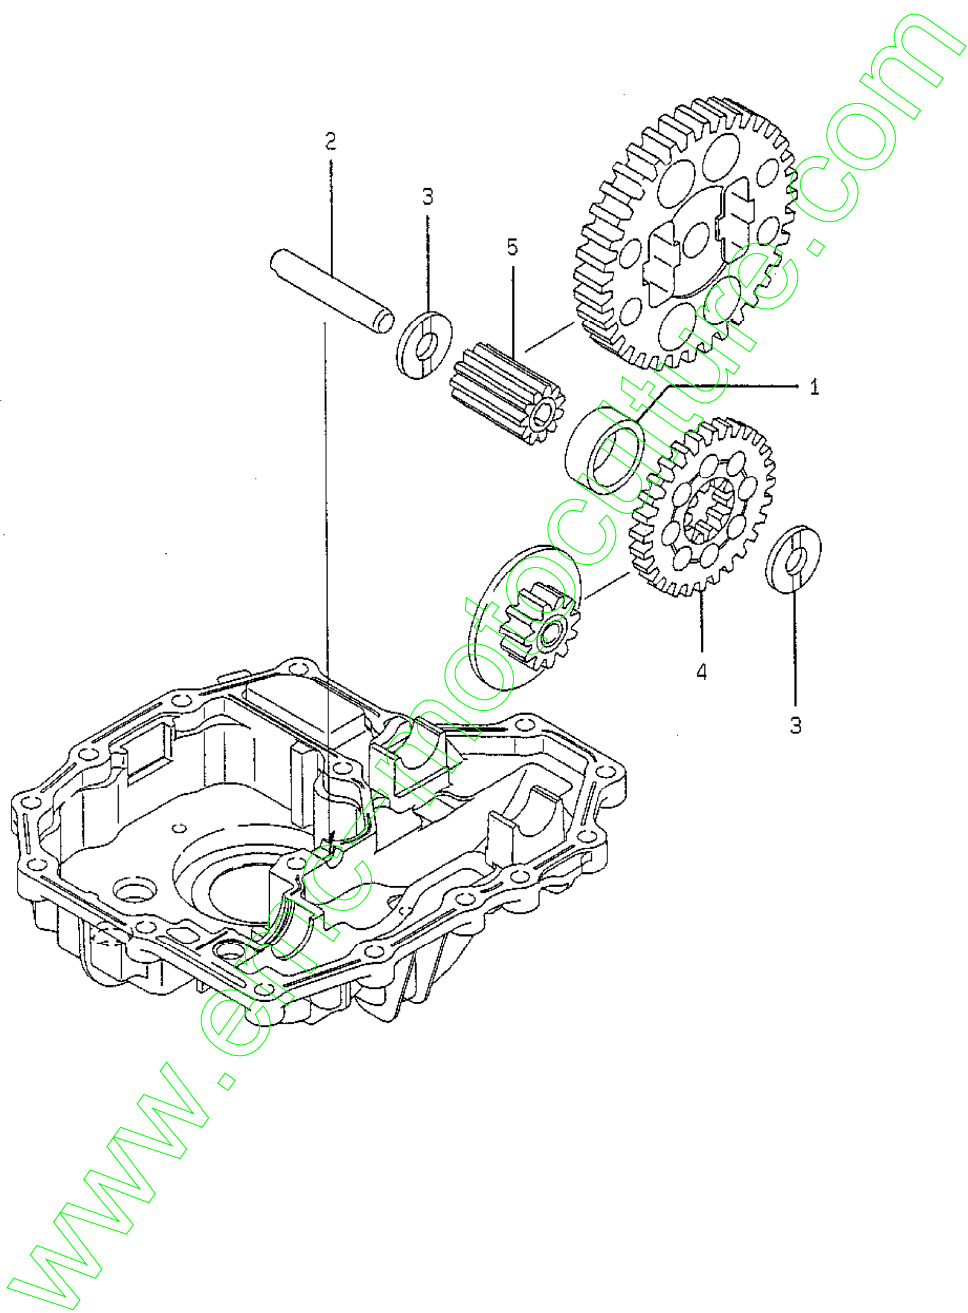


Section: KANZAKI TRANSAXLE K46G FINAL PINION

Pos. Quantity	Spare part No	Description	Kit	Notes	New
---------------	---------------	-------------	-----	-------	-----

K46G					
1	1	1139-1255-01	Collar		
2	1	1139-1256-01	Reduction shaft		
3	2	1139-1257-01	Washer		
4	1	1139-1267-01	Reduction gear		
5	1	1139-1259-01	Final pinion		

 
www.emc-motoculture.com

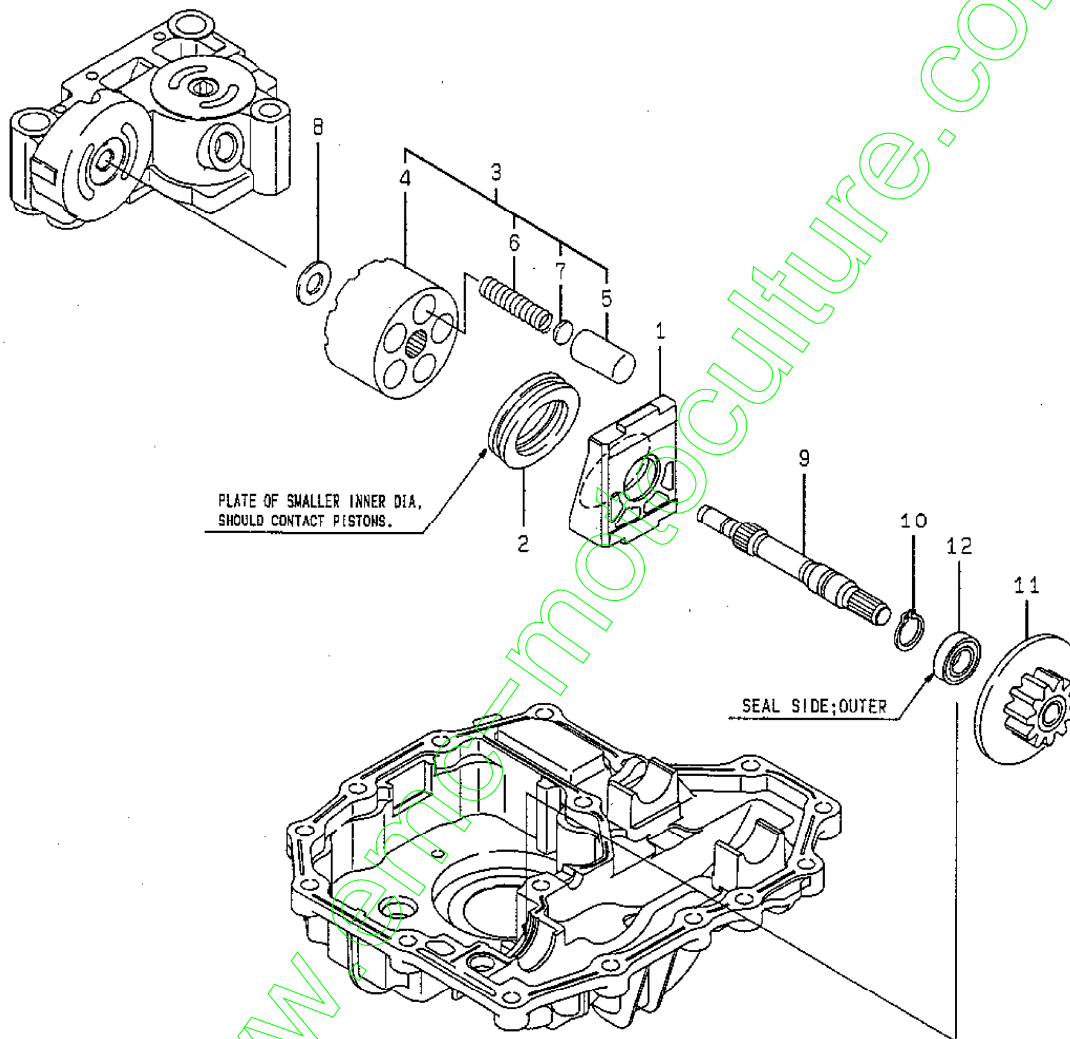

Section: KANZAKI TRANSAXLE K46G MOTOR SHAFT

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
K46G						
1	1	1139-1157-01	Housing			
2	1	1139-1054-01	Bearing			
3	1	1139-1139-01	Cylinder block assy		Inkl. pos 4 - 7	
8	1	1139-1160-01	Washer			
9	1	1139-1247-01	Motor shaft			
10	1	1139-1021-01	Snap ring			
11	1	1139-1272-01	Motor gear			
12	1	1139-1286-01	Ball bearing			

 
www.motocult.com

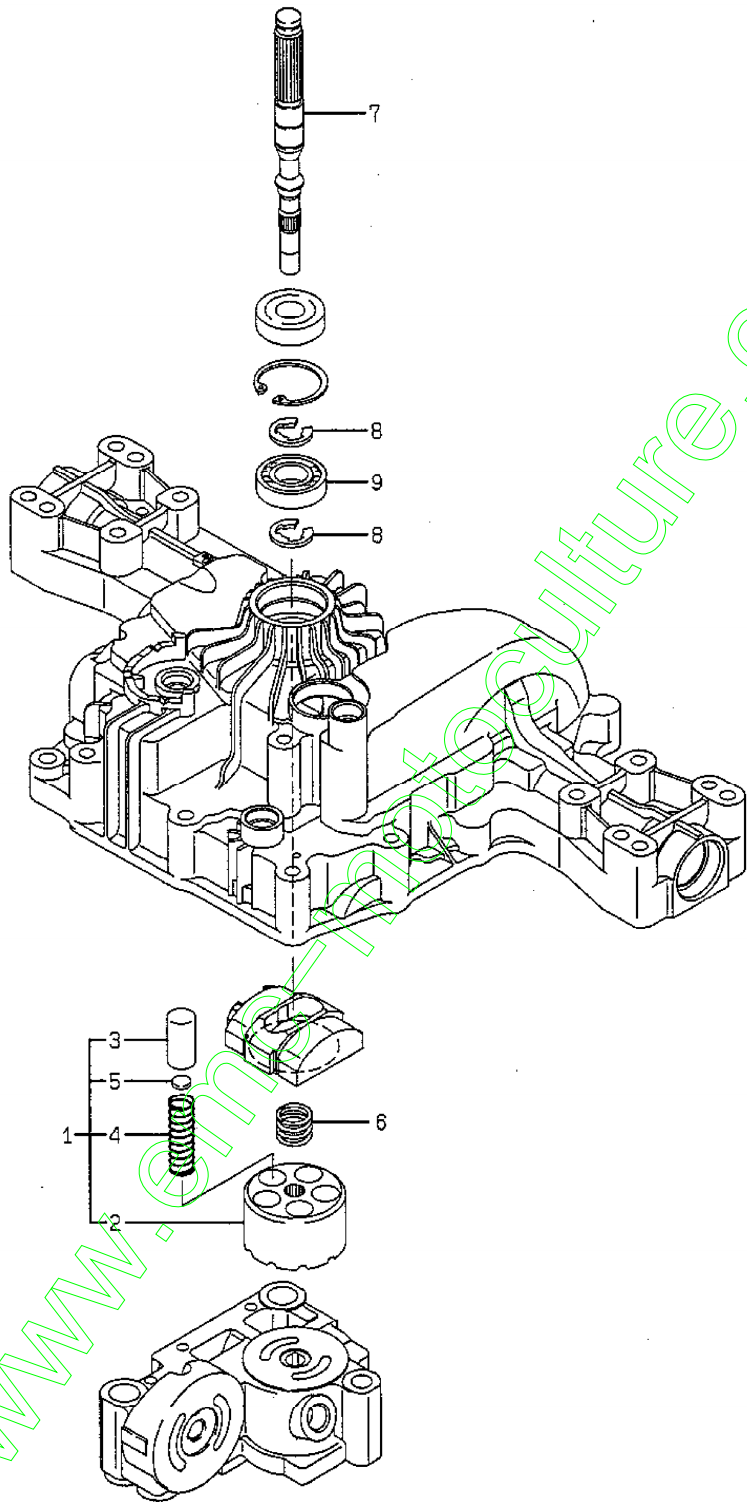

Section: KANZAKI TRANSAXLE K46G PUMP SHAFT

Pos. Quantity	Spare part No	Description	Kit	Notes	New
K46G					
1	1	1139-1159-01	Cylinder block assy	Inkl. pos 2 - 5	
6	1	1139-1245-01	Spring		
7	1	1139-1246-01	Pump shaft		
8	2	1139-1146-01	Ring		
9	1	1139-1140-01	Ball bearing		

 www.emc-motoculture.com

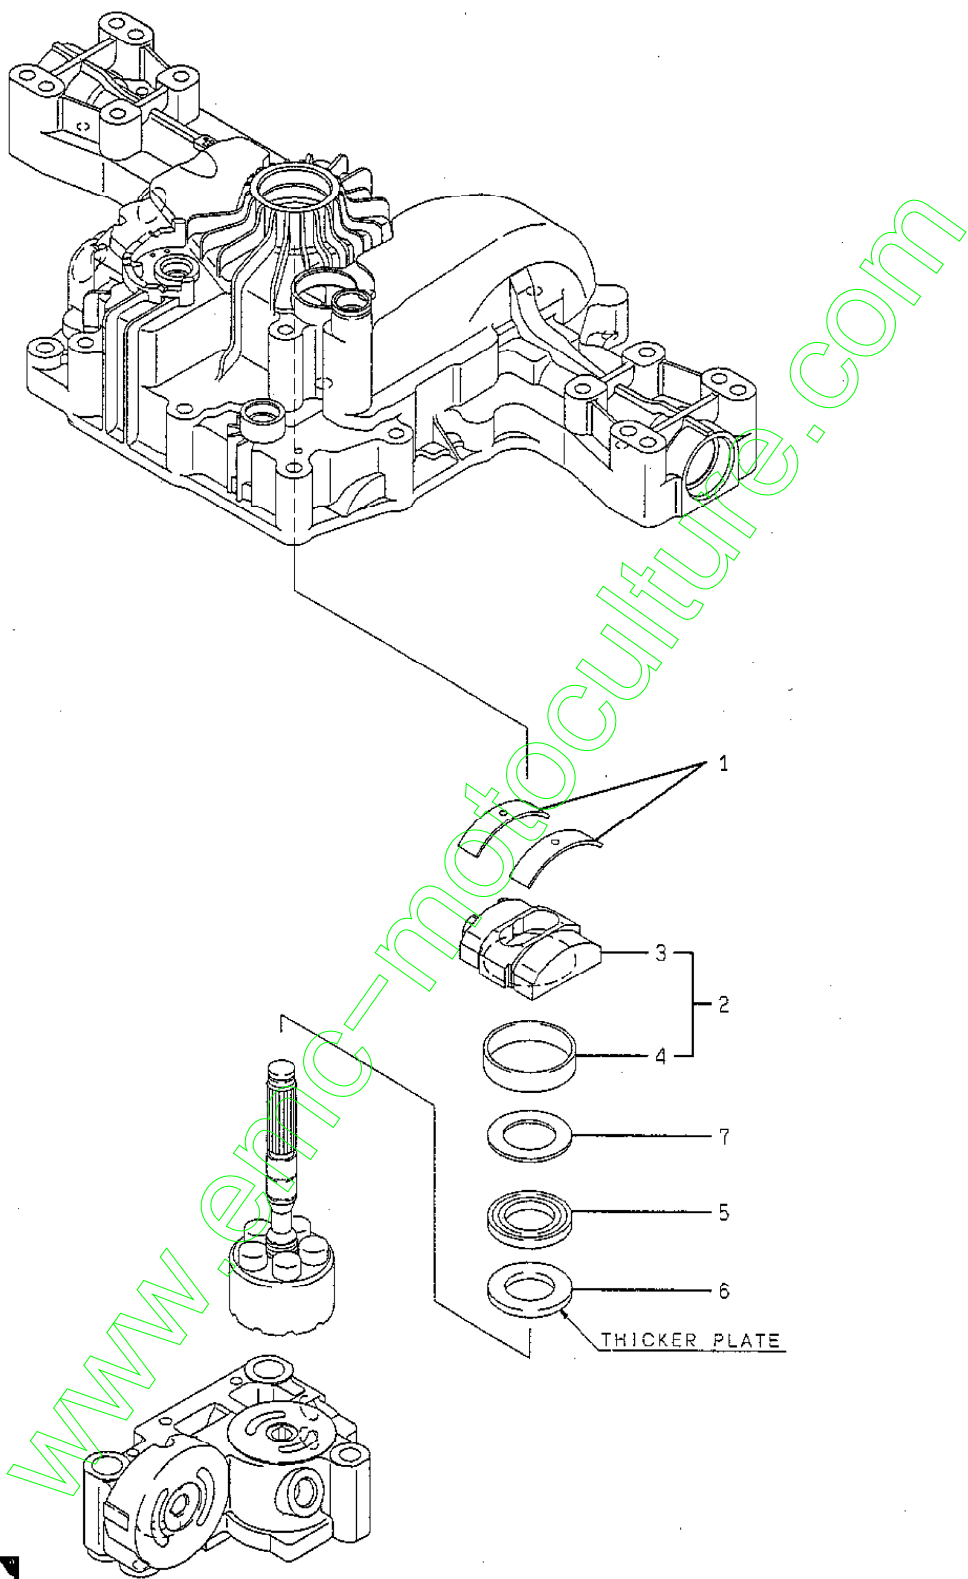


Section: KANZAKI TRANSAXLE K46G RANGE SHIFT

Pos. Quantity	Spare part No	Description	Kit	Notes	New
---------------	---------------	-------------	-----	-------	-----

K46G					
1	2	1139-1066-01	Metal thrust		
2	1	1139-1067-01	Swash plate assy	Inkl. pos 3 - 4	
5	1	1139-1068-01	Bearing		
6	1	1139-1069-01	Thrust plate		
7	1	1139-1070-01	Thrust plate		

 www.motoculture-que.com

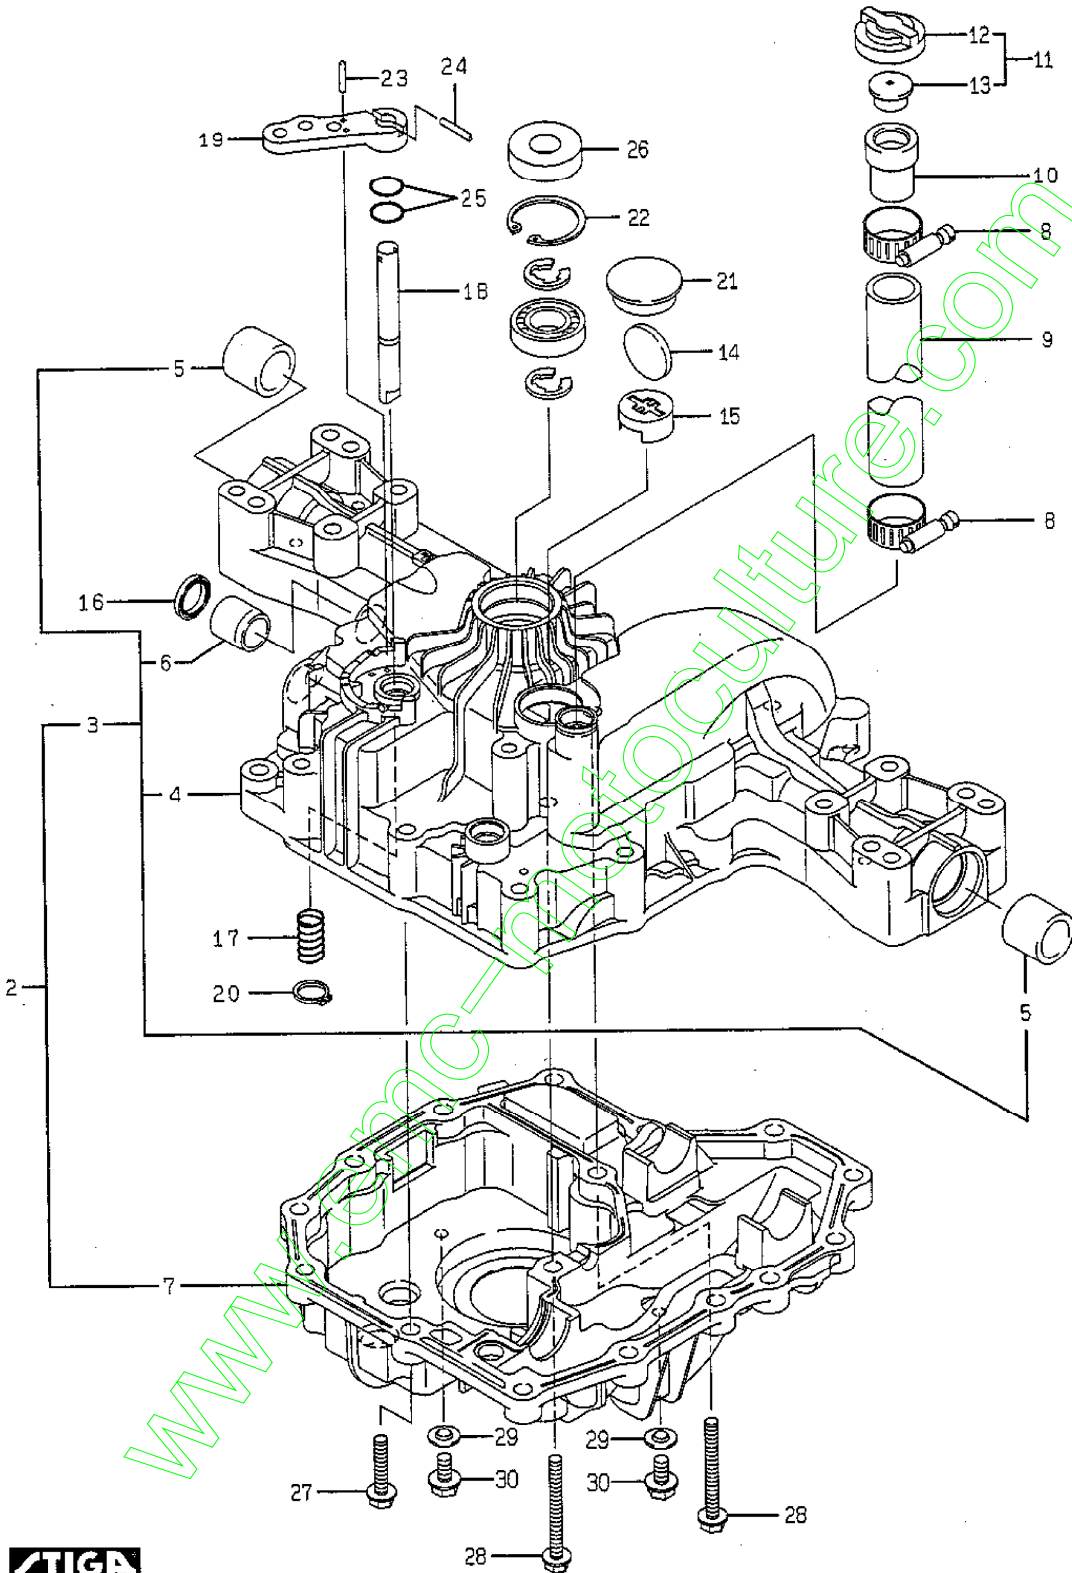

Section: KANZAKI TRANSAXLE K46G TRANSAXLE CASE

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
K46G						
2	1	1139-1268-01	Transaxle case set		Inkl. pos 3 - 7	
3	1	1139-1239-01	. Upper housing assy		Inkl. pos 4 - 6	
7	1	1139-1271-01	. Lower housing			
8	2	1139-1236-01	Hose clamp			
9	1	1139-1237-01	Tube			
10	1	1139-1238-01	Breather collar			
11	1	1139-1100-01	Vent. valve assy		Inkl. pos 12 - 13	
14	1	1139-1150-01	Magnet			
15	1	1139-1240-01	Holder-magnet			
16	1	1139-1241-01	Oil seal			
17	1	1139-1028-01	Spring			
18	1	1139-1251-01	Shaft-bypass			
19	1	1139-1189-01	Lever-bypass			
20	1	1139-1161-01	Ring			
21	1	1139-1275-01	Bore plug			
22	1	1139-1104-01	Snap ring			
23	1	1139-1279-01	Pin			
24	1	1139-1280-01	Pin			
25	2	1139-1117-01	O-ring			
26	1	1139-1119-01	Seal			
27	14	1139-0244-01	Tapping screw			
28	2	1139-1295-01	Tapping screw			
29	2	1139-1103-01	Seal washer			
30	2	1139-1123-01	Bolt			