

PIECES DETACHEES NOTICE D'EMPLOI

Motobineuses

YB50 YB50HD YB50IN



Yvan Béal - 21, av. de l'Agriculture - 8.P 16 ZJ. du Brèzet - 63014 Clermont-Ferrond Cedex 2 Tel: 04 73 91 93 51 - Télécapie: 04 73 90 23 11 www.yvanbeal.fr - E-mail : into@yvanbeal.fr

03-000215-050224 01-000066-050224





DECLARATION "CE" DE CONFORMITE

La soussignée : Mme Yvette LECLERC

Présidente du Directoire de la Société Yvan BÉAL

21, avenue de l'Agriculture - BP 16

63014 CLERMONT-FERRAND Cedex 2

atteste que le matériel suivant :

Genre	Motobineuse à moteur thermique			
Marque	BÉAL			
Type	YB50 YB50IN	YB50HD		

est conforme:

• aux directives : - 98/37/CE

- 2000/14/CE

• aux normes : - EN709

- EN292

Fait à Clermont-Ferrand, Le 19 Octobre 2004

LA DIRECTION GENERALE
Mme Yvette LECLERC





TABLE DES MATIERES

•	CONSIGNES DE SECURITE	<i>)</i>) 3
•	PREPARATION DE LA MOTOBINEUSE	4
	Guidon	4
	Roue porteuse	4
	Barre de profondeur	4
	Fraises	4
•	ENTRETIEN	5
•	Ensemble de l'appareil	5
	Moteur	5
	Boîtier de transmission	5
	Câbles d'embrayage – réglage de la tension	5
•	VUES ECLATEES & LISTES DE PIECES	6 à 17
_	CARACTERISTIQUES	40
•	CARACTERISTIQUES	10

MOTOBINEUSES YVAN BEAL YB 50, YB 50 HD et YB 50 IN

NOTICE D'UTILISATION

CONSIGNES DE SECURITE



Attention!

- La motobineuse doit toujours être utilisée suivant les recommandations contenues dans cette notice. Lire attentivement les consignes de sécurité.
- Pour toute intervention sur la motobineuse : entretien, nettoyage, changement d'outils, etc., le moteur doit être impérativement arrêté.
- Le moteur doit également être arrêté pour faire le plein de carburant. Ne pas fumer ni approcher de flamme pendant l'opération. Essuyer immédiatement le carburant qui se serait renversé.
- Ne pas laisser tourner le moteur dans un local fermé, à cause des risques d'asphyxie dus aux gaz d'échappement.
- En cas d'utilisation sur des terrains en pente, tenir compte du risque de retournement de l'appareil.
- Se méfier des projections de pièrres. Eloigner les autres personnes de la zone de travail, et ne pas démonter les protecteurs de fraises.
- Pour mettre le moteur en route, se maintenir sur le côté de l'appareil, jamais devant ou derrière, au cas où un mouvement serait amorcé.
- La motobineuse ne doit pas être confiée à des personnes non averties des risques, non familiarisées avec les commandes, ou à des enfants.
- Porter des chaussures fermées pour protéger les pieds contre tout risque de blessure. Porter des gants de sécurité pour manipuler les fraises.

D'autres consignes de sécurité concernant le moteur figurent dans le manuel d'utilisation de celui-ci.

Les motobineuses YVAN BEAL YB 50, YB 50 HD et YB 50 IN sont conformes aux normes de sécurité en vigueur.

PREPARATION DE LA MOTOBINEUSE

GUIDON

Desserrer la vis de blocage et placer le guidon à la position désirée (verticalement et horizontalement). Bien resserrer la vis de blocage.

ROUE PORTEUSE

Placer la chape de roue entre les 2 longerons du châssis, et mettre en place le boulon pivot. Accrocher le ressort de maintien au châssis.

BARRE DE PROFONDEUR

Mettre en place la barre de profondeur dans la douille du châssis et la maintenir à l'aide de la goupille à ressort.

FRAISES



Attention!

Porter des gants pour manipuler les fraises

Veiller au sens de montage des fraises sur les arbres : la partie affûtée des couteaux doit attaquer le sol en marche avant.

ENTRETIEN



Attention!

Toujours arrêter le moteur avant toute intervention sur l'appareil.

ENSEMBLE DE L'APPAREIL

Après chaque utilisation, nettoyer entièrement la motobineuse pour éliminer la terre et la poussière. Retirer l'herbe qui peut s'enrouler autour des fraises.

MOTEUR

Effectuer l'entretien préconisé par le fabricant du moteur. Consulter le manuel d'utilisation du moteur.

BOITIER DE TRANSMISSION

Une ou deux fois par an, introduire quelques cm³ de graisse par l'orifice de graissage du boîtier.

CABLES D'EMBRAYAGE: REGLAGE DE LA TENSION

- Débrancher la bougie, et déposer le carter de courroies.
- Tirer la poignée de lanceur, et vérifier la courroie de marche avant : elle ne doit pas entraîner la poulie.
- Serrer le levier d'embrayage de marche avant : la courroie doit être tendue pour pouvoir entraîner la poulie. Sinon, régler la longueur du câble, en agissant sur les écrous de réglage, pour obtenir un fonctionnement correct.
- Effectuer le même contrôle pour la courroie de marche arrière.

YB50HD MONTAGE DU KIT TENDEUR / POULIES / COURROIES


- A. Remplacer les pièces A,B,C,D,E, par les pièces fournies dans le KIT.
- B. Procéder en suivant les étapes ci dessous de 1 à 3 marche avant et de 1 à 6 marche arrière.
- C. Régler les tensions des câbles :
 L'effort d'action des leviers doit augmenter significativement à partir de la
 mi-course des leviers (début d'allongement des ressort), pour éviter un patinage et
 la destruction des courroies.

COURROIE MARCHE AVANT


1. Déposer la poulie plastique.

COURROIE MARCHE ARRIERE


1. Déposer la poulie plastique. Enlever les dépôts de caoutchou sur la partie acier au fond de la gorge de la poulie.

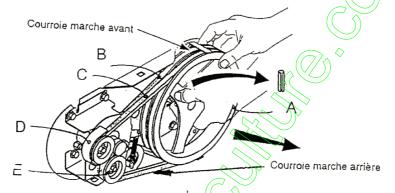


2. Démonter la platine support galet.

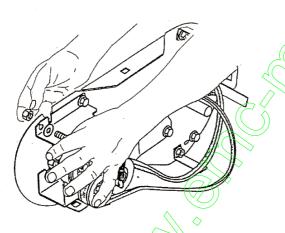

3. Changer la courroie et remonter

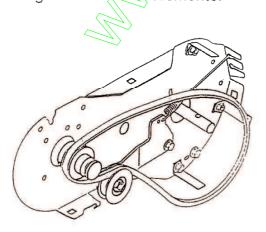


2. Dévisser l'écrou du galet supérieur et sortir ce dernier, si nécessaire démonter le galet inférieur

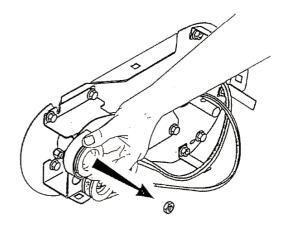

- Retirer la courroie et enlever les éventuels dépôts de caoutchouc sur les flancs de la gorge de la poulie moteur en acier.
- 4. Remonter la courroie.
- 5. Après remontage de l'ensemble vérifier que le câble de marche arrière est bien en place et qu'il passe dans la fente de la platine.
- 6. Vérifier le bon fonctionnement du câble de marche arrière, et si nécessaire le huiler.

MOTOBINEUSE YB 50 VUE ECLATEE

VUE D'ENSEMBLE

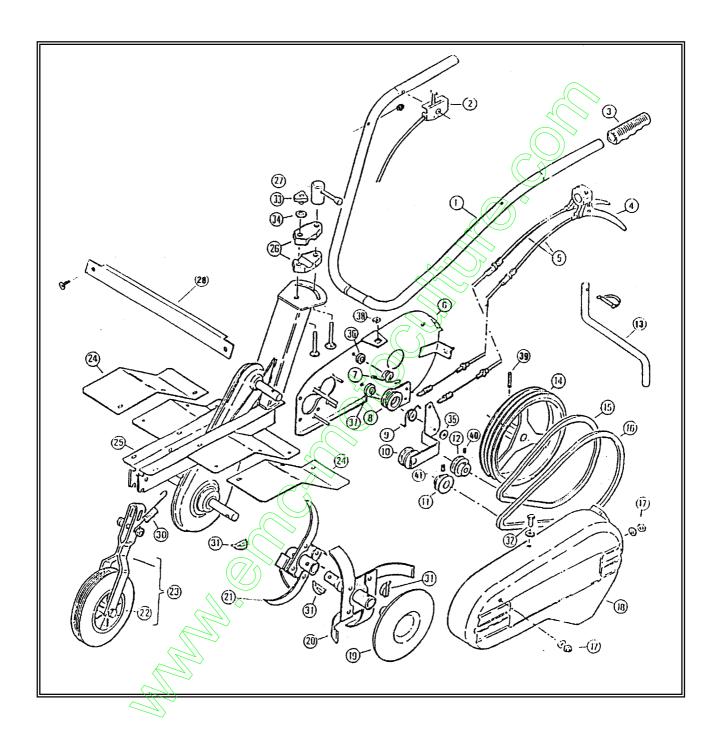


MOTOBINEUSE YB 50 LISTE DE PIECES DE RECHANGE

Repère	Désignation	Référence	Qté
1	Guidon	401231	1
2	Commande de gaz	202601	1
3	Poignée caoutchouc diamètre 25	201197	2
4	Poignée embrayage double	202602	1
5	Câble embrayage	202604	2
6	Platine d'embrayage	400281	1
7	Ressort tendeur marche arrière	201098	1
8	Basculot de marche arrière	400181	1
9	Ressort tendeur marche avant	400220	1
	Ensemble basculot composé de	400162	1
10	Galet plastique H20	FP402050	
10	Entretoise M Avant	FP400511]
	Basculot de M Avant	201471	
11	Poulie de marche avant	F202609	1
12	Poulie de marche arri ère	F202610	1
13	Eperon de profondeur	F201199	1
14	Poulie réceptrice	F202612	1
15	Courroie de marche AR Z38 ½	202613	1
16	Courroie de marche AV A44	F202614	1
17	Ecrou frein M8	F902092	3
18	Capot plast ique courroies	400960	1
19	Disque protège-plantes	202617	2
20	Paire de fraises additionnelles	202618B	2
21	Fraise principale	202619B	2
22	Roue diamètre 200 seule	201027E	1
23	Roue porteuse avant complète	202620	1
24	Paire toit de fraise	202621	1
25	Bâti-réducteur	202622	1
26	Demi-noix de serrage bras	401120	2
27	Poignée de serrage bras	202624	1
28	Traverse	400391	1
29	Goupille béta 2 mm	201015	1
30	Ressort support roue	202620R	1
31	Goupille fraise 8 mm	201200	4-6
32	Vis HM8-16	TH08016EZ	1
33	Bouton étoile M8	2026261	1
34	Rondelle	2026262	1
35	Rondelle	2026263	2
36	Entretoise MAR	2026264	1
37	Entretoise MAV	2026265	1
38	Ecrou cage M8	2026266	1
39	Goupille mécanindus 6 x 25	QSGM0625	1
40	Vis Hc M6x10 bout cuvette	ST06010BC	1
41	Vis Hc M8x10 bout pointu	ST08010BP	1

MOTOBINEUSE YB 50 HD VUE ECLATEE

VUE D'ENSEMBLE

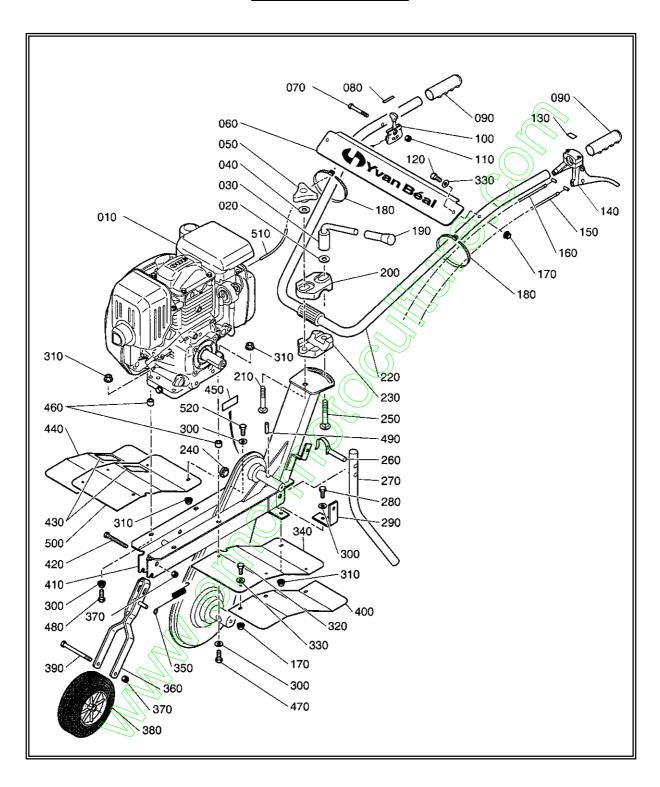


MOTOBINEUSE YB 50 HD LISTE DE PIECES DE RECHANGE

Repère	Désignation	Référence	Qté
010	Moteur HONDA 5 CV GC 160	FSMOT5HB	1
020	Rondelle plate M12	QSMU12Z	1
030	Poignée de serrage	460243	<u>·</u> 1
040	Rondelle 28 x 10,5 x 3	FP400401	1
050	Bouton étoile	FSBET10N	1
060	Traverse de guidon	400032	1
070	Vis H M6 x 40/18 CL6.8	QSTH06040PZ6	1
080	Etiquette " gaz poussé "	FDET400450	<u>'</u> 1
090	Poignée	FSP0102	2
100	Manette de gaz	FSMANET03	1
110	•	QSHF06Z	<u></u> 1
	Ecrou bague nylon M6		2
120	Vis H M6 x 35/18 CL8.8	Q\$TH06035PZ8	1
130	Etiquette " M.A.V. – M.A.R. "	FDET400460	
140	Levier double diamètre 25	FSLEV27	1
150	Câble d'embrayage M.AR.	FP402250	1
160	Câble d'embrayage M.AV.	FP402240	1
170	Ecrou à embase crantée H M6	QSHE06Z	8
180	Collier	FSCOL140	2
190	Manchon plastique	FSMAN01	1
200	Bride crantée	464111	1
210	Vis TRCC M 10 x 80	QSTRCC1080	1
220	Guidon	401972	1
230	Bride lisse	401122	1
240	Bouchon	FSBOU16231	1
250	Vis TRCC M 12 x 80	QSTRCC1280	1
260	Goupille diamètre 7 x 38	G00738	1
270	Eperon	402341	1
280	Vis H M 8 x 25 CL 8.8	QSTH08025EZ8	2
290	Patte support platine	402591	1
300	Rondelle plate M8	QSMUO8Z	6
310	Ecrou à embase crantée HM8	QSHE08Z	6
320	Vis H M 6 x 12 CL8.8	QSTH06012EZ8	6
330	Rondelle plate M 6	QSMU06Z	8
340	Aile gauche	402361	1
350	Ressort de roue avant	FP401060	1
360	Support de roue avant	401941	1
370	Ecrou bague nylon H M 10	QSHF10Z	2
380	Roue	FSROU161	_
390	Vis H M 10 x 90/26 CL8.8	QSTH10090PZ8	<u>·</u> 1
400	Aile amovible gauche	402381	<u>'</u> 1
410	Châssis Châssis	402121	1
420	Vis HM 0 x 45 CL6.8	QSTH10045EZ6	<u>'</u> 1
430	Etiquette " outil rotatif "	FDET400490	2
440	Aile amovible droite	402391	1
		FDET409130	1
450	Etiquette " graissage "		4
460	Entretoise moteur	FP403160	2
470	Vis H M 8 x 45 CL8.8	QSTH08045EZ8	
480	Vis H M 8 x 40 CL8.8	QSTH08040EZ8	2
490	Goupille élastique diamètre 6 x 25 E	QSMG0625	1
500	Aile droite	402371	1
510	Câble d'accélérateur	FP402260	1
520	Vis H M 8 x 20 CL8.8	QSTH08020EZ8	1

MOTOBINEUSE YB 50 HD VUE ECLATEE

SYSTEME D'ENTRAINEMENT

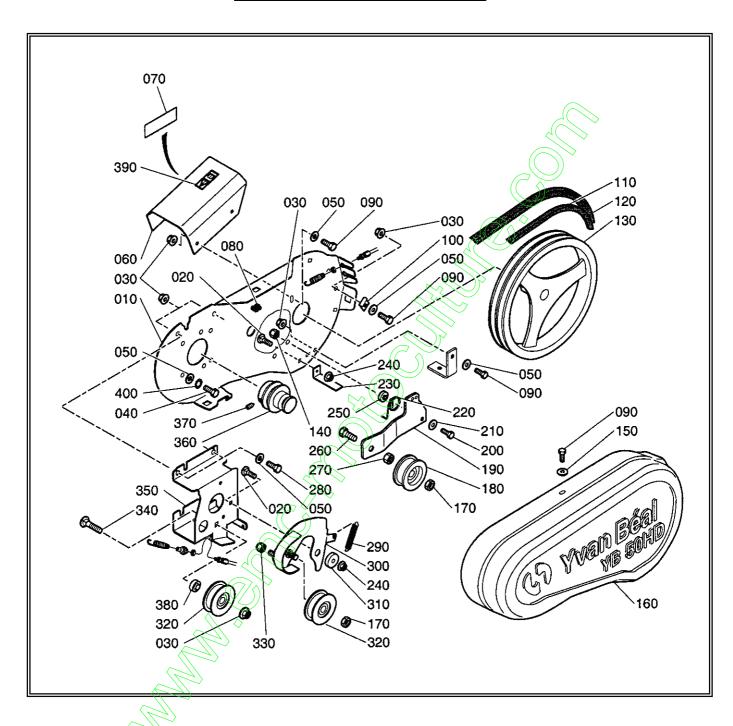


MOTOBINEUSE YB 50 HD LISTE DE PIECES DE RECHANGE

Repère	Désignation	Référence	Qté
010	Platine	402301	1
020	Vis TRCC M 6 x 16	QSTRCC0616	4
030	Ecrou à embase crantée H M 8	QSHE08Z	7
040	Vis H 5/16x5/8 24 UNF CL8.8	QSUNF5/16x5/8	4
050	Rondelle plate M8	QSMU08Z	10
060	Cache potence	402331	1
070	Etiquette " instruction "	FDET400480	1
080	Ecrou cage M8	QSHCR08	3
090	Vis H M8x20 CL8.8	Q\$TH08020EZ8	7
100	Patte de fixation	402501	1
110	Courroie M.AR.	FSCOUZ1260	1
120	Courroie M.AV.	FSCOUA425	1
130	Poulie double	FP402280	1
140	Ecrou frein M8	QSHS08Z8	1
150	Rondelle plate L8	QSML08Z	3
160	Capot de courroie	FP402310	1
170	Ecrou bas H m 12	QSHM12Z	2
180	Galet plastique simple H20	FP402050	1
190	Basculot M.AV.	402601	1
200	Vis H M8x25 CL8.8	QSTH08025EZ8	1
210	Rondelle diamètre 20x8,2x2,4	FP400381	1
220	Ressort M.AV.	FP400220	1
230	Butée de courroie	402621	3
240	Ecrou à embase crantée H M6	QSHE06Z	4
250	Entretoise M.AV.	FP400511	1
260	Vis H M 12x30 CL8.8	QSTH12030EZ8	1
270	Ecrou H M12	QSHU12Z	1
280	Vis H M8x16 CL8.8	QSTH08016EZ8	2
290	Ressort	FP601654	1
300	Basculot M.AR.	402441	1
310	Entretoise	FP402491	1
320	Galet plastique diamètre 44 x 17 noir	FP408020	2
330	Ecrou bague nylon M 8	QSHF08Z	1
340	Vis TRCC M 8 x 30	QSTRCC0830	1
350	Platine M.AR.	402421	1
360	Poulie moteur	FP402271	1
370	Vis STHC M 8x10 bout pointu	QSST08010BU	1
380	Entretoise de galet	FP402471	1
390	Etiquette "instruction "	FDET471060	1
400	Rondelle éventail M8	QSMA08Z	4

MOTOBINEUSE YB 50 HD VUE ECLATEE

FRAISE

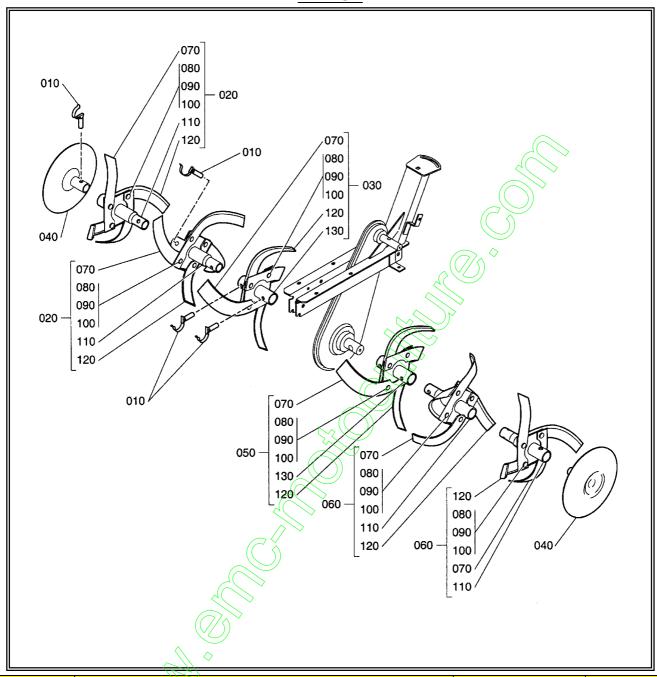


Repère	Désignation	Référence	Qté
010	Goupille FM diamètre 10 x 32	3GX032XX	8
020	Etoile additionnelle droite	2HL001BE	2
030	Etoile départ droite	432020	1
040	Disque	431321	2
050	Etoile départ gauche	432010	1
060	Etoile additionnelle gauche	2LL001BE	2
070	Couteau labour droit	3TL353DN	12
080	Vis H M8x20	QSTH08020EZ8	24
090	Rondelle éventail AZ8	QSMA08Z	24
100	Ecrou H M8	QSHU08Z	24
110	Moyeu additionnelle	2NL001NO	4
120	Couteau labour gauche	3TL353GN	12
130	Moyeu de départ	2ML001NO	2



MOTOBINEUSE YB 50 IN VUE ECLATEE

VUE D'ENSEMBLE

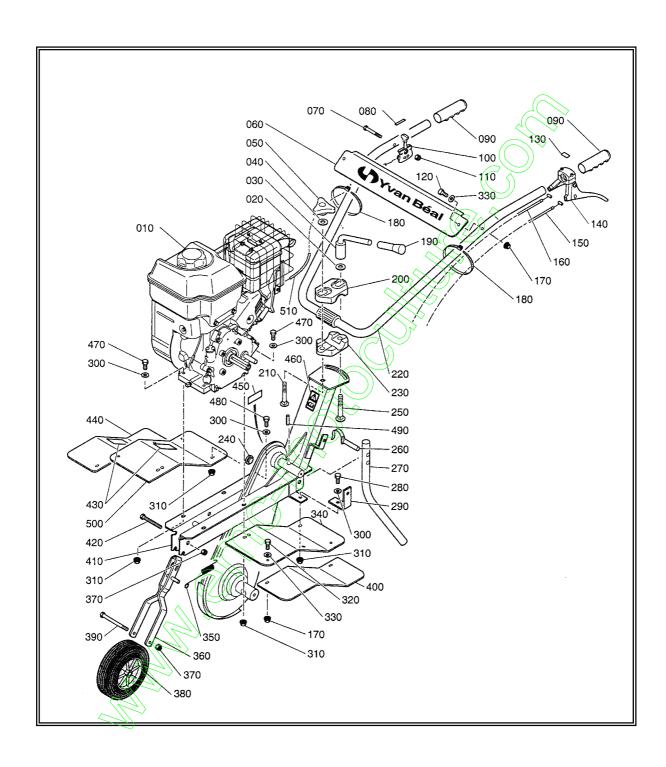


MOTOBINEUSE YB 50 IN LISTE DE PIECES DE RECHANGE

Moteur 5,5 CV INTEK	Repère	Désignation	Référence	Qté
D20	010	Moteur 5.5 CV INTEK	FSMOT55B	1
030 Poignée de serrage 460243 1 040 Rondelle 28 x 10,5 x 3 FP400401 1 050 Bouton étoile FSBET10N 1 060 Traverse de guidon 400032 1 070 Vis H MG x 40/18 CL6.8 QSTH06040PZ8 1 080 Etiquette "gaz tiré" FDET201440 1 090 Poignée FSP0102 2 100 Manette de gaz FSMANET03 1 110 Ecrou bague nylon M6 QSHF06Z 1 120 Vis H M6 x 35/18 CL8.8 QSTH06035PZ8 2 130 Etiquette "M.A.V M.A.R." FDET400460 1 140 Levier double diamètre 25 FSLEV27 1 150 Câble d'embrayage M.AR. FP201280 1 160 Câble d'embrayage M.AV. FP400420 1 170 Ecrou à embase crantée H M6 QSHE06Z 8 180 Côlier FSCOL140 2 190 Manchon plastique FSMAN01		·		<u>.</u> 1
Oxford Rondelle 28 x 10,5 x 3				
Souton étoile		· · · · · · · · · · · · · · · · · · ·		
060		·		
070				
B80				
Poignée				
100 Manette de gaz				
110				
120		<u> </u>	, , , , , , , , , , , , , , , , , , ,	
130				
140				
150			\ -/-/-	
160		(\ \		
170		, <u> </u>	<u> </u>	
180 Collier				
190				
Bride crantée				
210				
220 Guidon 401972 1 230 Bride lisse 401122 1 240 Bouchon FSBOU16231 1 250 Vis TRCC M 12 x 80 QSTRCC1280 1 260 Goupille diamètre 7 x 38 G00738 1 270 Eperon 402341 1 280 Vis H M 8 x 25 CL 8.8 QSTH08025EZ8 2 290 Patte support platine 201321 1 300 Rondelle plate M8 QSMU08Z 6 310 Ecrou à embase crantée H M8 QSHE08Z 6 320 Vis H M 6 x 12 CL8.8 QSTH08012EZ8 6 330 Rondelle plate M 6 QSMU06Z 8 340 Aile gauche 401802 1 350 Ressort de roue avant 401941 1 370 Ecrou bague nylon H M 10 QSHF10Z 2 380 Roue FSROU202 1 390 Vis H M 10 x 90/26 CL8.8 QSTH10090PZ8 1 400 Aile amovible gauche 401832 1 410 Châssis 402692 1 420 Vis H M 10 x 45 CL6.8 QSTH10045EZ6 1 430 Etiquette " outil rotatif " FDET400490 2 2 440 Aile amovible droite 401842 1 450 Etiquette " graissage " FDET409130 1 460 Etiquette " instruction " FDET40160 1 470 Vis H M 8 x 35 CL8.8 QSTH080035EZ8 4 480 Vis H M 8 x 35 CL8.8 QSTH08002EZ8 1 490 Goupille élastique diamètre 6 x 25 E QSGM0625 1 500 Aile droite 401812 1				
230				
240 Bouchon FSBOU16231 1 250 Vis TRCC M 12 x 80 QSTRCC1280 1 260 Goupille diamètre 7 x 38 G00738 1 270 Eperon 402341 1 280 Vis H M 8 x 25 CL 8.8 QSTH08025EZ8 2 290 Patte support platine 201321 1 300 Rondelle plate M8 QSMU08Z 6 310 Ecrou à embase crantée H M8 QSHE08Z 6 320 Vis H M 6 x 12 CL 8.8 QSTH06012EZ8 6 330 Rondelle plate M 6 QSMU06Z 8 340 Aile gauche 401802 1 350 Ressort de roue avant FP401060 1 360 Support de roue avant 401941 1 370 Ecrou bague nylon H M 10 QSHF10Z 2 380 Roue FSROU202 1 390 Vis H M 10 x 90/26 CL 8.8 QSTH1009DPZ8 1 410 Châssis 402692 1 420 Vis H M 10 x 45 CL 6.8 QSTH10045EZ6 1 430 Etiquette " outil rotatif " FDET400490 2 440 Aile amovible droite 401842 1 450 Etiquette " graissage " FDET409130 1 460 Etiquette " graissage " FDET409130 1 470 Vis H M 8 x 35 CL 8.8 QSTH08035EZ8 4 408020EZ8 1 490 Goupille élastique diamètre 6 x 25 E QSGM0625 1 500 Aile droite 401812 1				
250 Vis TRCC M 12 x 80		(A)		
260 Goupille diamètre 7 x 38 G00738 1				
270 Eperon 402341 1 280 Vis H M 8 x 25 CL 8.8 QSTH08025EZ8 2 290 Patte support platine 201321 1 300 Rondelle plate M8 QSMU08Z 6 310 Ecrou à embase crantée H M8 QSHE08Z 6 320 Vis H M 6 x 12 CL8.8 QSTH06012EZ8 6 330 Rondelle plate M 6 QSMU06Z 8 340 Aile gauche 401802 1 350 Ressort de roue avant FP401060 1 360 Support de roue avant FP401060 1 370 Ecrou bague nylon H M 10 QSHF10Z 2 380 Roue FSROU202 1 390 Vis H M 10 x 90/26 CL8.8 QSTH10090PZ8 1 400 Aile amovible gauche 401832 1 410 Châssis 402692 1 420 Vis H M 10 x 45 CL6.8 QSTH10045EZ6 1 430 Etiquette " outil rotatif" FDET400490 <				
280 Vis H M 8 x 25 CL 8.8 QSTH08025EZ8 2 290 Patte support platine 201321 1 300 Rondelle plate M8 QSMUO8Z 6 310 Ecrou à embase crantée H M8 QSHE08Z 6 320 Vis H M 6 x 12 CL8.8 QSTH06012EZ8 6 330 Rondelle plate M 6 QSMU06Z 8 340 Aile gauche 401802 1 350 Ressort de roue avant FP401060 1 360 Support de roue avant 401941 1 370 Ecrou bague nylon H M 10 QSHF10Z 2 380 Roue FSROU202 1 390 Vis H M 10 x 90/26 CL8.8 QSTH10090PZ8 1 400 Aile amovible gauche 401832 1 410 Châssis 402692 1 420 Vis H M 10 x 45 CL6.8 QSTH10045EZ6 1 430 Etiquette " outili rotatif " FDET400490 2 440 Aile amovible droite 401842<				
290 Patte support platine 201321 1 300 Rondelle plate M8 QSMUO8Z 6 310 Ecrou à embase crantée H M8 QSHE08Z 6 320 Vis H M 6 x 12 CL8.8 QSTH06012EZ8 6 330 Rondelle plate M 6 QSMU06Z 8 340 Aile gauche 401802 1 350 Ressort de roue avant FP401060 1 360 Support de roue avant 401941 1 370 Ecrou bague nylon H M 10 QSHF10Z 2 380 Roue FSROU202 1 390 Vis H M 10 x 90/26 CL8.8 QSTH10090PZ8 1 400 Aile amovible gauche 401832 1 410 Châssis 402692 1 420 Vis H M 10 x 45 CL6.8 QSTH10045EZ6 1 430 Etiquette " outil rotatif " FDET400490 2 440 Aile amovible droite 401842 1 450 Etiquette " graissage " FDET409130 </td <td></td> <td></td> <td></td> <td>-</td>				-
300 Rondelle plate M8 QSMUO8Z 6				
Strou à embase crantée H M8				
320 Vis H M 6 x 12 CL8.8 QSTH06012EZ8 6 330 Rondelle plate M 6 QSMU06Z 8 340 Aile gauche 401802 1 350 Ressort de roue avant FP401060 1 360 Support de roue avant 401941 1 370 Ecrou bague nylon H M 10 QSHF10Z 2 380 Roue FSROU202 1 390 Vis H M 10 x 90/26 CL8.8 QSTH10090PZ8 1 400 Aile amovible gauche 401832 1 410 Châssis 402692 1 420 Vis H M 10 x 45 CL6.8 QSTH10045EZ6 1 430 Etiquette " outil rotatif" FDET400490 2 440 Aile amovible droite 401842 1 450 Etiquette " graissage " FDET409130 1 460 Etiquette " instruction " FDET471060 1 470 Vis H M 8 x 35 CL8.8 QSTH08035EZ8 4 480 Vis H M 8 x 20 CL8.8 Q				
330 Rondelle plate M 6 QSMU06Z 8 340 Aile gauche 401802 1 350 Ressort de roue avant FP401060 1 360 Support de roue avant 401941 1 370 Ecrou bague nylon H M 10 QSHF10Z 2 380 Roue FSROU202 1 390 Vis H M 10 x 90/26 CL8.8 QSTH10090PZ8 1 400 Aile amovible gauche 401832 1 410 Châssis 402692 1 420 Vis H M 10 x 45 CL6.8 QSTH10045EZ6 1 430 Etiquette " outil rotatif " FDET400490 2 440 Aile amovible droite 401842 1 450 Etiquette " graissage " FDET409130 1 460 Etiquette " instruction " FDET471060 1 470 Vis H M 8 x 35 CL8.8 QSTH08035EZ8 4 480 Vis H M 8 x 20 CL8.8 QSTH08020EZ8 1 490 Goupille élastique diamètre 6 x 25 E QSGM0625 1 500 Aile droite 40		Ecrou à embase crantée H M8	QSHE08Z	
340 Aile gauche 401802 1 350 Ressort de roue avant FP401060 1 360 Support de roue avant 401941 1 370 Ecrou bague nylon H M 10 QSHF10Z 2 380 Roue FSROU202 1 390 Vis H M 10 x 90/26 CL8.8 QSTH10090PZ8 1 400 Aile amovible gauche 401832 1 410 Châssis 402692 1 420 Vis H M 10 x 45 CL6.8 QSTH10045EZ6 1 430 Etiquette " outil rotatif" FDET400490 2 440 Aile amovible droite 401842 1 450 Etiquette " graissage " FDET409130 1 460 Etiquette " instruction " FDET471060 1 470 Vis H M 8 x 35 CL8.8 QSTH08035EZ8 4 480 Vis H M 8 x 20 CL8.8 QSTH08020EZ8 1 490 Goupille élastique diamètre 6 x 25 E QSGM0625 1 500 Aile droite 401812 1	320	Vis H M 6 x 12 CL8.8	QSTH06012EZ8	6
350 Ressort de roue avant FP401060 1 360 Support de roue avant 401941 1 370 Ecrou bague nylon H M 10 QSHF10Z 2 380 Roue FSROU202 1 390 Vis H M 10 x 90/26 CL8.8 QSTH10090PZ8 1 400 Aile amovible gauche 401832 1 410 Châssis 402692 1 420 Vis H M 10 x 45 CL6.8 QSTH10045EZ6 1 430 Etiquette " outil rotatif " FDET400490 2 440 Aile amovible droite 401842 1 450 Etiquette " graissage " FDET409130 1 460 Etiquette " instruction " FDET471060 1 470 Vis H M 8 x 35 CL8.8 QSTH08035EZ8 4 480 Vis H M 8 x 20 CL8.8 QSTH08020EZ8 1 490 Goupille élastique diamètre 6 x 25 E QSGM0625 1 500 Aile droite 401812 1	330	Rondelle plate M 6	QSMU06Z	8
360 Support de roue avant 401941 1 370 Ecrou bague nylon H M 10 QSHF10Z 2 380 Roue FSROU202 1 390 Vis H M 10 x 90/26 CL8.8 QSTH10090PZ8 1 400 Aile amovible gauche 401832 1 410 Châssis 402692 1 420 Vis H M 10 x 45 CL6.8 QSTH10045EZ6 1 430 Etiquette " outil rotatif " FDET400490 2 440 Aile amovible droite 401842 1 450 Etiquette " graissage " FDET409130 1 460 Etiquette " instruction " FDET471060 1 470 Vis H M 8 x 35 CL8.8 QSTH08035EZ8 4 480 Vis H M 8 x 20 CL8.8 QSTH08020EZ8 1 490 Goupille élastique diamètre 6 x 25 E QSGM0625 1 500 Aile droite 401812 1	340	Aile gauche	401802	1
370 Ecrou bague nylon H M 10 QSHF10Z 2 380 Roue FSROU202 1 390 Vis H M 10 x 90/26 CL8.8 QSTH10090PZ8 1 400 Aile amovible gauche 401832 1 410 Châssis 402692 1 420 Vis H M 10 x 45 CL6.8 QSTH10045EZ6 1 430 Etiquette " outil rotatif " FDET400490 2 440 Aile amovible droite 401842 1 450 Etiquette " graissage " FDET409130 1 460 Etiquette " instruction " FDET471060 1 470 Vis H M 8 x 35 CL8.8 QSTH08035EZ8 4 480 Vis H M 8 x 20 CL8.8 QSTH08020EZ8 1 490 Goupille élastique diamètre 6 x 25 E QSGM0625 1 500 Aile droite 401812 1	350	Ressort de roue avant	FP401060	1
380 Roue FSROU202 1 390 Vis H M 10 x 90/26 CL8.8 QSTH10090PZ8 1 400 Aile amovible gauche 401832 1 410 Châssis 402692 1 420 Vis H M 10 x 45 CL6.8 QSTH10045EZ6 1 430 Etiquette " outil rotatif " FDET400490 2 440 Aile amovible droite 401842 1 450 Etiquette " graissage " FDET409130 1 460 Etiquette " instruction " FDET471060 1 470 Vis H M 8 x 35 CL8.8 QSTH08035EZ8 4 480 Vis H M 8 x 20 CL8.8 QSTH08020EZ8 1 490 Goupille élastique diamètre 6 x 25 E QSGM0625 1 500 Aile droite 401812 1	360	Support de roue avant	401941	1
390 Vis H M 10 x 90/26 CL8.8 QSTH10090PZ8 1 400 Aile amovible gauche 401832 1 410 Châssis 402692 1 420 Vis H M 10 x 45 CL6.8 QSTH10045EZ6 1 430 Etiquette " outil rotatif " FDET400490 2 440 Aile amovible droite 401842 1 450 Etiquette " graissage " FDET409130 1 460 Etiquette " instruction " FDET471060 1 470 Vis H M 8 x 35 CL8.8 QSTH08035EZ8 4 480 Vis H M 8 x 20 CL8.8 QSTH08020EZ8 1 490 Goupille élastique diamètre 6 x 25 E QSGM0625 1 500 Aile droite 401812 1	370	Ecrou bague nylon H M 10	QSHF10Z	2
400 Aile amovible gauche 401832 1 410 Châssis 402692 1 420 Vis H M 10 x 45 CL6.8 QSTH10045EZ6 1 430 Etiquette " outil rotatif " FDET400490 2 440 Aile amovible droite 401842 1 450 Etiquette " graissage " FDET409130 1 460 Etiquette " instruction " FDET471060 1 470 Vis H M 8 x 35 CL8.8 QSTH08035EZ8 4 480 Vis H M 8 x 20 CL8.8 QSTH08020EZ8 1 490 Goupille élastique diamètre 6 x 25 E QSGM0625 1 500 Aile droite 401812 1	380		FSROU202	1
400 Aile amovible gauche 401832 1 410 Châssis 402692 1 420 Vis H M 10 x 45 CL6.8 QSTH10045EZ6 1 430 Etiquette " outil rotatif " FDET400490 2 440 Aile amovible droite 401842 1 450 Etiquette " graissage " FDET409130 1 460 Etiquette " instruction " FDET471060 1 470 Vis H M 8 x 35 CL8.8 QSTH08035EZ8 4 480 Vis H M 8 x 20 CL8.8 QSTH08020EZ8 1 490 Goupille élastique diamètre 6 x 25 E QSGM0625 1 500 Aile droite 401812 1	390	Vis H M 10 x 90/26 CL8.8	QSTH10090PZ8	1
420 Vis H M 10 x 45 CL6.8 QSTH10045EZ6 1 430 Etiquette " outil rotatif " FDET400490 2 440 Aile amovible droite 401842 1 450 Etiquette " graissage " FDET409130 1 460 Etiquette " instruction " FDET471060 1 470 Vis H M 8 x 35 CL8.8 QSTH08035EZ8 4 480 Vis H M 8 x 20 CL8.8 QSTH08020EZ8 1 490 Goupille élastique diamètre 6 x 25 E QSGM0625 1 500 Aile droite 401812 1	400		401832	1
420 Vis H M 10 x 45 CL6.8 QSTH10045EZ6 1 430 Etiquette " outil rotatif " FDET400490 2 440 Aile amovible droite 401842 1 450 Etiquette " graissage " FDET409130 1 460 Etiquette " instruction " FDET471060 1 470 Vis H M 8 x 35 CL8.8 QSTH08035EZ8 4 480 Vis H M 8 x 20 CL8.8 QSTH08020EZ8 1 490 Goupille élastique diamètre 6 x 25 E QSGM0625 1 500 Aile droite 401812 1		<u> </u>		
430 Etiquette " outil rotatif " FDET400490 2 440 Aile amovible droite 401842 1 450 Etiquette " graissage " FDET409130 1 460 Etiquette " instruction " FDET471060 1 470 Vis H M 8 x 35 CL8.8 QSTH08035EZ8 4 480 Vis H M 8 x 20 CL8.8 QSTH08020EZ8 1 490 Goupille élastique diamètre 6 x 25 E QSGM0625 1 500 Aile droite 401812 1				
440 Aile amovible droite 401842 1 450 Etiquette " graissage " FDET409130 1 460 Etiquette " instruction " FDET471060 1 470 Vis H M 8 x 35 CL8.8 QSTH08035EZ8 4 480 Vis H M 8 x 20 CL8.8 QSTH08020EZ8 1 490 Goupille élastique diamètre 6 x 25 E QSGM0625 1 500 Aile droite 401812 1				
450 Etiquette " graissage " FDET409130 1 460 Etiquette " instruction " FDET471060 1 470 Vis H M 8 x 35 CL8.8 QSTH08035EZ8 4 480 Vis H M 8 x 20 CL8.8 QSTH08020EZ8 1 490 Goupille élastique diamètre 6 x 25 E QSGM0625 1 500 Aile droite 401812 1		,		1
460 Etiquette " instruction " FDET471060 1 470 Vis H M 8 x 35 CL8.8 QSTH08035EZ8 4 480 Vis H M 8 x 20 CL8.8 QSTH08020EZ8 1 490 Goupille élastique diamètre 6 x 25 E QSGM0625 1 500 Aile droite 401812 1				1
470 Vis H M 8 x 35 CL8.8 QSTH08035EZ8 4 480 Vis H M 8 x 20 CL8.8 QSTH08020EZ8 1 490 Goupille élastique diamètre 6 x 25 E QSGM0625 1 500 Aile droite 401812 1				
480 Vis H M 8 x 20 CL8.8 QSTH08020EZ8 1 490 Goupille élastique diamètre 6 x 25 E QSGM0625 1 500 Aile droite 401812 1				
490 Goupille élastique diamètre 6 x 25 E QSGM0625 1 500 Aile droite 401812 1				
500 Aile droite 401812 1				
	510	Câble d'accélérateur	201460	1

MOTOBINEUSE YB 50 IN VUE ECLATEE

SYSTEME D'ENTRAINEMENT

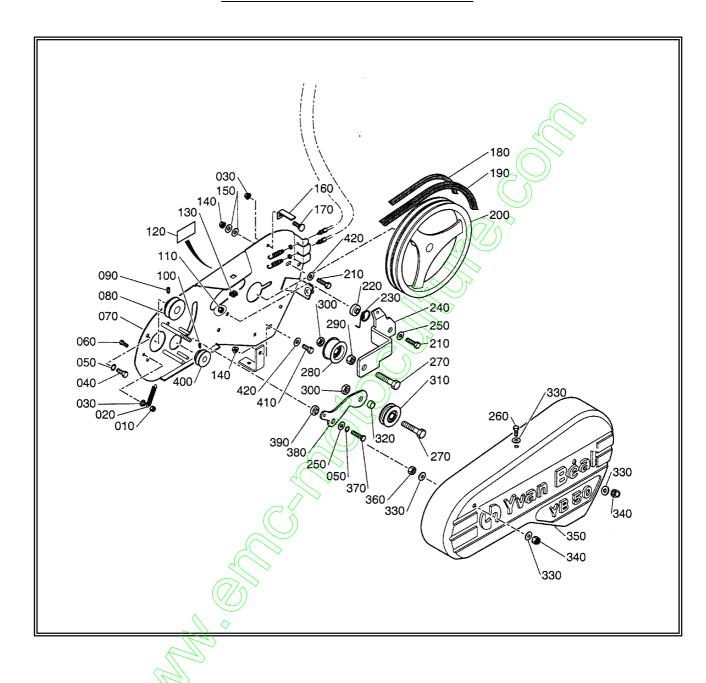


MOTOBINEUSE YB 50 IN LISTE DE PIECES DE RECHANGE

Repère	Désignation	Référence	Qté
010	Ecrou bague nylon H M6	QSHF06Z	1
020	Ressort traction verrou	FP451750	1
030	Ecrou embase crantée H M6	QSHE06Z	5
040	Vis HM 5/16x5/8 24 UNF CL8.8	QSUNF5/16x5/8	2
050	Rondelle éventail AZ08	QSMA08Z	3
060	Vis H M6x20 CL8.8	QSTH06020EZ8	1
070	Platine	402701	1
080	Poulie M.A.V.	FP400431	1
090	Vis ST HC M 8 x 10 bout pointu	QSS 708010BU	1
100	Vis ST HC M 6 x 10 bout cuvette	QSST06010BC	1
110	Ecrou frein H M8 NF25410	QSHS08Z8	1
120	Etiquette " INSTRUCTION "	FDET400480	1
130	Ecrou cage M8	QSHCR08	1
140	Ecrou embase crantée H M8	QSHE08Z	2
150	Rondelle plate M10	QSMU10Z	2
160	Butée de courroie	470882	4
170	Vis TRCC 06x16	QSTRCC0616	4
180	Courroie M.AR	FSCOUZ38	1
190	Courroie M.AV	FSCOUA44	1
200	Poulie double (())	402751	1
210	Vis H M8x25 CL6.8	QSTH08025EZ6	2
220	Entretoise M.AV	FP400511	1
230	Ressort M.AV	FP400220	1
240	Basculot M.AV	201471	1
250	Rondelle 20x8,2x2,4	FP400381	2
260	Vis H M08x16 CL8.8	QSTH08016EZ8	1
270	Vis H M12x30 CL6.8	QSTH12030EZ6	2
280	Galet plastique simple H20	FP402050	1
290	Ecrou H M12	QSHU12Z8	1
300	Ecrou bas H M12	QSHM12Z	2
310	Galet plastique D44x17	FP408020	1
320	Entretoise de galet	201341	1
330	Rondelle plate L08x22x1,5	QSML08Z	4
340	Ecrou bague nylon # M8	QSHF08Z	2
350	Capot de courroie	FP400960	1
360	Ecrou H M8	QSHU08Z8	1
370	Vis HM 5/16x1 24 UNF CL8.8	QSUNF5/16x1	1
380	Basculot MAR	201271	1
390	Entretoise M.AR	FP400521	1
400	Poulie MAR	FP201431	1
410	Vis H M8x20 CL8.8	QSTH08020EZ8	1
420	Rondelle plate M8	QSMU08Z	2

MOTOBINEUSE YB 50 IN VUE ECLATEE

FRAISE

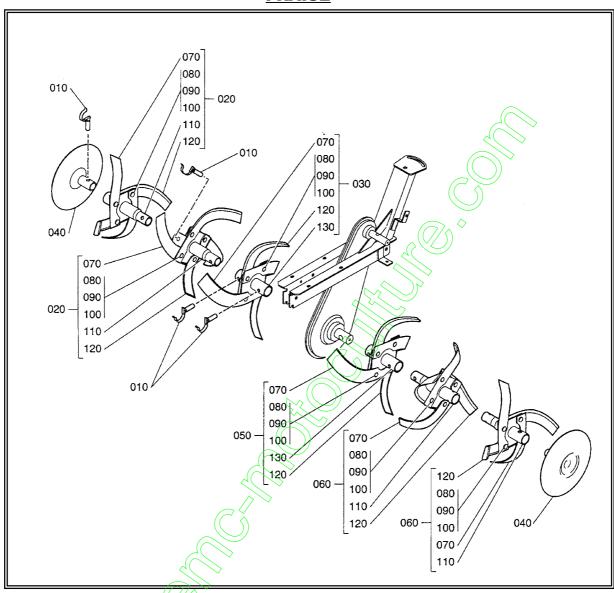

Repère	◇ Désignation	Référence	Qté
010	Goupille FM diametre 10 x 32	3GX032XX	8
020	Etoile additionnelle droite	2HL001BE	2
030	Etoile départ droite	432020	1
040	Disque	431321	2
050	Etoile départ gauche	432010	1
060	Etoile additionnelle gauche	2LL001BE	2
070	Couteau labour droit	3TL353DN	12
080	Vis H M8x20	QSTH08020EZ8	24
090	Rondelle éventail AZ8	QSMA08Z	24
100	Ecrou H M8	QSHU08Z	24
110	Moyeu additionnelle	2NL001NO	4
120	Couteau labour gauche	3TL353GN	12
130	Moyeu de départ	2ML001NO	2

CARACTERISTIQUES

Modèle	YB 50 - YB 50 IN	YB 50 HD
Largeur de travail maxi	82 cm (6 fraises)	82 cm (6 fraises)
Diamètre des fraises	320 mm	○ 320 mm
Moteur	Briggs & Stratton	HONDA
Puissance moteur	3680 W	3680 W
Transmission	1 vitesse avant 1 vitesse arrière	1 vitesse avant 1 vitesse arrière
Poids	51 kg	50 kg
Niveau de vibrations	Poignée droite : 16,6 m/s²) Poignée gauche : 9,8 m/s² (régime moteur 3400 tr/min)	moyenne : 2,46 m/s² (régime moteur : 3830 tr/min)
Pression acoustique aux oreilles de l'utilisateur	à droite : 86,5 dB (A) à gauche : 87,0 dB (A) (régime moteur: 3400 tr/min)	à droite : 83,3 dB (A) à gauche : 82,3 dB (A) (régime moteur : 3830 tr/min)







PIECES DETACHEES

Moteur

GC160QHEP

YB50HD YB55HD








SOMMAIRE

	4
CYLINDRE	c1
CARTER	Ç2
VILEBREQUIN	C5
PISTON / BIELLE	C6
ARBRE A CAMES / SOUPAPES	C7
LANCEUR	C8
VOLUTE DE VENTILATION	C9
CARBURATEUR	C10
FILTRE A AIR	C13
ECHAPPEMENT	C14
RESERVOIR	C15
VOLANT MOTEUR BOBINE ALLUMAGE	D1
COMMANDE	D4
AUTOCOLLANTS	D12

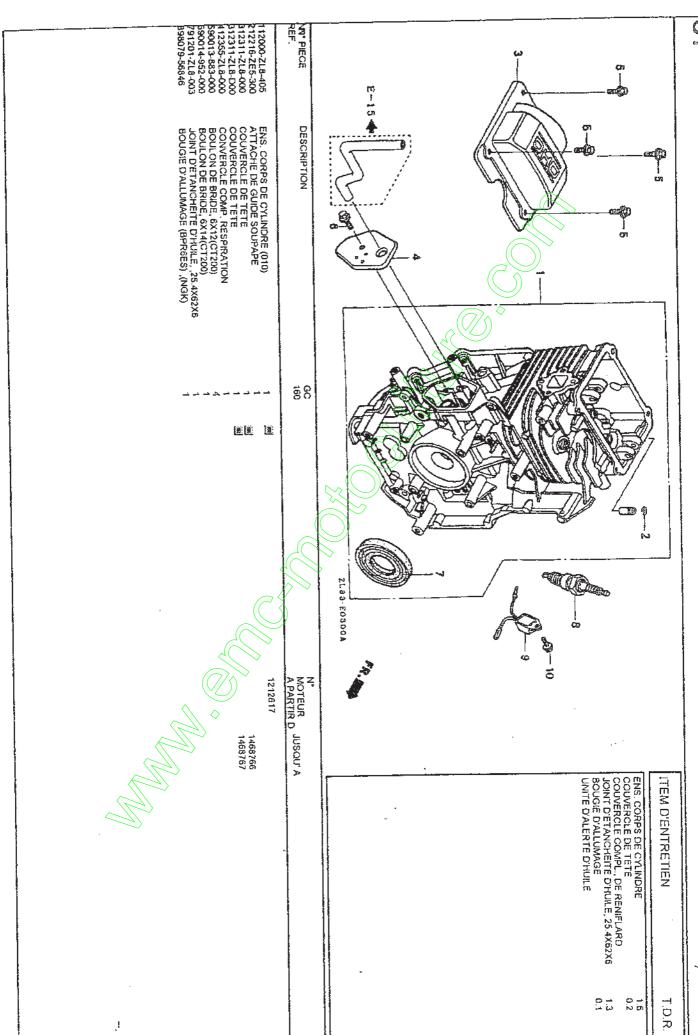

.

.

1


113010-ZL8-003 113010-ZL8-004 213101-ZL8-000 313111-ZE0-000 590001-ZE1-000 590551-ZE0-000	NN* PIECE REF.		() ()
JEU DE BAGUE DE PISTON (RIKEN) JEU DE BAGUE DE PISTON (TEIROKU) PISTON AXE, PISTON ENS, BIELLE BOULON DE BIELLE ATTACHE D'AXE DE PISTON, 13MM	DESCRIPTION		
22-1	GC 160		
		55 - Common State of the C	PISTON/BIELLE
	MOTEUR JUSQU' A A PARTIR D		
	A	JEU DE BAGUE DE PISTON PISTON AXE PISTON ENS. BIELLE	And the second s
į.		T.D.R 1.0	,

PISTON/BIELLE

,1


128400-ZLB-013ZA 128400-ZLB-013ZB 228461-ZLB-003 328462-ZLB-003	7. PIECE		83
STARTER ASSY'NH1* ENS. LANCEUR "R8",ROUGE BRILLANT POIGNEE DE DEMARREUR CORDON DE LANCEUR	DESCRIPTION	-ω- ν-	
)	DEMARREUR A ENROULEUR
1210408 2210408	NOTELIA MOTELIA		ENROULEUR
		ITEM D'ENTRETIEN ENS. LANCEUR CORDON DE LANCEUR	
		1.D.R. 0.1 0.3	1


119611-ZL8-000ZA 119611-ZL8-000ZB 290043-ZL8-000 390303-MR1-000	WY PIECE REF.		09
COUVERCLE DE VENTILATEUR 'NH1',NOIR COUVERCLE DE VENTILATEUR 'R8',ROUGE BRILLANT GOUJON NUT,FLANGE,6MM	DESCRIPTION		
ບ ບ <u>(ສ້</u>)	GC 160		GAINE DE VENT
	MOTEUR JUSQU' A		DE VENTILATEUR
	Remarks and the second	COUVERCLE DE VENTILATEUR GOUJON	
, I		T.D.R.	

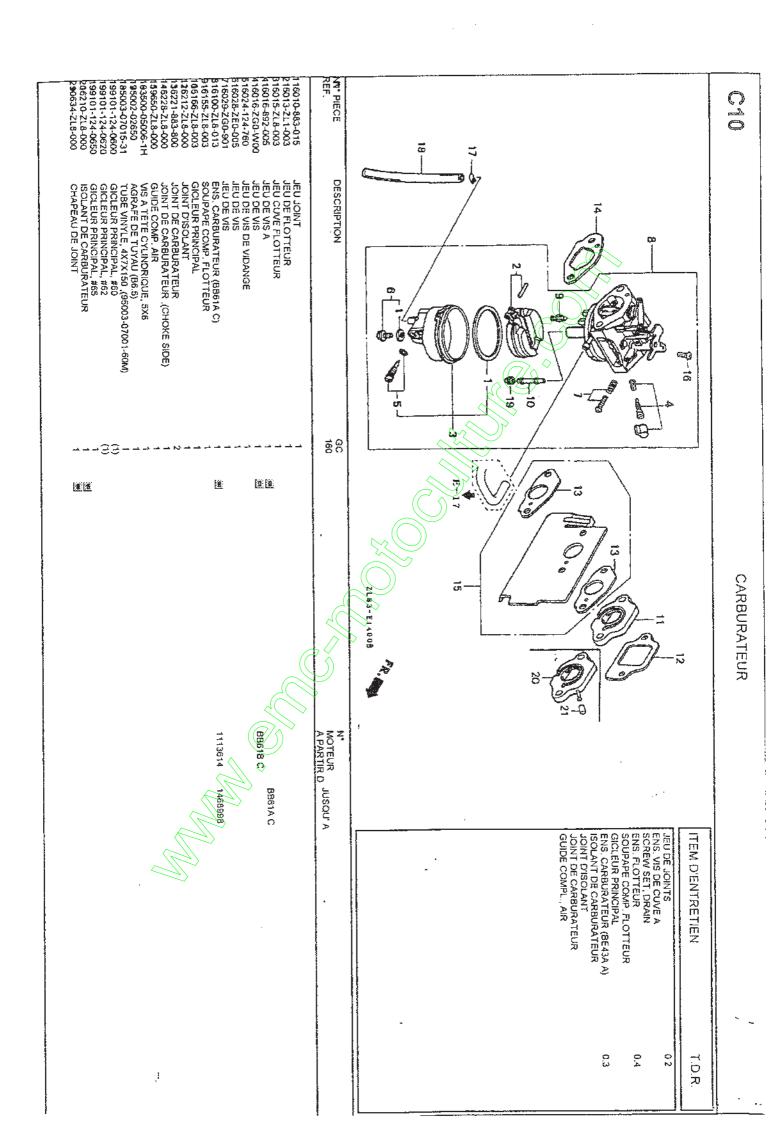

115721-ZL8-000 217211-ZL8-000 317220-ZL8-000 417228-ZL8-000 597003-ZL8-000 590003-ZL8-000	NV PIECE REF.		C13
TUYAU DE RESPIRATION ELEMENT DE FILTRE A AIR BOITIER COMP. FILTRE A AIR JOINT DE FILTRE A AIR COUVERCLE DE FILTRE A AIR BOULON DE BRIDE, 6X112(CT200)	DESCRIPTION		
22 11 1	GC 160		
		BREATHER COVER	FILTRE A AIR
	N° MOTEUR JUSQU'A A PARTIR D		A A
	J' A .	TUYAU DE RESPIRATION ELEMENT PAPIER DU FILTRE A AIR BOITIER COMP. FILTRE A AIR JOINT DE FILTRE A AIR	The state of the s
,1		T.D.R. 0.1 0.2	*

118310-ZL8-010 218321-ZL8-000 318346-ZL8-000 418430-ZL8-000 519664-ZL8-000 59004-ZL8-000 990013-883-000 918381-ZL8-305	NN PIECE REF.	B	0 2 4
TUYAU D'ECHAPPEMENT COMP. PROTECTION DE POT D'ECHAPPEMENT BOUCHON DE POT D'ECHAPPEMENT DEFLECTEUR COMP. DE SILENCIEUX BOULCHER, SILENCIEUX BOULON DE BRIDE, 6X79(CT200) BOULON DE BRIDE, 6X12(CT200) VIS AUTO-TARAUDEUSE, 4X6 JOINT DE POT D'ECHAPPEMENT	DESCRIPTION		
(1) 60 0 2 2 1 2 1 2 1 2 1 2 1 2 1 2 1 2 1 2	GC 160		
	N° MOTEUR D JUSQU' A A PARTIR D JUSQU' A	224.63-E10000A	SILENCIEUX
	A	TUYAU D'ENTRETIEN TUYAU D'ECHAPPEMENT COMP DEFLECTOR COMP., MUFFLER JOINT DE POT D'ECHAPPEMENT PROTECTION DE POT D'ECHAPPEMENT	,
į.		T.D.R. 0.2	

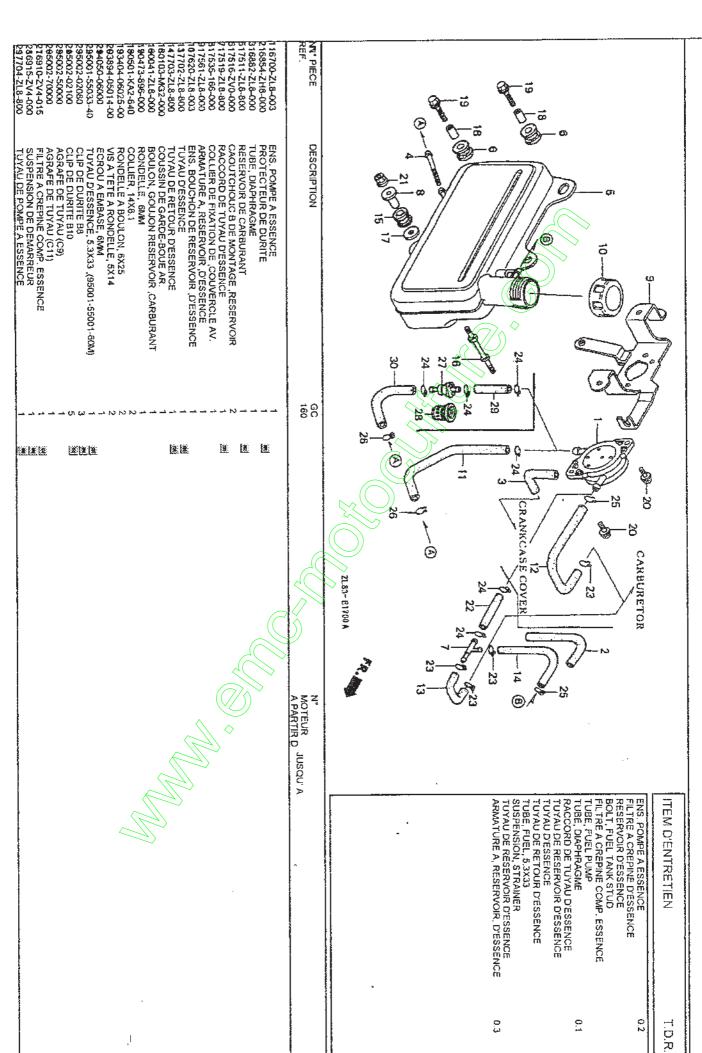

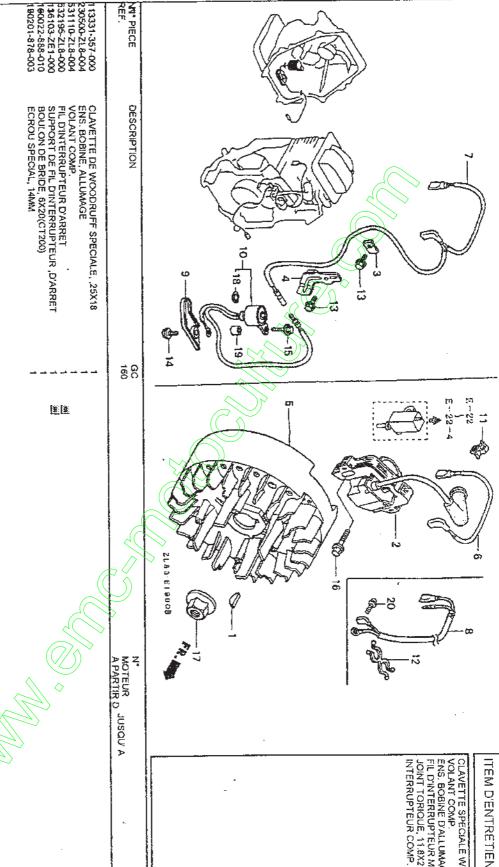


CLAVETTE SPECIALE WOODRUFF, 25X18
VOLANT COMP.
ENS. BOBINE D'ALLUMAGE
FIL D'INTERRUPTEUR MOTEUR
JOINT TORIQUE, 11.8X2.4
INTERRUPTEUR COMP. NIVEAU D'HUILE 0.3

0.2

T.D.R.

0.5

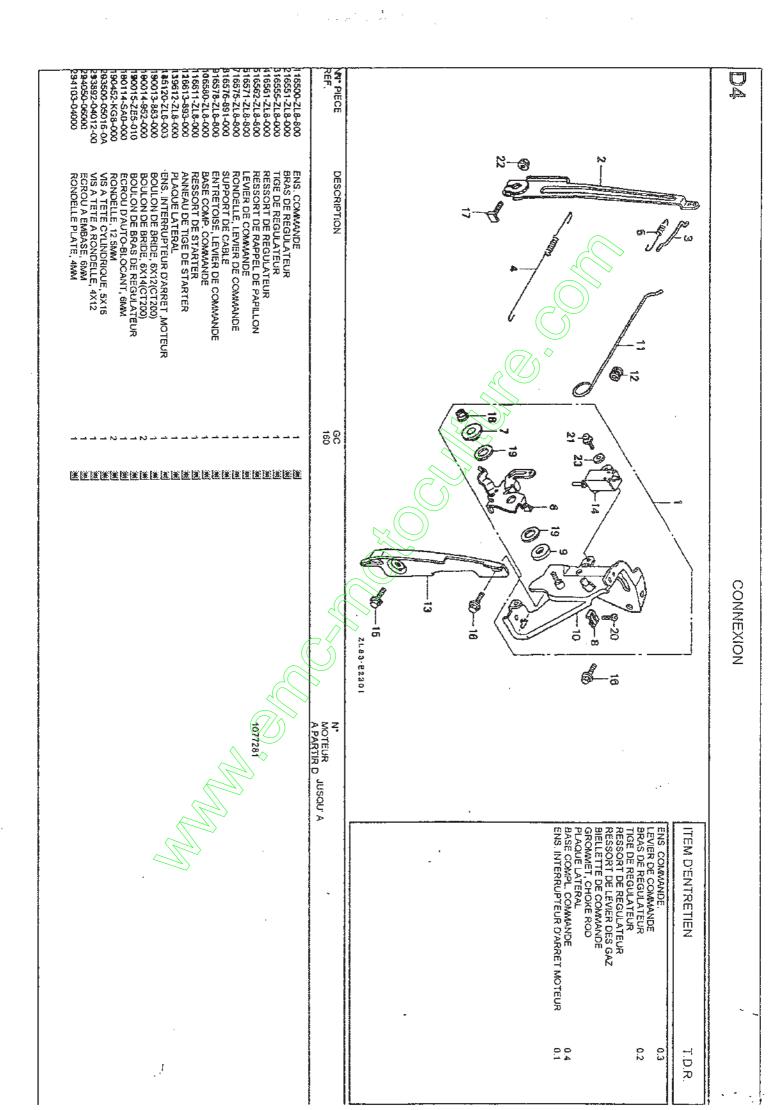

		N° PIECE REF. 187101-ZL8-000 387528-ZL8-000	ω- <i>[</i> ::]	0 2
N.		DESCRIPTION MARQUE D'EMBLEME (3C160 5.0) MARQUE DE STARTER	D-23	-
		160 180 1		
			21.83.6812	ETIQUETTE
		MOTEUR JUSQU' A		
			ITEM D'ENTRETIEN	
	e e e e e e e e e e e e e e e e e e e		T.D.R.	, ,





PIECES DETACHEES

Moteur

INTEK 2002

YB50IN



Yvan Béal - 21, ov. de l'Agriculture - B.P 16 Z.I. du Brézet - 63014 Clermont-Ferrond Cedex 2 Tél: 04 73 91 93 51 - Télécopie : 04 73 90 23 11 www.yvanbeal.fr - E-mail : info@yvanbeal.fr

03-000308-050224



YB50 _ INTEK _ 2002

Illustrated Parts List Model Series

126400

TYPE NUMBERS 0023 through 0233.

For Use On Engines Built Before Date Code -01110900


TABLE OF CONTENTS

Air Cleaner	6
Blower Housing/Shrouds	7
Cams	2
Carburetor	4
Controls	3
Crankcase Cover/Sump	2
Crankshaft	2
Cylinder	2
Electric Starter	8
Flywheel	7
Fuel Tank	
Gear Reducer	
Governor Spring	
Head	
gnition	5
Kits/Gaskets – Carburetor	9
Kits/Gaskets – Engine	9
Muffler	6
5 ii	8
Piston Group	2
Rewind	7
	2

PRINTED IN U.S.A.

BRIGGS & STRATTON


COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

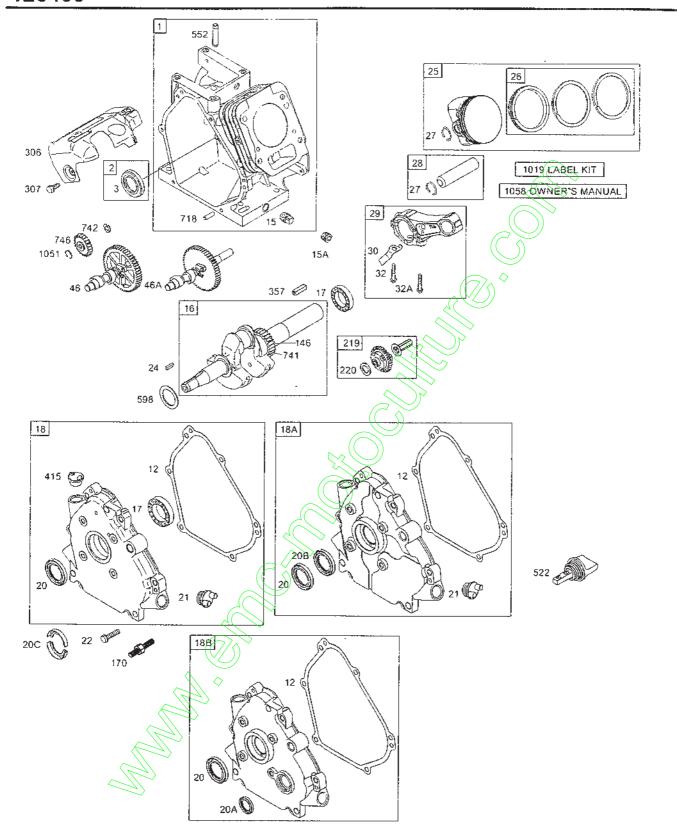

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

6817–2 Assemblies include all parts shown in frames.


4C–10/2001

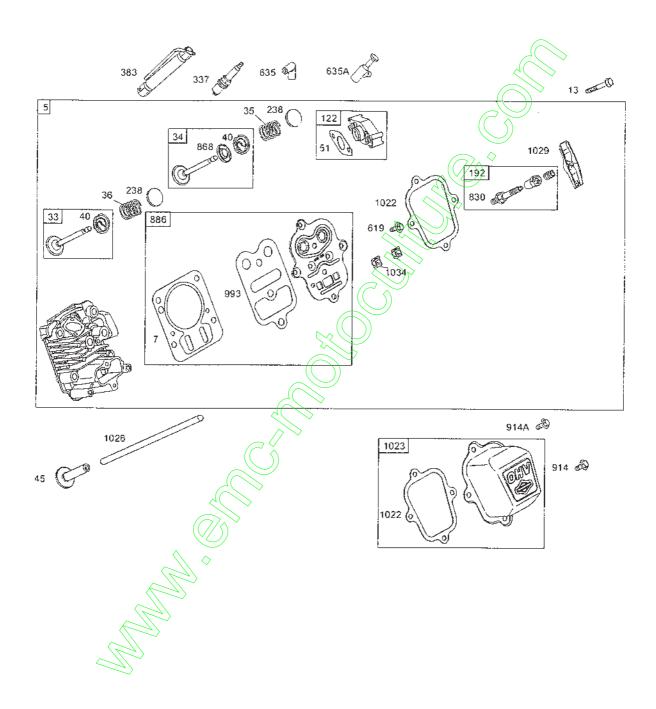

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

6817–3 Assemblies include all parts shown in frames.


4C–10/2001

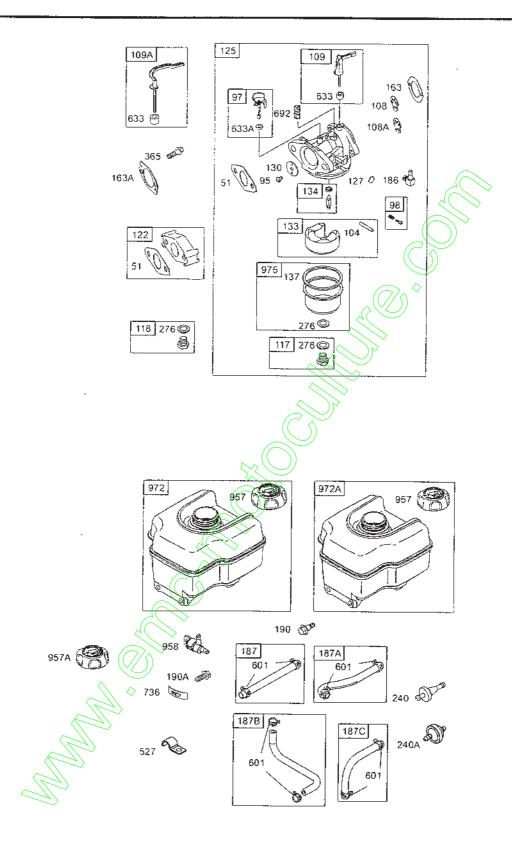

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

6817–4 Assemblies include all parts shown in frames.


4C–10/2001

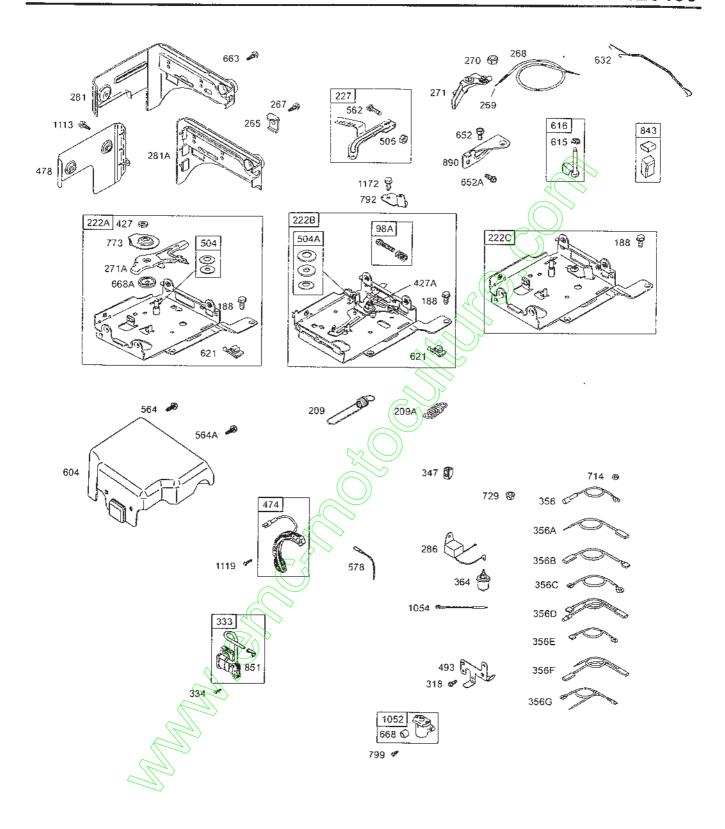

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.


6817–5 Assemblies include all parts shown in frames.

4C–10/2001

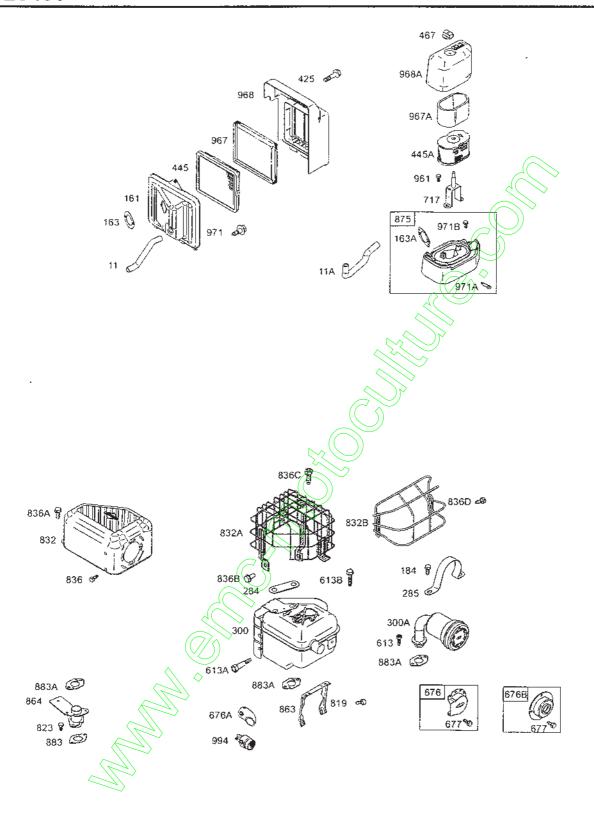

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.


6817–6 Assemblies include all parts shown in frames. 4C-10/2001

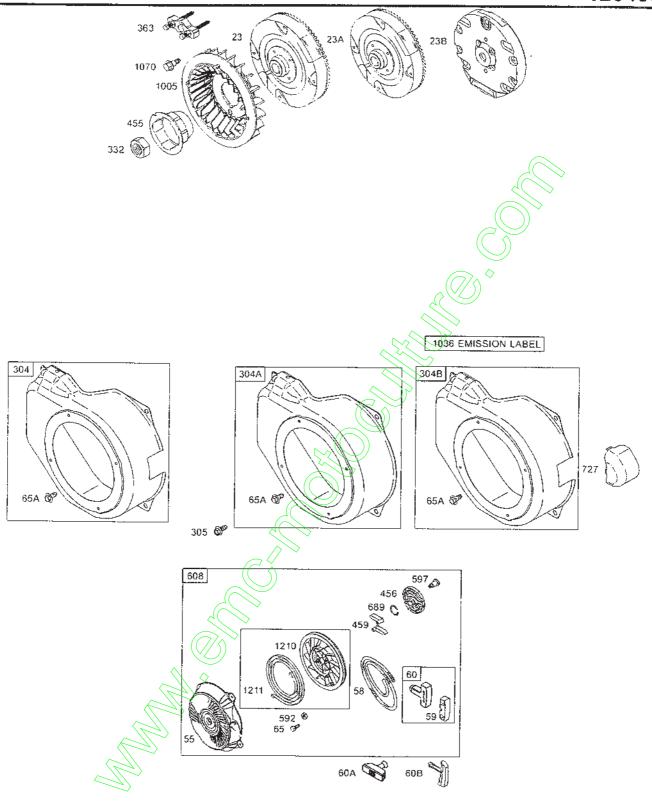


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

6817–7 Assemblies include all parts shown in frames.

4C-10/2001

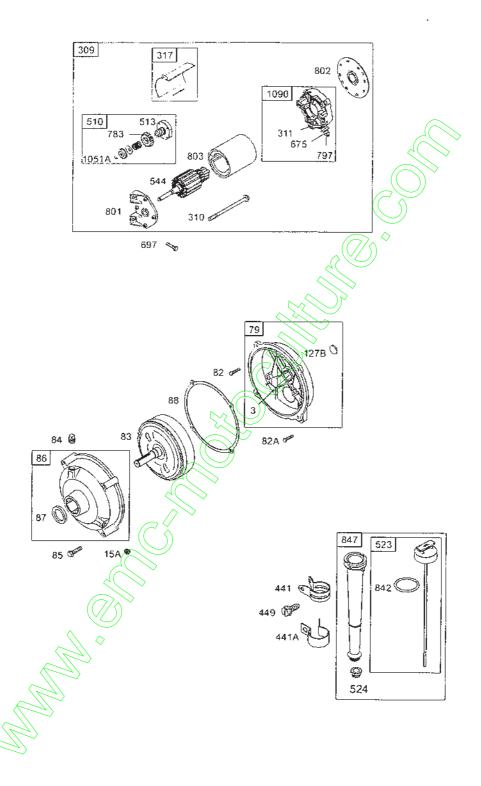

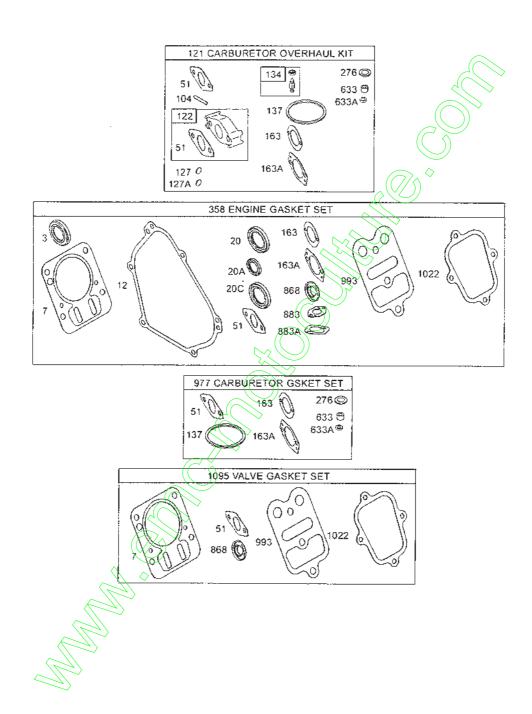

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	693811	Cylinder Assembly Note	18A	694466	Cover-Crankcase Note	26	499631	Ring Set (Standard)
		694470 Cylinder			693204 Cover-			Note
		Assembly			Crankcase			692785 Ring Set
		Used on Type No(s).			Used on Type No(s).	1		(.010" Oversize)
		0112, 0146, 0219.			0023, 0038, 0043,	-		692786 Ring Set
3	*299819	Seal-Oil			0060, 0105, 0112,			(.020" Oversize)
		(Magneto Side)	ļ		0113, 0115, 0125,			692787 Ring Set
5		Head-Cylinder			0130, 0146, 0158,	1		(.030" Oversize)
7 +		Gasket-Cylinder Head			0163, 0173, 0174,	27	691866	Lock-Piston Pin
11	692600	Tube-Breather			0177, 0186, 0188,	28	499423	Pin-Piston
		(Flat Panel Air			0193, 0197, 0207,	29	690124	Rod-Connecting
		Cleaner)			0211, 0212, 0219,	30 (692562	Dipper-Connecting
11A	693647	Tube-Breather			0220, 0227, 0230,			Rod
		(High Mount Air			0231.	35	691664	Screw
		Cleaner)			695290 Cover-			(Connecting Rod)
12		Gasket-Crankcase	}		Crankcase	32A	695759	Screw
13	691137				Used on Type No(s).	$\mathbf{I}((1/1))$		(Connecting Rod)
4.5	004000	(Cylinder Head)	405	00.1000	0049.			(Used After Code D
15	697686	Plug-Oil Drain	18B	694833	Cover-Crankcase			00042200).
150	004000	(Square Head)	İ		Used on Type No(s).	33		Valve-Exhaust
15A	091082	Plug-Oil Drain			0070, 0165, 0172,	34		Valve-Intake
40	C00007	(Flush)			0199, 0229, 0232.	35	691304	Spring-Valve
16	693887		20	★692550				(Intake)
		Note			(PTO Side)	36	691304	Spring-Valve
		693403 Crankshaft	20A	* 691952	\ \ //			(Exhaust)
		Used on Type No(s).	[(PTO Side)	40		Retainer-Valve
		0036, 0064, 0215,	200		(Auxiliary Drive)	45	690977	Tappet-Valve
		0220, 0233.	20B	★6 94171		46		Camshaft
		693594 Crankshaft	24	204.050	(PTO Side)	46A	695285	Camshaft
		Used on Type No(s). 0035.	21 22		Cap-Oil Fill			Note —
		693595 Crankshaft	22	692551				694831 Camshaft
					(Crankcase			Used on Type No(s
		Used on Type No(s). 0161.	22	501000	Cover/Sump) ⊱lywheel			0070, 0165, 0172,
			23	094902		P* 4		0199, 0232.
		693596 Crankshaft	224	606000	(Electric Start)	51**	•Ø692555	Gasket-Intake
		Used on Type No(s). 0158, 0218.	23A	695298	Flywheel (Flantsia Start)		604400	(2 Required)
		694439 Crankshaft		4	(Electric Start)	55	691422	Housing-Rewind
		Used on Type No(s).	23B	692987	(Less Magnets) Flywheel	58	602206	Starter
		0049, 0113.	230	032301	(Used With Rewind	20	092283	Rope-Starter
		695237 Crankshaft	\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\		Starter Only)			(Cut to Required
		Used on Type No(s).	24	222698	Key-Flywheel	59	805057	Length)
		0038, 0115, 0174,	25		Piston Assembly	59 60		Insert-Grip
		0177.	$\langle \gamma \rangle^{2}$	0300E1	(Standard)	ου	/ 1020/	Grip-Starter Rope (Two Piece Handle)
		695763 Crankshaft	リ		Note	60A	603380	(Two Piece Handle) Grip–Starter Rope
		Used on Type No(s).			694167 Piston	60B		Grip-Starter Rope Grip-Starter Rope
		0060, 0112, 0130			Assembly	65	690837	
		0163, 0191, 0193.			(.010" Oversize)	95		
		0207, 0212, 0227.			694168 Piston	65A	690837	(Rewind Starter)
17	692517	Bearing-Ball			Assembly	937		(Rewind Starter)
18		Cover Crankcase			(.020" Oversize)			(included and settle)
_		Used on Type No(s).			694169 Piston			
		0035, 0036, 0064,			Assembly			
		0215, 9233.			(.030" Oversize)			

<sup>Included in Engine Gasket Set-Ref. No.358.
Included in Carburetor Overhaul Kit-Ref. No. 121.</sup>

Included in Carburetor Gasket Set–Ref. No. 977.
 Ø Included in Valve Gasket Set–Ref. No 1095.

REF PART NO DESCRIPTION REF PART NO. DESCRIPTION									120400
Section Sect			DESCRIPTION			DESCRIPTION			DESCRIPTION
Section Sect	79	694511	Case-Gear Reduction	125	696981	Carburetor	170	691120	Stud
Samp	82							201120	
S2A 691122 Screw Gear Reduction Case (1 1/2" tong) (2 tong) (3 tong) (3 tong) (3 tong) (4 t			(Gear Reduction Case)				İ		•
82A 691122 Screw Gear Reduction Case (Gear Reduction Case) (177 697028 Carburetor Gear Reduction) 83 690374 Shaft-Analisary Drive Gear Cover to Gear Reduction (Case) 692515 Screw Gear Reduction (Case) 692587 Screw 69160 Gasket-Gear Reduction (Case) 69160 Gasket-Gear Reduction (Case) 69160 Gasket-Gear Reduction (Cover Gear Reduction (Cover Gear Reduction) 69160 Gasket-Gear Reduction (Cover Gear Reduction (Cover Gear Reduction) 69160 Gasket-Gear Reduction (Cover Gear Reduction (Cover Gear Reduction) 69160 Gasket-Gear Reduction (Cover Gear Reduction) 69160 Gasket-Gear Reduction (Cover Gear Reduction (Cover Gear Reduction) 69160 Gasket-Gear Reduction (Cover Gear Reduction) 69170 Gasket-Gear Reduction (Cover Gear Reduction) 69170						Used on Type No(s).	186	692317	
Gear Reduction Case 11.72	82A	691122					1		
83 690374 Shaft-Ausillary Drive 84 691121 Plug-Bereather (Gear Reduction Case) 85 692551 Screw Gear Cover to Gear Reduction Case) 86 690608 Cover-Gear 87 691582 Seal-Cear Reduction Reduction Cover Reductio			(Gear Reduction Case)]					
33 699374 Shaff-Auxillary Drive Gear Reduction Steel Cear	1					697028 Carburetor			
691121 Plug-Breather (Gear Reduction) 136	83	690374	Shaft-Auxillary Drive			Used on Type No(s).	187A	692601	
85 69255 Screw Gear Reduction Screw Gear Cover to Gear Gear Gear Gear Gear Gear Gear	84	691121				0158, 0161, 0163,]		
127 693468 Plug-Welch 1878 63340* Line-Fuel 69340* Mote 691739 Plug-Welch 69340* Mote 691739 Plug-Welch 69340* Line-Fuel (Molded)	İ								
Sear Cover to Gear Reduction Cases Reduction Cases Sear Cover—Gear Reduction Cases Sear Cover—Trottle Used on Type Nots Sear Cases Cover—Gear Sear Cover—Gear Sear Cover—Gear Sear Cover—Gear Sear Cases	85	692551		127	● 694468	=		4()	
86 690608 Cover—Gear 87 691932 Seal-Cear Reduction 88 691600 Gaskel-Gear Reduction 89 691600 Gaskel-Gear Reduction 80 691600 Gaskel-Gear Reduction 80 691600 Gaskel-Gear Reduction 81 691600 Gaskel-Gear Reduction 82 691600 Gaskel-Gear Reduction 83 691600 Gaskel-Gear Reduction 84 691600 Gaskel-Gear Reduction 85 691600 Gaskel-Gear Reduction 86 691600 Gaskel-Gear Reduction 86 691600 Gaskel-Gear Reduction 87 691600 Gaskel-Gear Reduction 88 691600 Gaskel-Gear Reduction 89 691600 Gaskel-Gear Reduction 80 691600 Gaskel-Gear Reduction 80 691600 Gaskel-Gear Reduction 80 691600 Gaskel-Gear Reduction 80 691600 Gaskel-Gear Reduction 80 691600 Gaskel-Gear Reduction 80 691600 Gaskel-Gear Reduction 80 691600 Gaskel-Gear Reduction 80 691600 Gaskel-Gear Reduction 80 691600 Gaskel-Gear Reduction 80 691600 Gaskel-Gear Reduction 80 691600 Gaskel-Gear Reduction 80 691600 Gaskel-Gear Reduction 80 691600 Gaskel-Gear Reduction 80 69181 Valve-Throttle 96 691203 Vaive-Throttle 96 691203 Vaive-Great Reduction Case) 96 691203 Vaive-Throttle 96 691203 Vaive-Th	j			1			187B	693401	
87 691682 Seal-Gear Reduction 88 691600 Gasket-Gear Reduction Case) 95 691636 Screw ReductionCover 96 690024 Shaft-Throttle 97 690024 Shaft-Throttle 98 393185 Kit-Idle Speed (Carburetor) 108 692567 Valve-Choke 109 690023 Shaft-Choke 109 690023 Shaft-Choke 109 690023 Shaft-Choke 109 693028 Shaft-Choke 109 693028 Shaft-Choke 109 693028 Shaft-Choke 109 693029 Shaft-Choke 109 693029 Shaft-Choke 109 693029 Shaft-Choke 109 693029 Shaft-Choke 109 693020 Shaft-Choke 100 693020 Shaft-Choke 100 693020 Shaft-Choke 100 693020 Shaft-Choke 100 693020 Shaft-Choke 100 693020 Shaft-Choke 100 693020 Shaft-Choke 100 693020 Shaft-Choke 100 693020 Shaft-Choke 100 693020 Shaft-Choke 100 693020 Shaft-Choke 100 693020 Shaft-Choke 100 693020 Shaft-Choke 100 693020 Shaft-Choke 100 693020 Shaft-Choke 100 693020 Shaft-Choke 100 693020 Shaft-Choke 100 693020 Shaft-Choke 100 693020 Shaft-Choke 100 693020 Shaft-Choke 100 69302 Shaft-C				Ī			(((Molded)
88 691600 Gasket-Gear ReductionCover 95 691636 Screw (Fuel Tank) 95 691636 Screw (Truntite Valve) 97 690024 Shaft-Throttle 98 398185 Kit-Idle Speed (Carburetor) 104 •691242 Pin-Float Hinge 108 692567 Valve-Choke 109 690023 Shaft-Choke 109 690023 Shaft-Choke 109 690023 Shaft-Choke 109 690024 Shaft-Choke 109 690024 Shaft-Choke 109 690025 Shaft-Choke 109 690026 Shaft-Choke 109 690027 Shaft-Choke 109 690027 Shaft-Choke 109 690028 Shaft-Choke 109 690028 Shaft-Choke 109 690029 Shaft-Choke 109 690029 Shaft-Choke 109 690029 Shaft-Choke 109 690029 Shaft-Choke 109 690020 Shaft-Choke 109 690020 Shaft-Choke 109 690020 Shaft-Choke 109 690020 Shaft-Choke 109 690020 Shaft-Choke 109 690020 Shaft-Choke 109 690020 Shaft-Choke 109 690020 Shaft-Choke 109 690020 Shaft-Choke 109 690020 Shaft-Choke 109 690020 Shaft-Choke 109 690020 Shaft-Choke 109 690020 Shaft-Choke 109 690020 Shaft-Choke 109 690020 Shaft-Choke 109 692127 Sporew (Fuel Tank) 112 end of Type No(s) 1015 (1016 Sporew of Shaft-Choke) 109 692127 Sporew (Fuel Tank) 112 end of Type No(s) 103 80187 (Flat Panel Air Cleaner) 114 end of Type No(s) 115 (1018 Sporew of Sporew of Shaft-Choke) 116 692579 Base-Air Cleaner 117 (Flat Panel Air Cleaner) 118 end of Type No(s) 119 692127 Sporew (Fuel Tank) 110 69208 Spore (Flat Panel Air Cleaner 110 69208 Spore (Flat Panel Air Cleaner) 110 69208 Spore (Flat Panel Air Cleaner) 110 69208 Spore (Flat Panel Air Cleaner) 110 69208 Spore (Flat Panel A				127B	691585		188	690877	
130 691181 Valve—Throttle 190 692127 Screw 190 69227 Screw	1				- 4))	(Control Bracket)
Serew (Throttle Valve) Serew (Throttle Valve) Serew (Throttle Valve) Serew (Carburetor) Serew (Carbureto	88	691600		130	691181		190	692127	
Serious Screw (Throttle Valve)	٠	604686					I // // ^ :		(Fuel Tank)
97 690024 Shaft—Throttle 98 398185 Kit—Idle Speed (Carburetor) 104 ●691242 Pin—Float Hinge 108 692567 Valve—Choke 109 690023 Shaft—Choke 109 690023 Shaft—Choke Used on Type No(s). 0158, 0161, 0163, 0158, 0161, 0163, 0186. 177 498978 Jet—Main (Standard) ————————————————————————————————————	95	. 691636		1			192	694543	
98 398185 Kit-Infotile 998 398185 Kit-Infotile 104 •691242 Pin-Float Hinge 108 692567 Valve-Choke 1199 693023 Shaft-Choke 1199 693023 Shaft-Choke 1199 693023 Shaft-Choke 1199 693628 Shaft-Choke 1199 115 117 498978 Jet-Main (Standard) 117 498978 Jet-Main (Standard) 118 497466 Jet-Main (High Altitude) 118 497466 Jet-Main (High Altitude) 119	0.7	000004	,				209		
Carburetor Car									
104 ◆691242 Pin-Float Hinge 108 692567 Valve-Choke 109 690023 Shaft-Choke 109A 693628 Shaft-Choke Used on Type No(s). 0158, 0161, 0163, 0186. 117 498978 Jet-Main (Standard) Used on Type No(s). 0038, 0115, 0174, 0177. 118 497466 Jet-Main (High Altitude) Used on Type No(s). 0038, 0115, 0174, 0177. 121 695157 Kit-Carburetor Overhaul 122 ◆693749 Spacer-Carburetor Used on Type No(s). 0038, 0115, 0174, 0177. 121 695158 Spacer-Carburetor Used on Type No(s). 0038, 0115, 0174, 0177. 121 695157 Kit-Carburetor Overhaul Used on Type No(s). 0038, 0115, 0174, 0177. 0177. 121 695158 Spacer-Carburetor Used on Type No(s). 0130, 0146, 0172, 0173, 0199, 0220. 163A ★◆693458 Gasket-Air Cleaner (Flat Panel Air Cleaner) Used on Type No(s). 0130, 0146, 0172, 0173, 0199, 0220. 163A ★◆693458 Gasket-Air Cleaner (Fligh Mount Air Cleaner) Used on Type No(s). 0130, 0146, 0172, 0173, 0199, 0220. 163A ★◆693458 Gasket-Air Cleaner (High Mount Air Cleaner) Cleaner (High Mount Air	30	280102		422	200407		\ \`		Note
108 692567 Valve-Choke 109 690023 Shaft-Choke 109 690023 Shaft-Choke 109 690023 Shaft-Choke Used on Type No(s). 0158, 0161, 0163, 0186. 117 498978 Jet-Main (Standard) Used on Type No(s). 0038, 0115, 0174, 0177. 118 497466 Jet-Main (High Altitude) Used on Type No(s). 0038, 0115, 0174, 0177. 121 695157 Kit-Carburetor Cverhaul 122 ●693749 Spacer-Carburetor Used on Type No(s). 0231, 0036, 0037, 0038, 0038, 0008, 0008, 00097, 0112, 0115, 0163, 0191, 0212. 163 ★★693458 Gasket-Air Cleaner (Flat Panel Air Cleaner) Used on Type No(s). 0130, 0146, 0172, 0173, 0199, 0220. 163 ★★693458 Gasket-Air Cleaner (Flat Panel Air Cleaner) Used on Type No(s). 0130, 0146, 0172, 0173, 0199, 0220. 163 ★★693458 Gasket-Air Cleaner (Flat Panel Air Cleaner) Used on Type No(s). 0130, 0146, 0172, 0173, 0199, 0220. 163 ★★693458 Gasket-Air Cleaner (Flat Panel Air Cleaner) Used on Type No(s). 0130, 0146, 0172, 0173, 0199, 0220. 163 ★★693458 Gasket-Air Cleaner (High Mount Air Cleaner) Used on Type No(s). 0130, 0146, 0172, 0173, 0199, 0220. 163 ★★693458 Gasket-Air Cleaner (High Mount Air Cleaner) Used on Type No(s). 0130, 0146, 0172, 0173, 0199, 0220. 163 ★★693458 Gasket-Air Cleaner (High Mount Air Cleaner) Note 095286 Spacer Carburetor Used on Type No(s). 0130, 0146, 0172, 0173, 0199, 0220. 163 ★★693458 Gasket-Air Cleaner (High Mount Air Cleaner) Note 093379 Gasket-Air Cleaner (High Mount Air	104	e601343		1			<i>(</i>		693206 Spring-
109 690023 Shaft-Choke 109A 693628 Shaft-Choke Used on Type No(s). 0158, 0161, 0163, 0186. 117 498978 Jet-Main (Standard) Used on Type No(s). 0038, 0115, 0174, 0177. 118 497466 Jet-Main (High Altitude) ————————————————————————————————————							ĺ		Governor
109A 693628 Shaft-Choke Used on Type No(s). 0158, 0161, 0163, 0186. 117 498978 Jet-Main (Standard) ————————————————————————————————————	1			1			ļ		(Yellow)
Used on Type No(s). 0158, 0161, 0163, 0186. 117	l .			1					Used on Type No(s).
0158, 0161, 0163, 0186. 0186. 117	1037	033028		101	092379	~ \ \ / /			
0186. 117 498978 Jet–Main (Standard) ———————————————————————————————————									0060, 0070, 0112,
117 498978 Jet-Main (Standard)						•	Ì		0115, 0163, 0191,
Standard Cleaner Flat Panel Air Cleaner Governor Gear Cleaner Cleaner Governor Gear Cleaner Cleane	117	498978							
Note 498976 Jet-Main (Standard) Used on Type No(s). Used				ļ			209A	691278	Spring-Governor
498976 Jet–Main (Standard) Used on Type No(s). 038, 0115, 0174, 0177. 118 497466 Jet–Main (High Altitude) Used on Type No(s). 038, 0115, 0174, 0177. Used on Type No(s). 049, 0172, 0173, 0199, 0220. 163 ★◆◆272948 Gasket–Air Cleaner (Flat Panel Air Cleaner) Used on Type No(s). 038, 0115, 0174, 0177. Used on Type No(s). 0130, 0146, 0172, 0173, 0199, 0220. 163A ★◆◆693458 Gasket–Air Cleaner (High Mount Air Cleaner) Used on Type No(s). 0130, 0146, 0172, 0173, 0199, 0220. 163A ★◆◆693458 Gasket–Air Cleaner (High Mount Air Cleaner (High Mou			. ,				1	693578	Gear-Governor
(Standard) Used on Type No(s). 0038, 0115, 0174, 0177. 118				•	((220	691724	Washer
Used on Type No(s). 0038, 0115, 0174, 0177. 118				}		,, ,			(Governor Gear)
0038, 0115, 0174, 0177. 118							}	694253	Bracket-Control
118							222C		
118				163	·*•272948		227	692573	Lever-Governor
(High Altitude)	118	497466	Jet-Main						Control
Note 694975 Jet-Main (High Altitude) Used on Type No(s). 0038, 0115, 0174, 0177. Used on Type No(s). 0130, 0146, 0172, 0173, 0199, 0220. 122 ●693749 Spacer-Carburetor Osed on Type No(s). 163A ★◆●693458 Gasket-Air Cleaner (High Mount Air Cleaner) Note 0231 Cleaner (High Mount Air Cle			(High Altitude)		7 🗸	'			
(High Altitude)				_ (<i>))</i>	Note			
(High Altitude) Used on Type No(s). 0038, 0115, 0174, 0177. Used on Type No(s). 0130, 0146, 0172, 0173, 0199, 0220. 122 ●693749 Spacer—Carburetor Note 695286 Spacer— Carburetor Used on Type No(s). 0130, 0146, 0172, 0173, 0199, 0220. 163A ★◆◆693458 Gasket—Air Cleaner (High Mount Air Cleaner) Cleaner (High Mount Air Cleaner) Spacer—Carburetor Used on Type No(s). 0231 Cleaner (High Mount Air Cleaner (High Mount Air			694975 Jet-Main			696024 Gasket-Air			
0038, 0115, 0174, 0177. Cleaner) 0177. Used on Type No(s). 0130, 0146, 0172, 0173, 0199, 0220. 122 •693749 Spacer—Carburetor Note 695286 Spacer—Carburetor Used on Type No(s). 0231 Cleaner 0130, 0146, 0172, 0173, 0199, 0220. 163A **•693458 Gasket—Air Cleaner (High Mount Air Cleaner) Note 393979 Gasket—Air Cleaner (High Mount Air			(High Altitude)		>				
0177. Used on Type No(s). 0130, 0146, 0172, 0173, 0199, 0220. 122 ●693749 Spacer—Carburetor Note 695286 Spacer— Carburetor Used on Type No(s). 0130, 0146, 0172, 0173, 0199, 0220. 163A ★◆・693458 Gasket—Air Cleaner (High Mount Air Cleaner) Note 393979 Gasket—Air Cleaner (High Mount Air				1 /		(Flat Panel Air			
121 695157 Kit—Carburetor Overhaul 122 •693749 Spacer—Carburetor Note 695286 Spacer— Carburetor Used on Type No(s). 0130, 0146, 0172, 0173, 0199, 0220. 163A **•693458 Gasket—Air Cleaner (High Mount Air Cleaner) Note 393979 Gasket—Air Cleaner (High Mount Air Cleaner (High Mount Air									
Overhaul 122 •693749 Spacer—Carburetor Note 695286 Spacer— Carburetor Used on Type No(s). 0231 Output 163A **•693458 Gasket—Air Cleaner (High Mount Air Cleaner) 393979 Gasket—Air Cleaner (High Mount Air			(🗸 /	())		Used on Type No(s).			
122 ●693749 Spacer—Carburetor—— Note ————————————————————————————————————	121		^			0130, 0146, 0172,			:
Note 695286 Spacer Carburetor Used on Type No(s). 0231 Cleaner Cleaner									
Cleaner) Carburetor Used on Type No(s). 0231 Cleaner Gleaner Note 393979 Gasket-Air Cleaner (High Mount Air	122	● 693749		163A -					
Carburetor Used on Type No(s). 0231 Cleaner (High Mount Air						, <u> </u>			
Used on Type No(s). 393979 Gasket-Air Cleaner (High Mount Air						' I			
0231 Cleaner (High Mount Air									,
(High Mount Air						1			
			0231			· · · · · · · · · · · · · · · · · · ·			
Cleaner)									
			~ <u>~</u>			Uleaner)			
									ļ
									İ

Included in Engine Gasket Set-Ref. No.358.
 Included in Carburetor Overhaul Kit-Ref. No. 121.

Included in Carburetor Gasket Set-Ref. No. 977.
 Ø Included in Valve Gasket Set-Ref. No 1095.

REF.	PART		REF.	PART		REF.	PART	
NO.	NO.	DESCRIPTION	NO.	NO.	DESCRIPTION	NO.	NO.	DESCRIPTION
238		Cap-Valve	356A	692390	Wire-Stop	357	691483	Key-Drive Pulley
240A		Filter-Fuel			(1 Wire, 17" Long)	358	695155	Gasket Set-Engine
265		Clamp—Casing			(Snap Connect	363	19069	Flywheel Puller
267	692577				Insulated Female	365	692568	Screw
		(Casing Clamp)			Blade Terminal, And	[(Carburetor)
268	691072	Casing-Control Wire		22222	Bare Wire)	383	19374	Wrench-Sparkplug
		(Cut to Required	356B	692602	Wire-Stop	415	693463	Plug
450		Length)	:		(1 Wire, 14" Long)			(Crankcase Cover/
269	691589	Wire-Control			(Snap Connect Insulated Female	1		Sump)
		(Cut to Required	İ		Blade Terminal.	425	692583	
270	604007	Length)	İ		Insulated Push-On	ŀ	_(//	Air Cleaner Cover)
210	691027				Female Blade	427	694255	
271A	604356	(Control Wire Casing) Lever–Control			Terminal)		()	(Control Bracket)
		Washer-Sealing	356C	695630	Wire-Stop	441	()	Bracket-Oil Fill
281		Panel–Control			(1 Wire, 6–1/2"	445	491588	Filter-Air Cleaner
286		Module-Oil Sensor			Long)(Push-On			Cartridge
300	694429		ĺ		Female Blade	445A	690610	Filter-Air Cleaner
300	034423	(Super Lo Tone)			Terminal, And Ring			Cartridge
300A	693593				Terminal)	449	691693	
		(Lo Tone)	356D	693651		<u> </u>		(Oil Fill Bracket)
304A	693621	Housing-Blower			(2 Wires, 14" And 10"	455		Cup-Flywheel
		(Rewind In 1:30			Long)(Snap Connect	456		Plate-Pawl Friction
		Position)			Insulated Female	459		Pawl-Rachet
		Note			Blade Terminal,	467		Knob-Air Cleaner
		696066 Housing-			Insulated Push-On	474		Alternator
		Blower			Female Blade	504		Washer Set-Friction
		(Rewind In 10:30	}		Terminal, And Snap	505	691251	
		Position)	ļ		Connect Insulated			(Governor Control
304B	694378	Housing-Blower		l	Female Blade Terminal)		400000	Lever)
		(Electric Start)	356E	694372		510		Drive-Starter
306	693610	Shield-Cylinder] 330L	054312	(1 Wire, 13–5/8"	513		Clutch-Drive
307	690345	Screw	l	((Long)(Snap Connect	522		Plug-Dipstick/Fill
		(Cylinder Shield)			Insulated Female	523		Dipstick
309	694504	Motor-Starter	i		Blade Terminal, And	527		Clamp-Tube
310	690323			4/ /	Snap Connect	544		Armature-Starter
		(Starter Motor)		\wedge	Insulated Pin Terminal)	552	092346	Bushing-Governor
311		Brush Set	356F	695283	Wire-Stop	eco	004440	Crank
317		Cover-Starter))	(2 Wires, 11-29/64"	562	691112	
332	690662			ン	And 9-1/2"			(Governor Control
200		(Flywheel)			Long)(Snap Connect	£70	602206	Lever)
333		Armature-Magneto			Insulated Female	578 502		Wire Assembly
334	691061	/_1			Blade Terminal, Snap	592	690800	
227		(Magneto Armature)	[5]		Connect Insulated Pin	£07	604606	(Rewind Starter)
337	491055	Plug-Spark			Terminal, And Bare	597	691696	
		Note O			Wire End)	Eno	770624	(Pawl Friction Plate)
347	602522	691043 Plug-Spark	356G	695814	Wire-Stop	598 601		Shim-Endplay
347		Switch-Rocker			(2 Wires, 15–3/4" And	608		Clamp-Hose Starter-Rewind
		(With Light)			10" Long)(Snap	000	033394	Statter-Kewing
		692599 Switch-Rocker			Connect Insulated			
		(Without Light)			Female Blade			
		(ANUIOUL EIGHT)			Terminal, Snap			
					Connect Insulated Pin Socket, And Bare Wire			
					End)			
					End)			

Included in Engine Gasket Set-Ref. No.358.
 Included in Carburetor Overhaul Kit-Ref. No. 121.

Included in Carburetor Gasket Set-Ref. No. 977.
 Included in Valve Gasket Set-Ref. No 1095.

								120400
REF.		DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
613	691665	Scrow	727	604467	Cover-Starter Drive	875	607020	Ross Air Clonner
0.0	051005	(Muffler)	729		Clip-Wire	0/3	097430	Base-Air Cleaner
613A	694460		736		Nut-Clip			(High Mount Air
UISA	034400		741		Gear-Timing			Cleaner)
		(Muffler)	['4'	093001	Gear-Timing	883	692237	Gasket–Exhaust
	*****	(Shoulder Screw)	740	coores	6			(Adapter to Muffler)
613B	691108	- *	742	092504	Retainer–E Ring	883A	691893	Gasket-Exhaust
		(Muffler)			(Idler Gear)			(Adapter to Cylinder)
615	692576	Retainer-Governor	746		Gear-Idler	886	696268	Gasket Kit-Cylinder
		Shaft	773	694258	Retainer	j		Head/Plate
616		Crank-Governor			(Control Bracket)	914	692198	Screw
619	691108	Screw	783		Gear-Pinion		9(/	(Rocker Cover)
1		(Cylinder Head Plate)	797	691029		1		(7/16" Long)
621		Switch-Stop			(Brush Retainer)	914A	692557	Screw
632	693408	Spring/Link-	799	693609				(Rocker Cover)
		Mechanical Governor	ļ		(Oil Sensor)	(((3/8" Long)
633	●◆693867	Seal-Choke/Throttle	801		Cap-Drive	957	694261	
		Shaft	802		Cap-End	958>		Valve-Fuel Shut Off
633A	•• 691321	Seal-Choke/Throttle	803	693757	Housing-Starter	961	693598	
		Shaft	819	691685		\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\	000000	(Air Cleaner Bracket)
635	692076	Boot-Sparkplug			(Muffler Bracket)	967	402527	Filter-Pre Cleaner
635A		Boot-Sparkplug	823	691665	Screw	301	453337	
663	694593				(Muffler Adapter)	P		(Flat Panel Air
003	054555		824	696017	Gasket-Heat shield	0071	4=00=0	Cleaner)
660	602604	(Control Panel)	830	694544	Stud	967A	273356	Filter-Pre Cleaner
668	693604		i		(Rocker Arm)			(High Mount Air
		(Oil Sensor)	832	693583	Guard-Muffler			Cleaner)
668A	694257	•	832A		Guard-Muffler	968	692584	Cover–Air Cleaner
		(Control Bracket)	832B		Guard-Muffler			(Flat Panel Air
675	691261		836	690661				Cleaner)
		(Brush Retainer)			(Muffler Guard)	968A	693460	Cover-Air Cleaner
676	393757	Deflector-Muffler	836A	693624	Screw			(High Mount Air
İ		(Side Out)			(Muffler Guard)			Cleaner)
676A	696029	Deflector-Muffler	836B	691665		971	690370	Screw
		(Side Out)		77	(Muffler Guard)			(Air Cleaner Base
676B	395700	Deflector-Muffler	836C	691003	Screw			to Carburetor)
		(Direct Out)	""	30,000	(Muffler Guard)			(Flat Panel)
677	690661	Screw	836D	696519	Screw	971A	690349	
		(Muffler Deflector)	0302	000013	(Muffler Guard)			(Air Cleaner Base
689	691855	Spring-Friction	842	691031				to Carburetor)
		(Rewind Starter)	77(031031	(Dipstick Tube)			(High Mount)
692	690572	Spring-Detent	847	603617	Dipstick/Tube	971B	601602	Screw
		(Carburetor)	847	093017		9715		
697	690372		851	V03000	Assembly Terminal Sparkplus			Tank-Fuel
501		(Drive Cap)			Terminal-Sparkplug	975		Bowl-Float
717		Bracket–Air Cleaner	863		Bracket-Muffler	977		Gasket Set-Carbureto
718			864		Adapter-Muffler	993 ★⅓	0694088	Gasket-Cylinder Head
710	090939	Pin-Locating	808 **	0692044	Seal-Valve			Plate

^{*} Included in Engine Gasket Set-Ref. No.358.
• Included in Carburetor Overhaul Kit-Ref. No. 121.

Included in Carburetor Gasket Set–Ref. No. 977.

 Included in Valve Gasket Set–Ref. No 1095.

120400							
REF. PART NO. NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
NO. NO. 1005 692592 1019 694852 1022 *Ø691890 1023 499924 1026 693517 1029 691230 1034 691343	DESCRIPTION Fan-Flywheel Kil-Label Gasket-Rocker Cover Cover-Rocker Arm Rod-Push Arm-Rocker Guide-Push Rod Label-Emission	1051 1051A 1052 1054 1058 1070	NO. 93555 691265 693805 280275	Ring-Retaining (Idler Gear) Ring-Retaining (Starter Drive) Sensor-Oil Tie-Cable Owner's Manual (Emission Engines)	1090 1095 1119 1210	NO. 691293 695289 691183 498144	Retainer-Brush Gasket Set-Valve

Included in Engine Gasket Set-Ref. No.358.
 Included in Carburetor Overhaul Kit-Ref. No. 121.

Included in Carburetor Gasket Set-Ref. No. 977.
 Ø Included in Valve Gasket Set-Ref. No 1095.

Caractéristiques câbles M. Av. et Ar. YB50-55

LONGUEUR\$

MACHINE	REFERENCE	HORS TOUT	CABLE	GAINE						
VD FO	Av. FP400420	111	106	82,5						
YB50	Ar. FP400420	111	106	82,5						
YB50IN										
2000	Av. FP400420	111	106	82,5						
2000	Ar. FP201280	130	124	83						
2002	Av. FP402970	120	115	83						
2002	Ar. FP402960	130	125	82,5						
YB50HD										
2000	Av. FP402240	105	100	82						
2000	Ar. FP402250	146	141	131						
2002	Av. FP403960	116	111	83						
2002	Ar. FP402250	146	141	131						
YB35	Av. FP202590	116	111	83						
375 111	Av. FP202590	116	111	83						
YB55IN	Ar FP202600	121,5	116	83						
	Av. FP202590	116	111	83						
YB55HD	Ar. FP405640	118,2	113	83						
YB70	Av. FP202590	116	111	83						



Yvan Béal - 21, av. de l'Agriculture - B.P 16 Z.I. du Brézet - 63014 Clermont-Ferrand Cedex 2 Tél: 04 73 91 93 51 - Télécopie : 04 73 90 23 11 www.yvanbeal.fr - E-mail : info@yvanbeal.fr R.C.S. B 304 973 886 - S.A.S. au capital de 612 000 €