




REPAIR PART'S MANUAL

MODEL NO. MB5B

5 HP 24 Inch

Tiller

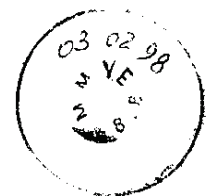


160158 11.21.97 TR
PRINTED IN U.S.A.

REPAIR PARTS

TILLER - - MODEL NUMBER MB5B


HANDLE ASSEMBLY

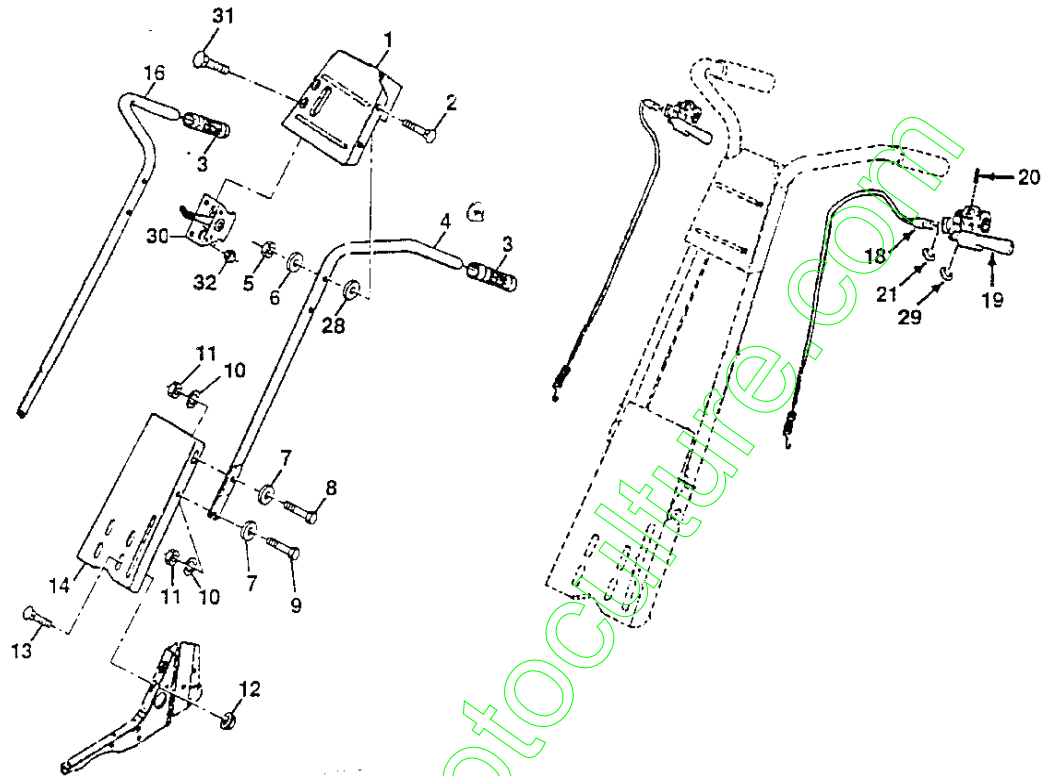

KEY NO.	PART NO.	DESCRIPTION
1	127046X417	Bracket, Handle
2	72140512	Bolt, Carriage 5/16-18 UNC x 1-1/2
3	9266R R -	Grip, Handle RD 624 A 78
4	156440	Handle, L.H.
5	73680500	Locknut, Crown 5/16-18
6	19111116	Washer 11/32 x 11/16 x 16 Ga.
7	19121414	Washer 3/8 x 7/8 x 14 Ga.
8	74760516 R -	Bolt, Hex Hd 5/16-18 x 1 532073199
9	74760512	Bolt, Hex Hd 5/16-18 x 3/4
10	10040500	Washer, Lock 5/16
11	73220500	Nut, Hex 5/16-18
12	98000129	Nut, Flanged 5/16-18
13	72140506	Bolt, Carriage 5/16-18 x 3/4 Gr. 5

KEY NO.	PART NO.	DESCRIPTION
14	2626J417	Panel, Handle
16	159237	Handle, R.H. P DROITE
18	155199	Cable, Control, Tine
19	151229	Control, Tine
20	154805	Pin, Pivot
21	12000027	Ring, Klip
28	19131312	Washer 13/32 x 13/16 x 12 Ga.
29	12000059	Retaining, Ring
30	157346	Throttle Control
31	71191008	Screw Phd. 10-24
32	73731000	Nut Keps #10-24

NOTE: All component dimensions are given in U.S. inches
1 inch = 25.4 mm

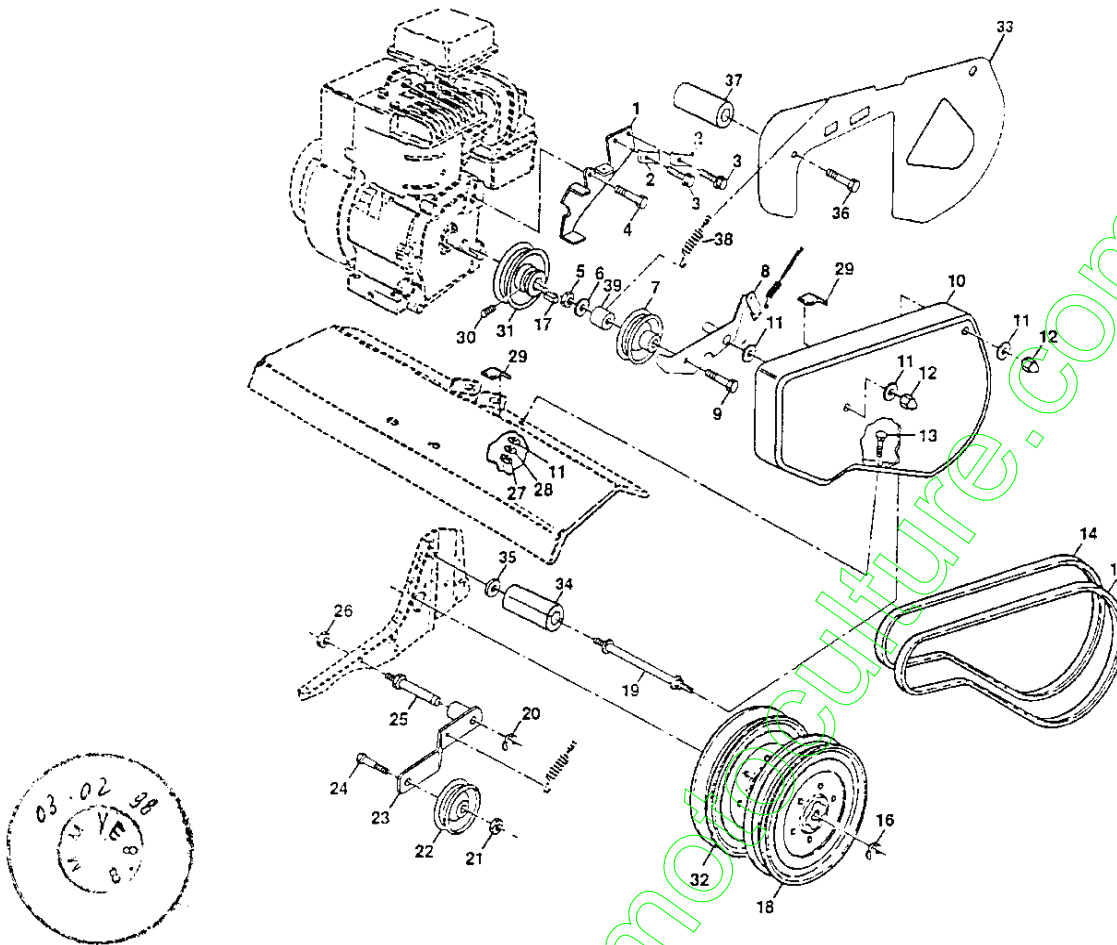REPAIR PARTS**TILLER - - MODEL NUMBER MB5B****BELT GUARD AND PULLEY ASSEMBLY**

KEY NO.	PART NO.	DESCRIPTION
1	159268	Assembly, Bracket, Belt Guard
2	9484R	Clip, Cable
3	86777 *	Screw, Hex, Washer Hd., Slotted, Thd. Cutting #10-24 x 1/2 Type D
4	74610812	Bolt, Hex 1/2-20 x 3/4
5	73660600	Nut, Lock 3/8-16
6	19131316	Washer 13/32 x 13/16 x 16 Ga.
7	2009J	Pulley, Idler, Reverse
8	159238	Assembly, Arm, Reverse Idler
9	74760628	Bolt, Hex 3/8-16 x 1-3/4
10	156705X417	Guard, Belt
11	19091016	Washer 9/32 x 5/8 x 16 Ga.
12	104213X	Nut, Cap 1/4-20
13	72140405	Bolt, Carriage 1/4-20 x 5/8
14	133035	V-Belt (Forward Motion)
15	2614J *	V-Belt (Reverse) TH3H440
16	12000028	Ring, Retainer
17	2649M	Key, Square
18	151236	Sheave, Transmission, Flat Rev.
19	110550X	Bolt, Belt Guard
20	12000036	Ring, Klip


KEY NO.	PART NO.	DESCRIPTION
21	73350600	Nut, Hex, Jam 3/8-16
22	161806	Pulley, Idler
23	162290	Arm, Idler
24	74760620	Bolt, Hex 3/8-16 x 1-1/4
25	106968X	Shaft, Idler Arm
26	73350500	Nut, Hex, Jam 5/16-18
27	73220400	Nut, Fin Hex 1/4-20
28	10040400	Washer Lock Hvy Helical 1/4
29	109227X	Pad, Idler
30	23200404	Screw, Set, Socket, Headless C.P. 1/4-20 x 1/4
31	101189L	Sheave, Engine
32	151223	Sheave, Transmission "D"
33	159234	Shield, Belt Guard
34	156141	Spacer Split .635 x .823 x 2.2.230
35	19091416	Washer 9/32 x 7/8 x 16 Ga.
36	74330516	Bolt 5/16 x 24 x 1
37	156118	Spacer Split .327 x .42 x .500
38	128085	Spring Ext.
39	138909	Spacer

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

TILLER - - MODEL NUMBER MB5B

WHEEL AND DEPTH STAKE ASSEMBLY

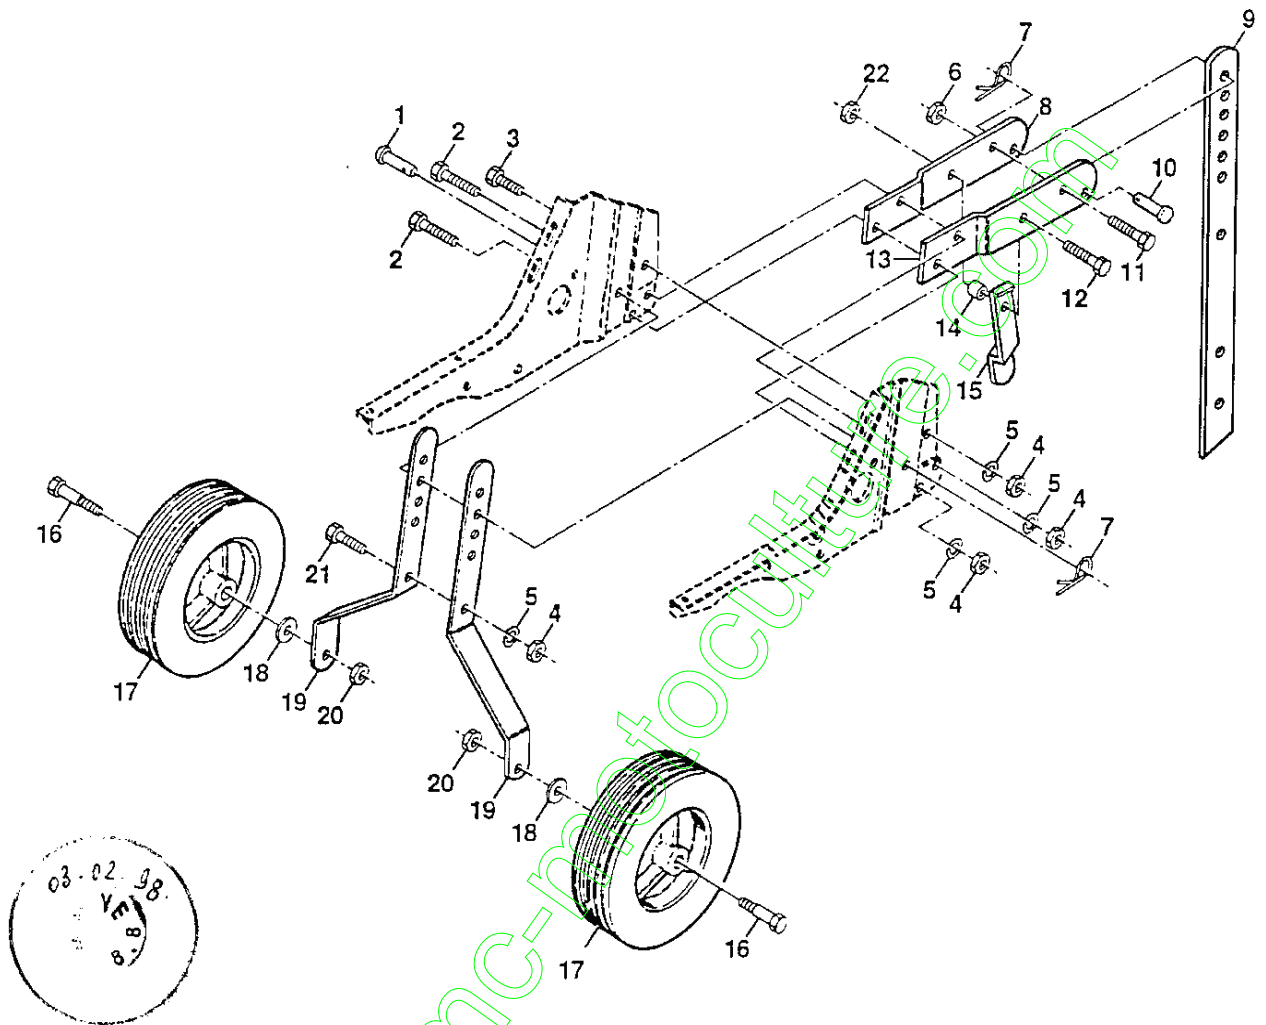

KEY NO.	PART NO.	DESCRIPTION
1	9194R	Pin, Clevis
2	74760520	Bolt, Hex 5/16-18 x 1-1/4
3	74760512	Bolt, Hex 5/16-18 x 3/4
4	73220500	Nut, Hex 5/16-18
5	10040500	Washer, Lock 5/16
6	73800600	Locknut, w/washer 3/8-16
7	4921H	Clip, Hairpin
8	1952J 500	Support, Depth Stake, R.H.
9	122233X *	Stake, Depth Ro 2582 J
10	326J *	Pin, Clevis 532 004929
11	74780628	Bolt, Hex, Fin 3/8-16 x 1-3/4
12	74760524	Bolt, Hex 5/16-18 x 1-1/2 Gr. 2
13	1951J 500	Support, Depth Stake, L.H.


KEY NO.	PART NO.	DESCRIPTION
14	120958X	Washer
15	5388J	Spring, Stake
16	121117X	Bolt, Shoulder
17	9188R *	Wheel - Ro 107649X
18	19131311	Washer 13/32 x 13/16 x 11 Ga.
19	9190R 500	Bracket, Wheel
20	73680600 *	Locknut, Crown 3/8-16 736 9060
21	74760516	Bolt, Hex 5/16-18 x 1 532 00473
22	73800500	Locknut, w/insert 5/16-18

NOTE: All component dimensions given in U.S. inches.
1 inch = 25.4 mm

REPAIR PARTS

TILLER - - MODEL NUMBER MB5B

TINE ASSEMBLY

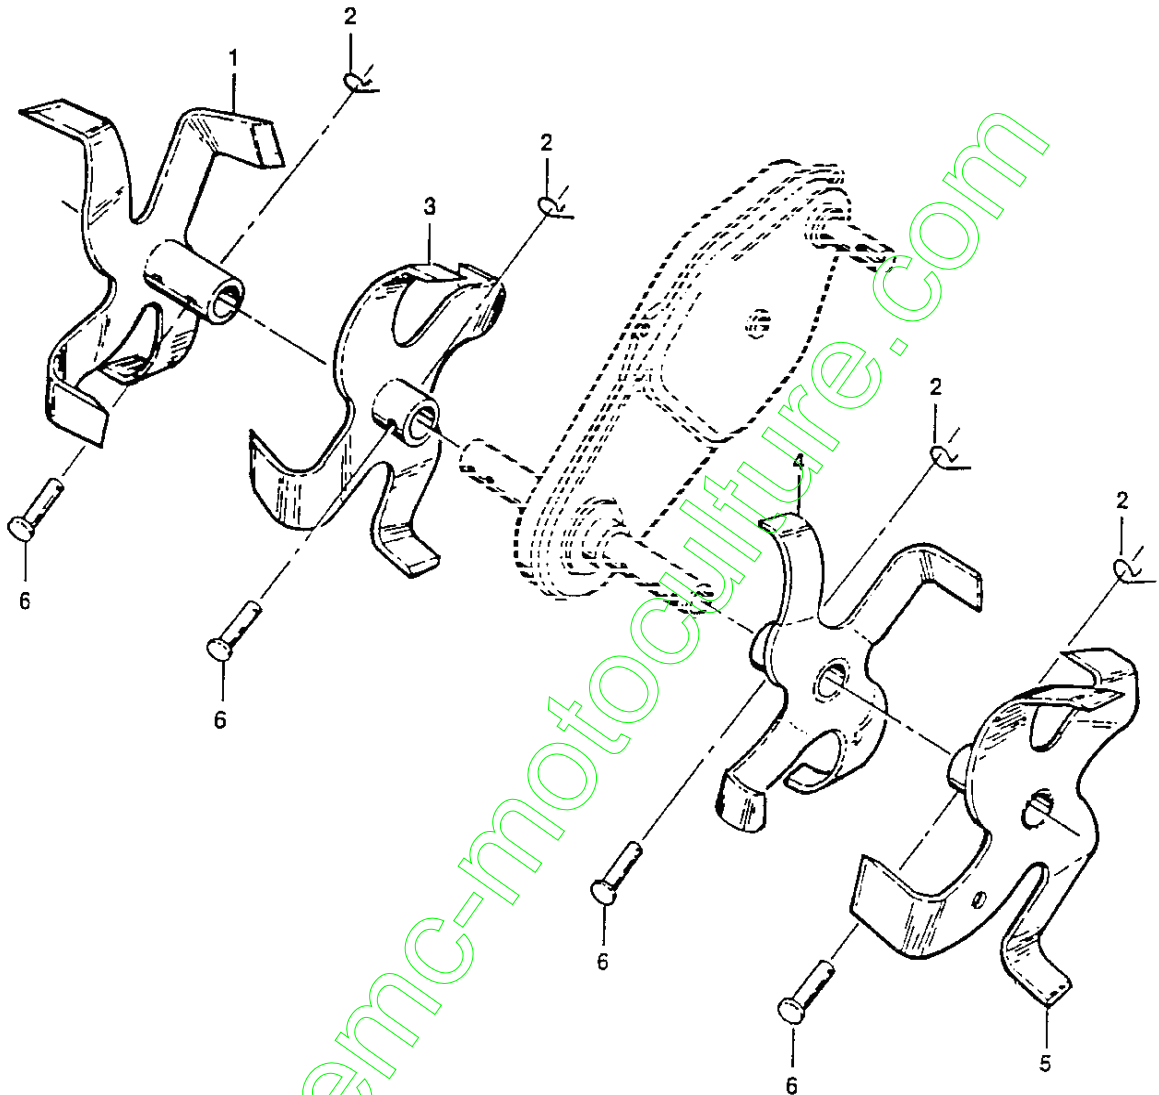

KEY NO.	PART NO.	DESCRIPTION
1	156926	Tine, Outer, R.H. DRT
2	3146R	Clip, Hairpin
3	156924	Tine, Inner, R.H. DRT





KEY NO.	PART NO.	DESCRIPTION
4	156923	Tine, Inner, L.H. GENE
5	156925	Tine, Outer, L.H. GENE
6	4929H	Pin, Clevis

REPAIR PARTS

TILLER - - MODEL NUMBER MB5A


DECALS

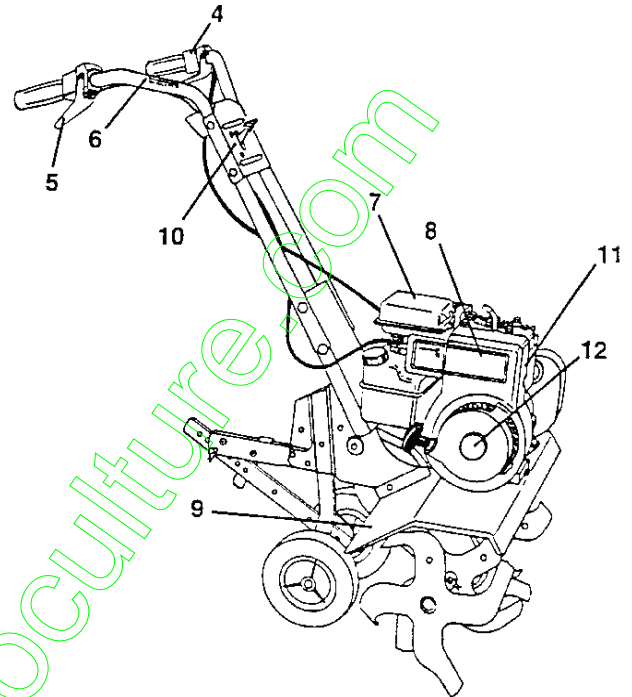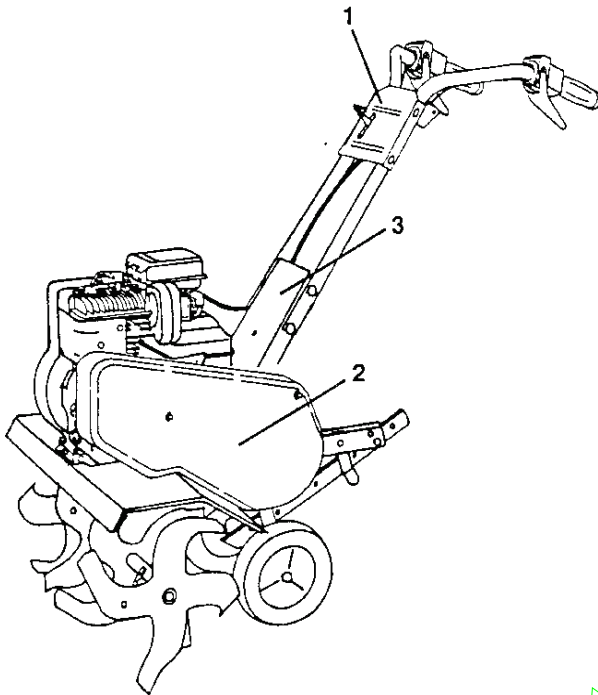KEY
NO.PART
NO.

DESCRIPTION



1	158805	Decal, Logo
2	163369	Decal, Logo
3	158807	Decal, HP Reverse
4	158700	Decal, Control Forward
5	158701	Decal, Control Reverse
6	159877	Decal, Hand Placement
7	110612X	Decal, Caution
8	271948	Decal, Briggs & Stratton
9	156129	Decal, Warning, Rotating Tines
10	157607	Decal, Stop/Idle/Fast
11	145437	Decal, Europe Stand CE
12	273721	Decal, 5 HP
--	160157	Manual, Operator's (Euro)
--	160158	Manual, Repair Parts

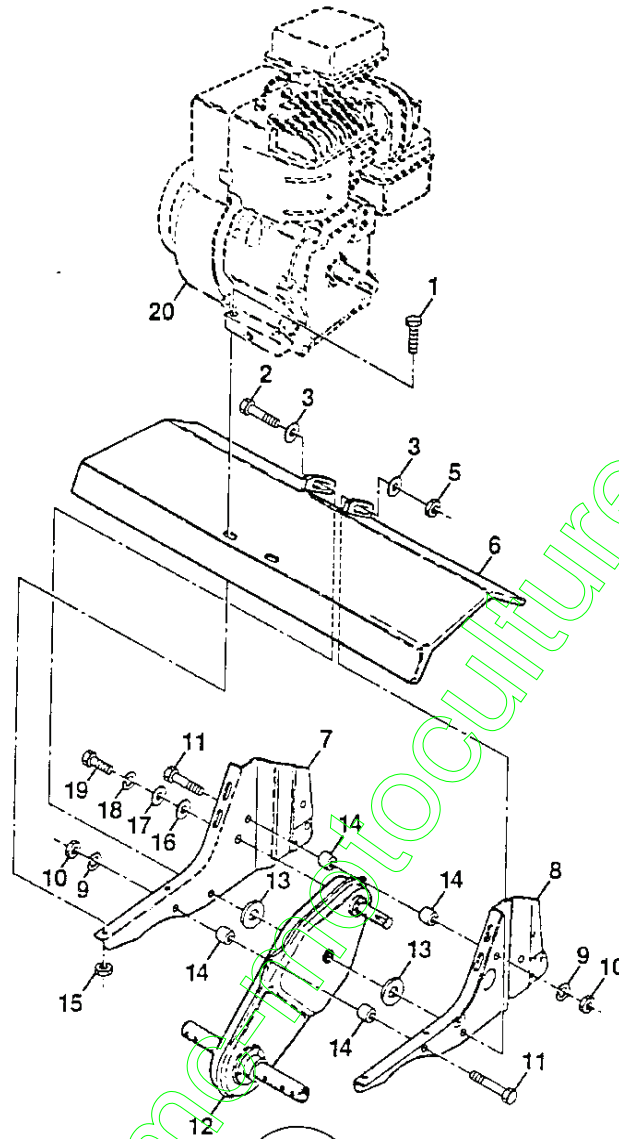REPAIR PARTS**TILLER - - MODEL NUMBER MB5B****TRANSMISSION**

KEY NO.	PART NO.	DESCRIPTION
1	874760524	Bolt, Hex 5/16-18 x 1-1/2 Gr. 2
2	874780652	Bolt, Hex, Fin 3/8-16 x 3-1/4
3	19131311	Washer 13/32 x 13/16 x 11
5	73800600	Locknut, Hex, w/washer 3/8-16
6	9057R417	Shield, Tire
7	1949J 500	Bracket, Engine, R.H.
8	1948J	Bracket, Engine, L.H.
9	10040500	Washer, Lock 5/16
10	73220500	Nut, Hex 5/16-18
11	74760544	Bolt, Hex 5/16-18 x 2-3/4
12	151222	Transmission

KEY NO.	PART NO.	DESCRIPTION
13	19171616	Washer 17/32 x 1 x 16 Ga.
14	9173R	Spacer, Split
15	73510500	Nut, Keps 5/16
16	19091412	Washer 9/32 x 7/8 x 12 Ga.
17	19092016	Washer 9/32 x 1-1/4 x 16 Ga.
18	10040400	Washer, Lock 1/4
19	74610412	Bolt, Hex 1/4-28 x 3/4 Gr. 5
20	-----	Engine, Briggs and Stratton, Model No. 137202

NOTE: All component dimensions given in U.S. inches.
1 inch = 25.4 mm